User Manual for User-friendly Firmware

Nfiniti High Power Wireless Router & Access Point

WZR-HP-G450H

www.buffalotech.com

35012040 ver.01

Contents

Chapter 1 - Product Overview 6

Features 6
AirNavigator CD Requirements 8
450 Mbps High Speed Mode 8
Package Contents 8
Hardware Overview 9
- Front Panel LEDs 9
- Back Panel 11
- Top 12
- Bottom 13
- Right Side 13

Chapter 2 - Placing Your AirStation 14

Vertical Placement 14
Horizontal Placement 15
Wall-Mounting 16

Chapter 3 - Installation 17

Automatic Setup 17
- Windows 7 / Vista / XP 17
- Mac OS X 17
- Other OS 17

Manual Setup 18
- Windows 21
- Macintosh 24

Chapter 4 - Configuration 26

Accessing the Web-based Configuration Interface 26

Configuration Interface Menus in Router Mode 28
Configuration Interface Menus in Bridge Mode..... 30
Setup..... 32
Internet/LAN (LAN Config) 34
Internet (Router Mode only)..... 34
PPPoE (Router Mode only)..... 35
DDNS (Router Mode only)..... 38
VPN server (Router Mode Only)..... 40
LAN..... 42
DHCP Lease (Router Mode only) 44
NAT (Router Mode only) 45
Route 46
Wireless Config..... 47
WPS..... 47
Basic 48
Advanced 51
WMM..... 52
MAC Filter..... 54
Multicast Control 55
Guest Port..... 56
AOSS..... 58
Security (Router Mode only) 60
Firewall (Router Mode only)..... 60
IP Filter (Router Mode only)..... 62
VPN Passthrough (Router Mode only)..... 63
LAN Config..... 64
Port Forwarding (Router Mode only)..... 64
DMZ (Router Mode only) 65
UPnP (Router Mode only)..... 66
QoS (Router Mode only)..... 67
Movie Engine (QoS) 69
NAS..... 71
Disk management..... 71

Shared Folder 73
User Management 75
Shared Service 76
Web Access 77
Media Server 79
BitTorrent 80
Admin Config 82
Name 82
Password 83
Time/Date 84
NTP 85
ECO 86
Network-USB 88
Access 89
Log 90
Save/Restore 91
Initialize/Restart 92
Update 93
Diagnostic 95
System Info 95
Logs 97
Packet Info 98
Client Monitor 99
Ping 100

Chapter 5 - Connect to a Wireless Network 101

Automatic Secure Setup (AOSS/WPS) 101
Windows 7/Vista (Client Manager V) 102
Windows XP (Client Manager 3) 103
Mac OS X (AOSS Assistant) 104
Other Devices (e.g. Game Console) 105
Manual Setup 105

Windows 7 (WLAN AutoConfig) 105
Windows Vista (WLAN AutoConfig) 106
Windows XP (Wireless Zero Configuration) 109
Mac OS X (AirPort) 110
Maximizing the Performance of Your Wireless Network 111
Setting the AirStation 111
Setting the Computer 112

Chapter 6 - Troubleshooting 114

Cannot connect to the Internet over wired connection. 114
Cannot access the web-based configuration Interface. 114
Cannot connect to the network wirelessly. 115
You forgot AirStation's SSID, Encryption Key, or Password. 115
The link speed is slower than 450 Mbps. 115
Other Tips 116

Chapter 7 - Default Configuration Settings 118

Chapter 8 - Network-USB Navigator 125

Initial Setup for Windows Users 125
Initial Setup for Mac Users 130
Opening the Network-USB User Manual 133
How to use Network-USB 134

Chapter 9 - Checking Wireless Signal Quality 135

Windows 7/Vista 135
Macintosh 136

Chapter 10 - TCP/IP Settings 138

Windows 7..... 138
Windows Vista..... 139
Windows XP..... 140
Mac OS X..... 141

Chapter 11 - Restoring the Default Configuration 142

Chapter 12 - Shared Folders and the USB Port 143

Chapter 1 - Product Overview

Installing Your AirStation

To install your AirStation, insert the software CD from your package into your computer and follow the directions on the screen. For more information about installation, turn to chapter 3 of this manual.

Professional or User-friendly?

This AirStation wireless router comes with two different firmware packages. You may use either the dd-wrt-based Professional firmware or the simple User-friendly firmware. By default, the Professional firmware is preinstalled for US/EU products, and the User-friendly firmware is preinstalled for Asia-Pacific products. Turn to page 21 for instructions on switching between the two firmware packages.

Note : Most of this manual documents the user-friendly version of the firmware. For more information on the dd-wrt-based professional firmware, consult the help files in its web-based configuration interface or the *WZR-HP-G450H User Manual for Professional Firmware*, available for download from Buffalo Technology.

Features

Supports IEEE802.11n and IEEE802.11b/g
With support for current Wireless-N, Wireless-G, and Wireless-B standards, the AirStation can transfer data to and from all standard 2.4 GHz wireless clients.

Dual speed mode
Dual speed mode makes wireless transmission faster by using 2 channels, allowing 450 Mbps data transmission.

Supports AOSS and WPS
Both AOSS (AirStation One-touch Secure System) and WPS (Wi-Fi Protected Setup) are supported. These automatic connection standards make connection with compatible wireless devices easier.

Security Features
The AirStation is equipped with the following security features:

- AOSS
- WPS
- WPA-PSK (AES)
- WPA2-PSK(AES)
- WPA/WPA2 mixed PSK
- WEP (64-bit and 128-bit)
- Privacy Separator
- MAC address access restriction
- Deny Any Connection/SSID stealth
- Password for web-based control interface
- Firewall with easy rules

Automatic Channel Selection
Monitors wireless interference and automatically assigns the clearest, best channel.

Roaming
You can use multiple AirStations to cover a large area. Wireless clients can automatically switch AirStations for the best signal.

Initialization
To restore settings back to the factory defaults, hold down the Reset button on the bottom of the unit.

Browser Based Administration
This unit can be easily configured from a web browser on your computer.

Auto Mode (Router/Bridge Automatic Recognition)
In Auto mode, the AirStation will detect whether or not your network has a router and automatically switch to the appropriate router or bridge mode. You can also manually switch between modes. (See page 11.)

MovieEngine
MovieEngine uses QoS to optimise your network for multimedia streaming. This can reduce jumps, distorted audio, and dropped frames while watching streamed video.

NAS (Network Attached Storage)
Attach a USB hard drive to the AirStation and share it on the network as a NAS. All connected clients can access it.

Gigabit Ethernet
This unit supports gigabit Ethernet, allowing transmission rates of up to a billion bits per second.

AirNavigator CD Requirements

The AirStation wireless router and access point works with most wired and wireless devices. However, the automatic installation program on the CD requires a connected Windows 7, Vista or XP computer to run. If you use the AirStation with a different operating system, you will have to configure your network settings manually from a browser window.

450 Mbps High Speed Mode

450 Mbps is the link speed when using Wireless-N mode. It represents actual wireless data speeds, including overhead. Because the overhead is not available for user data transfer, usable wireless throughput will be substantially slower.

Package Contents

The following items are included in your AirStation package. If any of the items are missing, please contact your vender.

- WZR-HP-G450H..... 1
- Detachable antennas..... 3
- AC adapter..... 1
- Stand for vertical/horizontal/wall-mounting..... 1
- Screws for wall-mounting..... 2
- LAN cable..... 1
- AirNavigator CD..... 1
- Quick Setup Guide..... 1

Hardware Overview

Front Panel LEDs

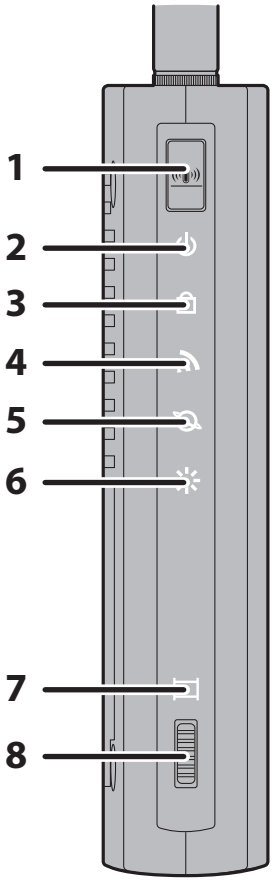

1 AOSS Button

To initiate AOSS, hold down this button until the Security LED flashes (about 1 second). Then, push or click the AOSS button on your wireless client device to complete the connection. Both devices must be powered on for this to work.

2 Power LED (Green)

On: The AC adapter is connected.
Off: The AC adapter is not connected.

3 Security LED (Amber)

Indicates security status.

Off: AOSS or Encryption is not set.
On: AOSS/WPS activated; accessed to exchange security keys.
Wireless security has been set.
2 blinks: AirStation is waiting for an AOSS or WPS security key.
Blinking: AOSS/WPS error; failed to exchange security keys.

Note: The Security LED is lit if an security key has been set.

4 Wireless LED (Green)

Indicates wireless LAN status.

On: Wireless LAN is transmitting.
Off: Wireless LAN is disabled.

5 Router LED (Green)

On: Router functionality is enabled.
Off: Router functionality is disabled.

6 Diag LED (Red) This indicates the status of this unit depending on the number of blinks per cycle.

Note: When the unit is first turned on or restarted, the Diag LED will blink for almost a minute during boot. This is normal.

Diag LED status	Meaning	Status
2 blinks *1	Flash ROM error	Cannot read or write to the flash memory.
3 blinks *1	Ethernet (wired) LAN error	Ethernet LAN controller is malfunctioning.
4 blinks *1	Wireless LAN error	Wireless LAN controller is malfunctioning.
5 blinks	IP address setting error	Because the network addresses of both the Internet port (WAN port) and the LAN port are the same, it is not possible to establish communication. Change the LAN side IP address of this unit.
Continuously blinking *2	Updating the firmware Saving settings Initializing settings	Updating the firmware. Saving the settings. Initializing the settings.

*1 Unplug the AC adapter from the wall socket, wait for a few seconds, and then plug it again. If the light still flashes, please contact technical support.

*2 Never unplug the AC adapter while the Diag LED is blinking continuously.

7 Movie Engine LED (Blue)

On: Movie Engine functionality is enabled.
Off: Movie Engine functionality is disabled.

8 Movie Engine Switch

Switches the movie engine function between enabled and disabled.
On: Movie Engine functionality is enabled.
Off: Movie Engine functionality is disabled.

Back Panel

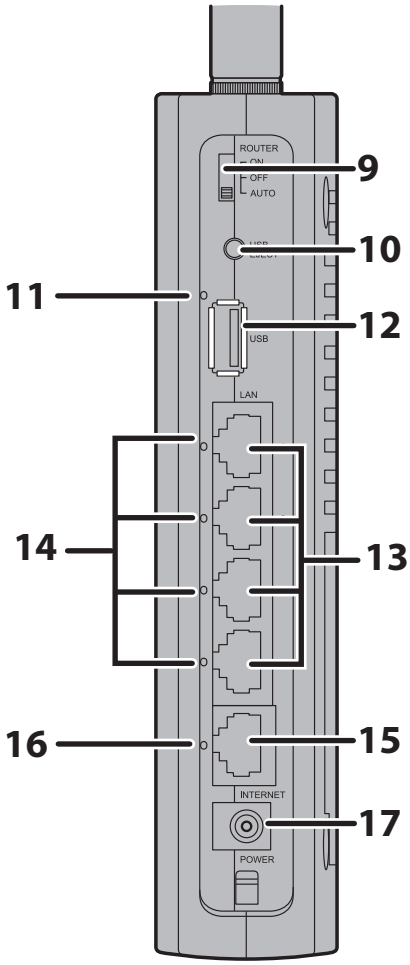

9 Router Switch

Switches router mode between enabled, disabled, and auto.

On: Router functionality is enabled (router mode).

Off: Router functionality is disabled (bridge/AP mode).

Auto: This switches between modes automatically based on whether or not another router is detected on the Internet port. The default setting for this switch is Auto.

10 USB Eject Button

To dismount a USB hard drive, hold down this button until the USB LED flashes (about 3 seconds). The USB drive can then be unplugged safely.

11 USB LED (Green)

On: The USB disk is connected.

Off: The USB drive can be removed or no USB drive is connected.

Flashing: Overcurrent detected.

Note: When this LED is blinking, the connected USB drive cannot be used. Remove the connected USB drive. If the LED continues to blink even after the USB drive is removed, restart the AirStation.
Do not remove the USB drive or turn off the AirStation while the USB LED is on.

12 USB Port Connect the USB drive.

13 LAN Port Connect your computer, hub, or other Ethernet devices to these ports. This switching hub supports 10 Mbps,100 Mbps, and 1000 Mbps connections.

14 LAN LED (Green)

On: An Ethernet device is connected.

Flashing: An Ethernet device is communicating.

15 Internet Port 10 Mbps, 100 Mbps, and 1000 Mbps connections are supported.
Note: In bridge/AP mode (router switch off), the Internet port becomes a regular LAN port, for a total of 5 usable LAN ports.

16 Internet LED (Green)

On:	The Internet port is connected.
Flashing:	The Internet port is transmitting data.

17 DC Connector Connect the included AC adapter here.

Top

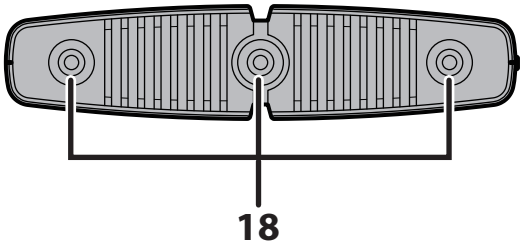

18 Antenna connector Screw on the antenna here.

Bottom

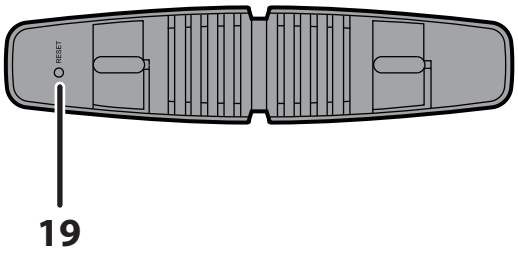

19 Reset Button To reset all settings, hold down this button until the Diag LED comes on (about 3 seconds). Power must be on.

Right Side

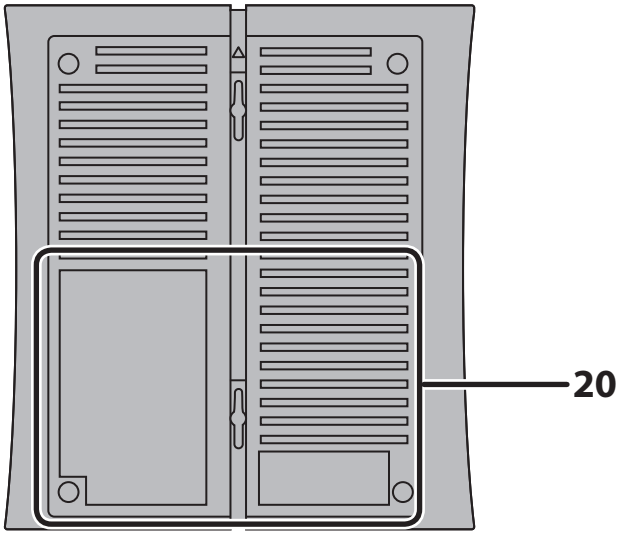

Note: The right side of the unit may become hot. Please be careful not to place anything next to it that could be damaged by heat.

20 Factory Default Settings This sticker shows the AirStation's SSID, default encryption key, and WPS PIN code. By default, encryption is disabled for AirStations sold in Asia Pacific.

Chapter 2 - Placing Your AirStation

Antenna Placement

The antenna is included in the package. Screw the antenna clockwise to install.

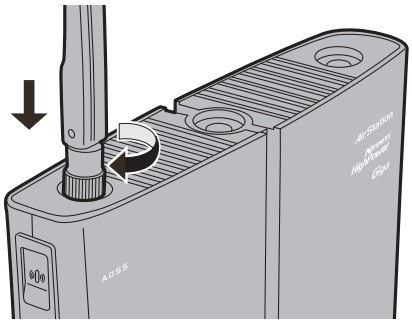

Vertical Placement

If the AirStation is to be placed vertically, attach the stand as shown.

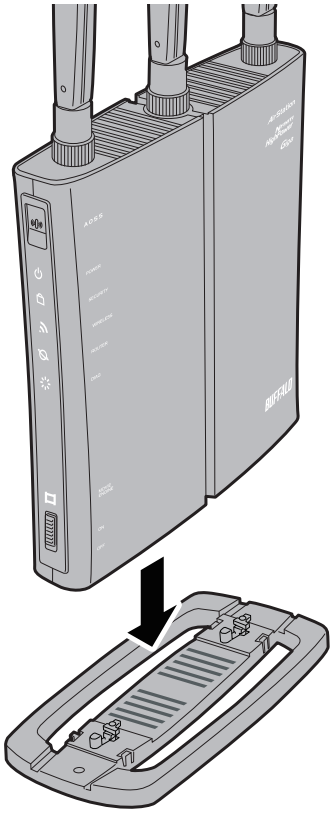

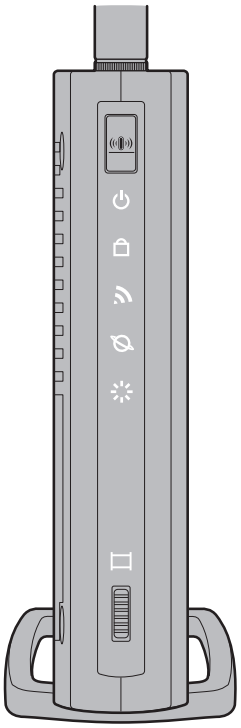

Horizontal Placement

When installing the AirStation horizontally, attach the stand for best heat dissipation.

1

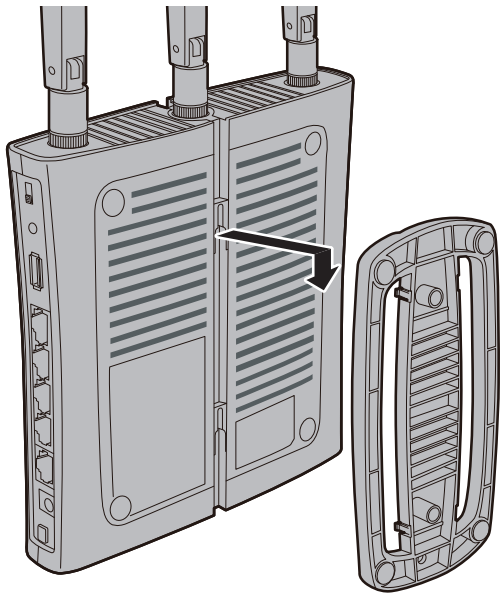

Attach the stand as shown in the figure.

2

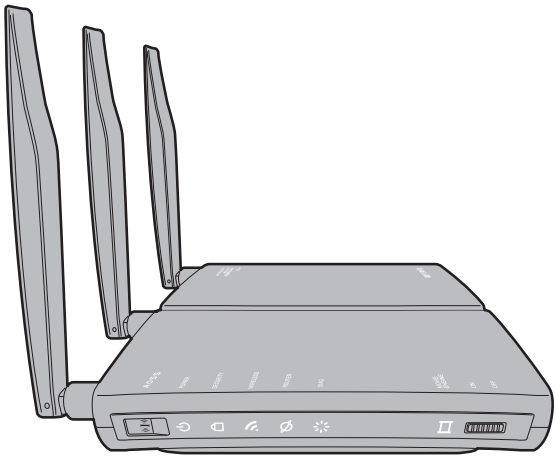

Install horizontally.

Wall-Mounting

1

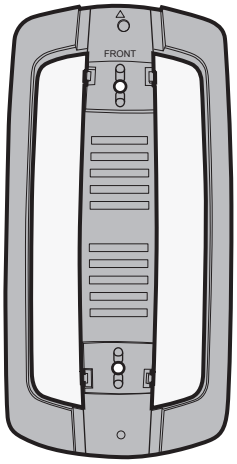

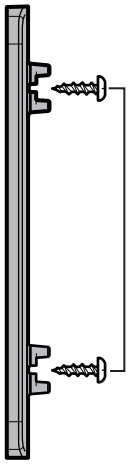

To wall-mount the AirStation, attach the stand to the wall with the two screws (included).

2

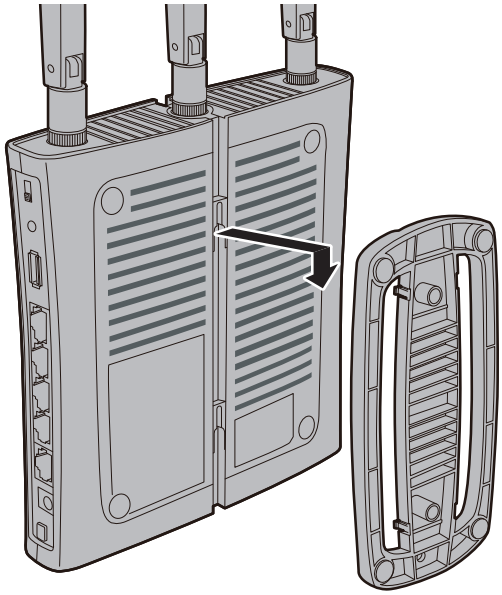

Snap the center of the AirStation to the stand as shown.

Chapter 3 - Installation

Automatic Setup

Windows 7 / Vista / XP

The AirNavigator CD can guide you through installing your AirStation. To launch the setup program please insert the CD into your Windows 7/Vista/XP PC and follow the instructions on the screen. If you deactivated auto-run for CD's please navigate to [CD drive]:\Win\ and launch ASSetWiz.exe.

Note:
- **To use a wireless client in Windows 7 or Vista, perform setup using the AirNavigator CD to automatically generate a profile for wirelessly connecting to the AirStation. After setup is complete, once the LAN cable is removed, you can connect from your wireless client to the AirStation.**
- **Before performing setup, enable your computer's wireless client.**

Mac OS X

For a Mac, open the Mac folder on the CD and launch the AirStation Configuration tool. Search and select the Buffalo AirStation you want to set up. You can either configure the IP or open the web interface for all settings. Please refer to "Manual Setup" in the next section.

Note: You can use the easy and simple setup via AOSS to connect the Mac wirelessly. Please press the AOSS button on the Buffalo router, start the AOSS assistant and follow the steps. The WLAN monitor in the same folder shows the wireless status regardless which method you use to connect.

Other OS

If your computer uses a different operating system, use manual setup instead. Please refer to the next section "Manual Setup".

Manual Setup

To configure your AirStation manually, follow the procedure below.

1 Verify that you can connect to the internet without the AirStation, then turn off your modem and computer.

2

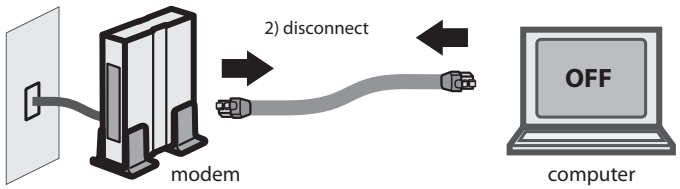

Unplug the LAN cable which connects your computer and modem.

3

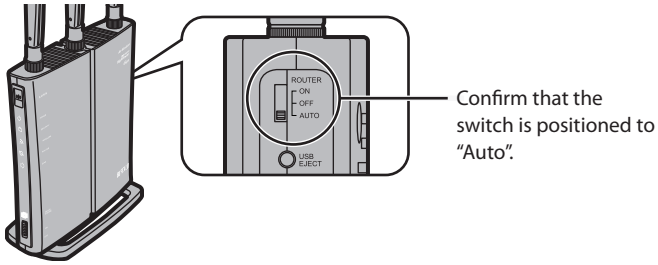

Make sure the mode switch on the back of the AirStation is in the "auto" position.

4 Plug one end of the LAN cable into your modem and the other end to the AirStation's Internet (WAN) port. Turn on the modem.

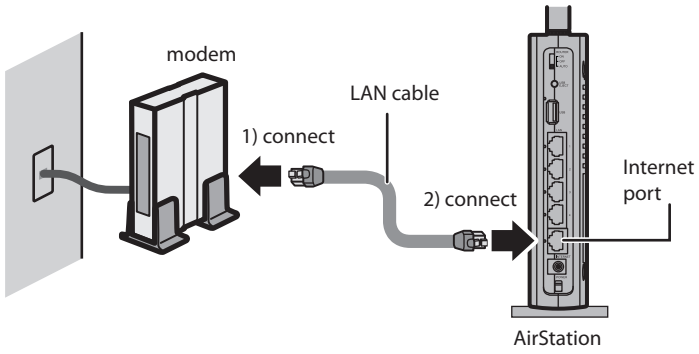

5 Connect your computer to one of the AirStation's LAN ports with the LAN cable.

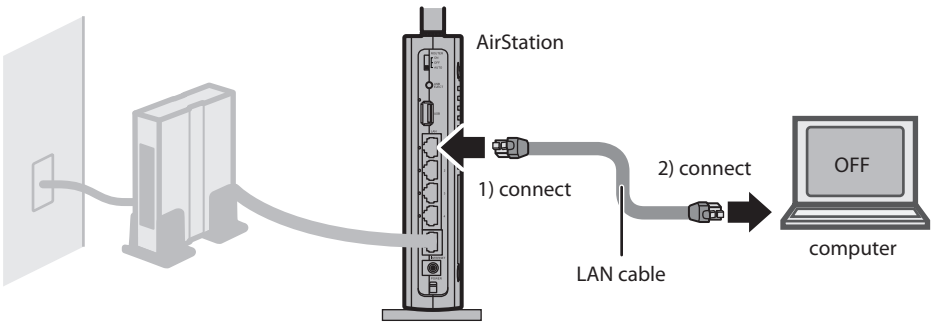

6 Turn on the AirStation, wait one minute, then turn on your computer.

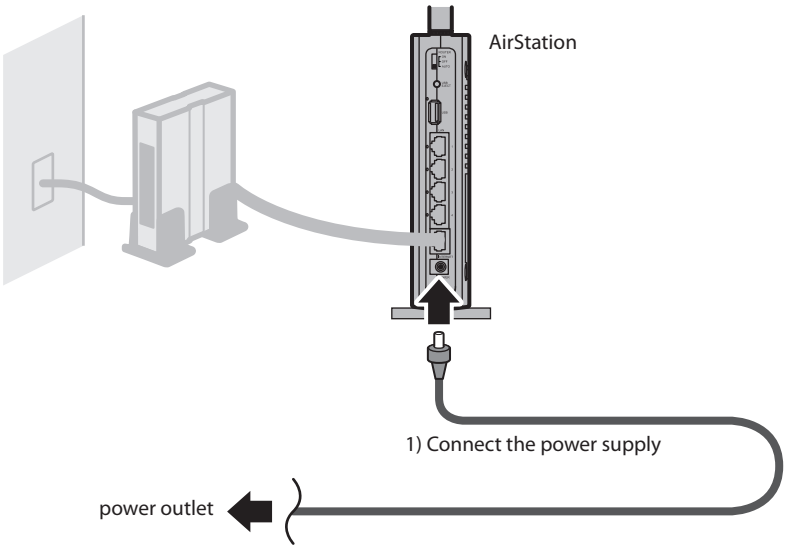

7 Once your computer has booted, the AirStation's LEDs should be lit as described below:

Power	Green light on.
Wireless	Green light on or blinking.
Router	Green light on or off depending on your network.
Diag	Off
LAN	Green light on or blinking.
Internet	Green light on or blinking.

For LED locations, refer to chapter 1.

8 Launch a web browser. If the home screen is displayed, setup is complete. If username and password fields are displayed, enter "root" for the username. Enter "admin" for the password if you're using the professional firmware (default), or leave the password field blank if you've switched to the user-friendly firmware. Click [OK]. Step through the wizard to complete setup.

You've completed initial setup of your AirStation. Refer to Chapter 4 for advanced settings.

Firmware Differences

You can choose between two different firmwares for your AirStation. By default, the professional firmware (dd-wrt) is preinstalled for US/EU products. If you prefer, you may install the user-friendly firmware instead. The two firmwares have slightly different features, as shown in the chart below.

Function	Professional firmware (dd-wrt)	User-friendly firmware
Router mode switch functionality	—	✔
Default administrator name	root	root (fixed)
Default administrator password	admin	none
AOSS	✔	✔
WPS	✔	✔
WDS	—	—

Changing Firmware

To change between the professional firmware (dd-wrt) and the user-friendly firmware, follow the steps below.

Windows

1 Insert the AirNavigator CD into your computer. The setup wizard will automatically launch.

Note: If the Setup Wizard does not launch, open the CD and double-click [ASSetWiz.exe] in the "Win" folder.

2

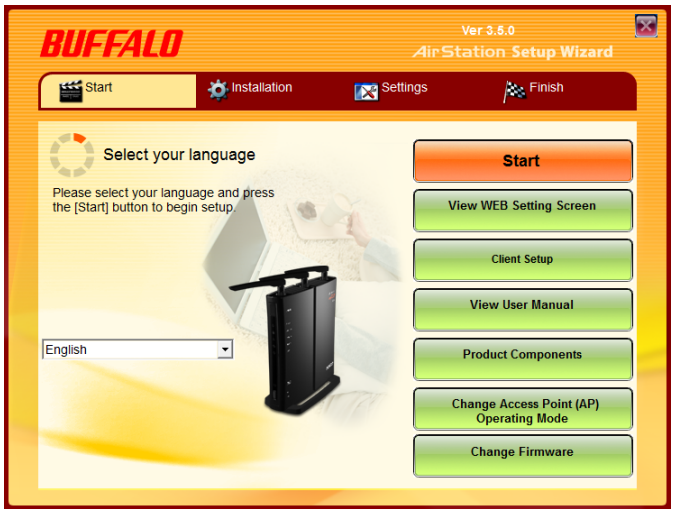

Click [Change Firmware].

3

The procedure for wiring will be displayed. Step through the wizard to connect your AirStation.

4

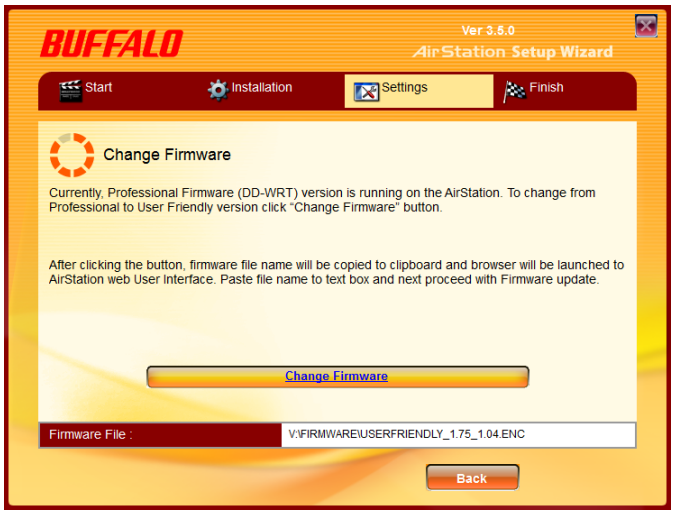
BUFFALO
Ver 3.5.0
AirStation Setup Wizard
Start
Installation
Settings
Finish
Change Firmware
Currently, Professional Firmware (DD-WRT) version is running on the AirStation. To change from Professional to User Friendly version click "Change Firmware" button.
After clicking the button, firmware file name will be copied to clipboard and browser will be launched to AirStation web User Interface. Paste file name to text box and next proceed with Firmware update.
Change Firmware
Firmware File :
V:\FIRMWARE\USERFRIENDLY_1.75_1.04.ENC
Back

When this screen is displayed, click [Change Firmware].

5

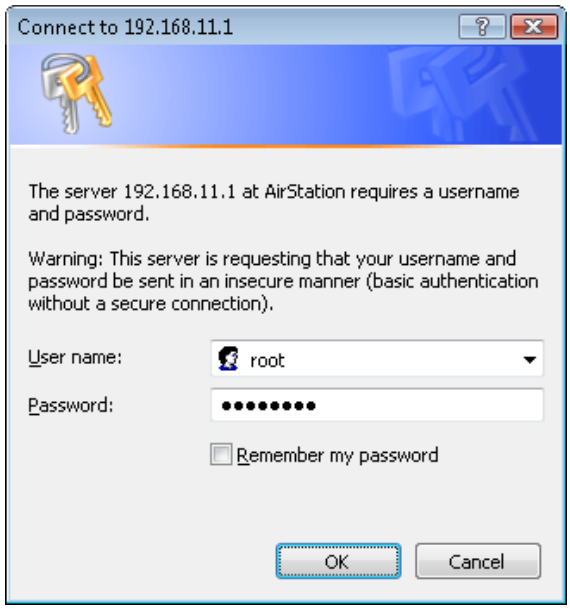
Connect to 192.168.11.1
The server 192.168.11.1 at AirStation requires a username and password.
Warning: This server is requesting that your username and password be sent in an insecure manner (basic authentication without a secure connection).
User name:
root
Password:
Remember my password
OK
Cancel

If requested, enter the AirStation's username and password.

Note: By default, the professional firmware doesn't have a username and password configured. Set them before you go to the next step.

6 When the following screen is displayed, make sure that the firmware file name is displayed, click [Upgrade] or [Apply], and follow the instructions on the screen.

Note: If the firmware name is not displayed on the screen, click [Browse...] and select the desired firmware. The firmware files are contained in the "Firmware" folder of the AirNavigator CD.

Professional firmware (dd-wrt) update screen:

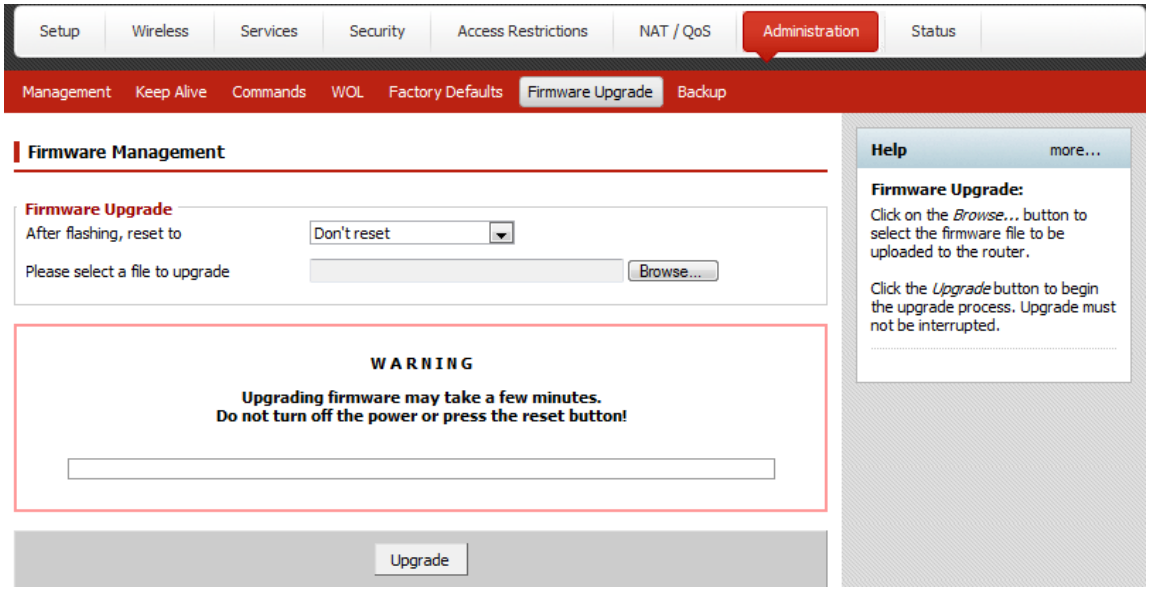

User-friendly firmware update screen:

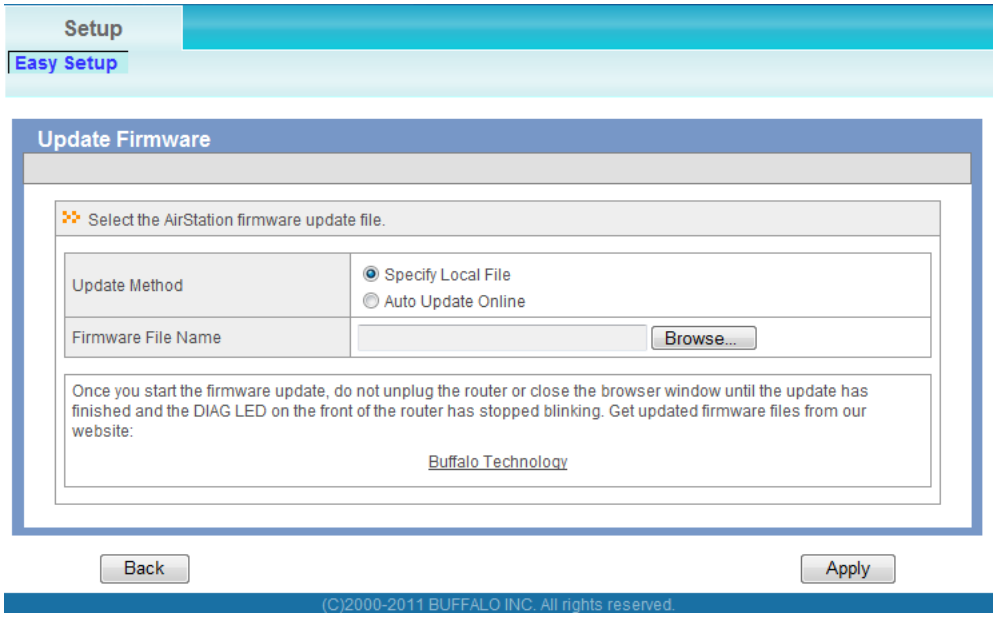
Setup
Easy Setup
Update Firmware
Select the AirStation firmware update file.
Update Method
Specify Local File
Auto Update Online
Firmware File Name
Browse...
Once you start the firmware update, do not unplug the router or close the browser window until the update has finished and the DIAG LED on the front of the router has stopped blinking. Get updated firmware files from our website:
Buffalo Technology
Back
Apply
(C)2000-2011 BUFFALO INC. All rights reserved.

Macintosh

1 Open the configuration Interface of the AirStation.

2 To replace the professional firmware with the user-friendly firmware, click [Administration] > [Firmware Upgrade].
To replace the user-friendly firmware with the professional firmware, go to [Easy Setup] and click [Update AirStation Firmware].

3 Click [Browse...] to select the firmware file, and click [Upgrade] or [Apply].

Note: The firmware files are contained in the "Firmware" folder of the AirNavigator CD.

Professional firmware (dd-wrt) update screen:

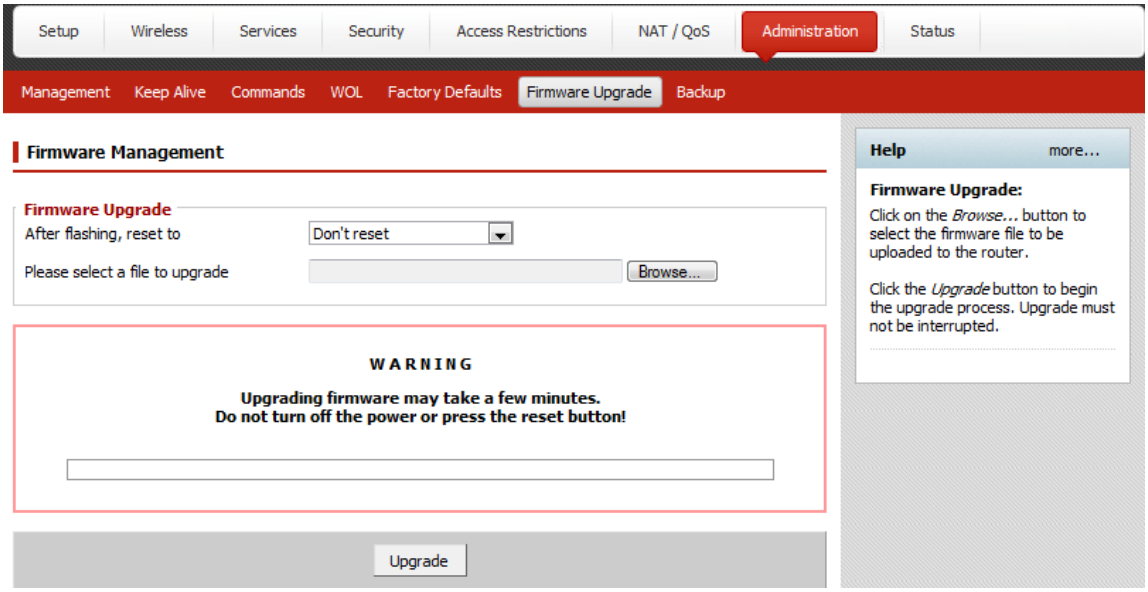

User-friendly firmware update screen:

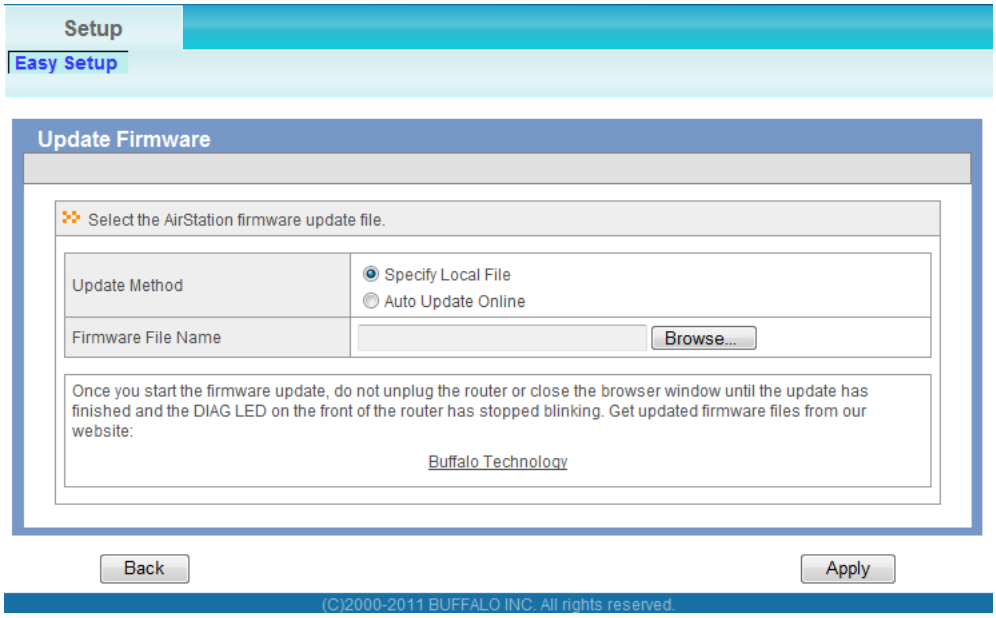
Setup
Easy Setup
Update Firmware
Select the AirStation firmware update file.
Update Method
Specify Local File
Auto Update Online
Firmware File Name
Browse...
Once you start the firmware update, do not unplug the router or close the browser window until the update has finished and the DIAG LED on the front of the router has stopped blinking. Get updated firmware files from our website:
Buffalo Technology
Back
Apply
(C)2000-2011 BUFFALO INC. All rights reserved.

Chapter 4 - Configuration

The web-based configuration tool lets you change advanced settings for the AirStation. Don't change these settings unless you know what you're doing.

Accessing the Web-based Configuration Interface

To configure the AirStation's advanced settings manually, log in to the web-based configuration interface as shown below.

1 Launch a web browser.

2

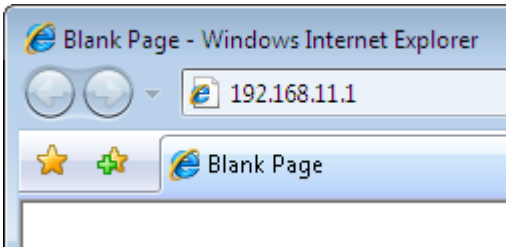

Enter the AirStation's LAN-side IP address in the address field and press the Enter key.

Note: · The AirStation's default LAN-side IP address depends on the position of the mode switch.
In router mode: 192.168.11.1
In bridge mode: 192.168.11.100
Note: If the router switch is set to auto and the unit is in bridge mode, then the AirStation's IP address was assigned by an external DHCP server.
· If you changed the IP address of the AirStation, then use the new IP address.

3

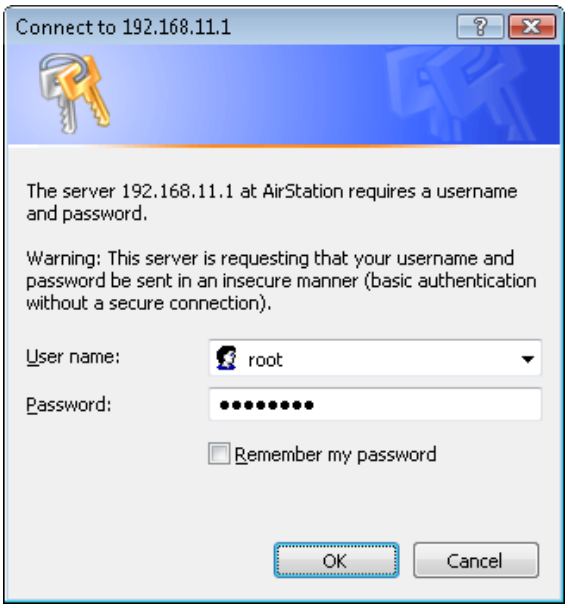
Connect to 192.168.11.1
The server 192.168.11.1 at AirStation requires a username and password.
Warning: This server is requesting that your username and password be sent in an insecure manner (basic authentication without a secure connection).
User name:
root
Password:
Remember my password
OK
Cancel

When this screen appears, enter "root" (in lower case) for the username and the password that you set during initial setup. Click [OK].

Note: · By default, the password is blank (not set).
· If you forget your password, hold down the reset button (page 13) to initialize all settings. The password will then be blank. Note that all other settings will also revert to their default values.

4

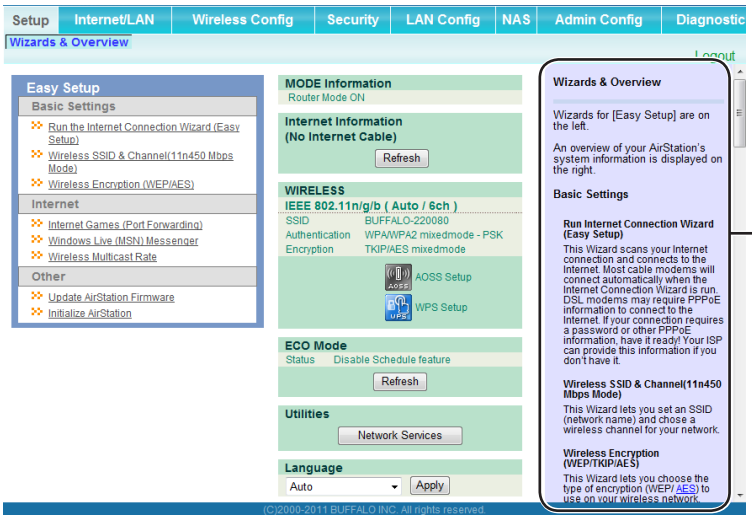
Setup
Internet/LAN
Wireless Config
Security
LAN Config
NAS
Admin Config
Diagnostic
Wizards & Overview
Logout
Easy Setup
Basic Settings
Run the Internet Connection Wizard (Easy Setup)
Wireless SSID & Channel(11n450 Mbps Mode)
Wireless Encryption (WEP/AES)
Internet
Internet Games (Port Forwarding)
Windows Live (MSN) Messenger
Wireless Multicast Rate
Other
Update AirStation Firmware
Initialize AirStation
MODE Information
Router Mode ON
Internet Information
(No Internet Cable)
Refresh
WIRELESS
IEEE 802.11n/g/b (Auto / 6ch)
SSID BUFFALO-220080
Authentication WPA/WPA2 mixedmode - PSK
Encryption TKIP/AES mixedmode
AOSS Setup
WPS Setup
ECO Mode
Status Disable Schedule feature
Refresh
Utilities
Network Services
Language
Auto
Apply
(C)2000-2011 BUFFALO INC. All rights reserved.
Wizards & Overview
Wizards for [Easy Setup] are on the left.
An overview of your AirStation's system information is displayed on the right.
Basic Settings
Run Internet Connection Wizard (Easy Setup)
This Wizard scans your Internet connection and connects to the Internet. Most cable modems will connect automatically when the Internet Connection Wizard is run. DSL modems may require PPPoE information to connect to the Internet. If your connection requires a password or other PPPoE information, have it ready! Your ISP can provide this information if you don't have it.
Wireless SSID & Channel(11n450 Mbps Mode)
This Wizard lets you set an SSID (network name) and chose a wireless channel for your network.
Wireless Encryption (WEP/TKIP/AES)
This Wizard lets you choose the type of encryption (WEP/ AES) to use on your wireless network.

This is the configuration interface, where most AirStation settings can be configured.

Help is always displayed on the right side of each screen. Refer to the Help screens for more information on using the configuration interface.

Configuration Interface Menus in Router Mode

The menu structure for the AirStation in router mode is as follows. Please refer to the pages listed at right for explanations of each item.

Main screen	Descriptions	Page
Internet/LAN		
Internet	Configure Internet side port and settings.	Page 34
PPPoE	PPPoE settings (DSL login).	Page 35
DDNS	DNS settings.	Page 38
VPN Server	VPN server settings.	Page 40
LAN	LAN side port configuration.	Page 42
DHCP Lease	DHCP lease settings.	Page 44
NAT	Network address translation settings, used to connect LAN side devices to the Internet.	Page 45
Route	Configure the AirStation's IP communication route.	Page 46
Wireless Config		
WPS	WPS settings and status.	Page 47
Basic	Configure basic wireless settings.	Page 48
Advanced	Configure advanced wireless settings.	Page 51
WMM	Set priorities for Wireless Multimedia Extensions (Wi-Fi Multimedia).	Page 52
MAC Filter	Limit access to specific devices.	Page 54
Multicast Control	Configure limits on sending unnecessary multicast packets to the wireless LAN port.	Page 55
Guest Port	Configure guest port settings.	Page 56
AOSS	AOSS (AirStation One-touch Secure System) settings and status.	Page 58
Security		
Firewall	Protect your computer from outside intruders.	Page 60
IP Filter	IP filters for packets passing through the LAN side and the Internet side.	Page 62
VPN Passthrough	Configure IPv6 passthrough, PPPoE passthrough, and PPTP passthrough.	Page 63
LAN Config		
Port Forwarding	Configure port translation and exceptions for games and other programs.	Page 64
DMZ	Configure a destination to transfer communication packets without a LAN side destination.	Page 65

UPnP	Configure UPnP (Universal Plug and Play).	Page 66
QoS	Configure priority for packets that require a guaranteed data flow.	Page 67
Movie Engine	Configure options for the Movie Engine feature.	Page 69
NAS		
Disk Management	View the status and configure of attached USB disks.	Page 71
Shared Folder	Set the USB disk to use as shared folders.	Page 73
User Management	Configure users to access shared folders.	Page 75
Shared Service	Configure shared folder access.	Page 76
Web Access	Configure Web Access.	Page 77
Media Server	Configure a Media Server.	Page 79
BitTorrent	Configure a BitTorrent client.	Page 80
Admin Config		
Name	Configure the AirStation's name.	Page 82
Password	Configure the AirStation's login password for access to the configuration interface.	Page 83
Time/Date	Configure the AirStation's internal clock.	Page 84
NTP	Configure the AirStation to synchronize with an NTP server to automatically set the AirStation's internal clock.	Page 85
ECO	Configure the AirStation's ECO Mode.	Page 86
Network-USB	Configure Network-USB from this screen.	Page 88
Access	Configure access restrictions to the AirStation's configuration interface.	Page 89
Log	Configure a syslog server to manage the AirStation's logs.	Page 90
Save/Restore	Save or restore the AirStation's configuration from a configuration file.	Page 91
Initialize/Restart	Initialize the AirStation or reboot it.	Page 92
Update	Update the AirStation's firmware.	Page 93
Diagnostic		
System Info	View current system information for the AirStation.	Page 95
Logs	Check the AirStation's logs.	Page 97
Packet Info	View all packets transferred by the AirStation.	Page 98
Client Monitor	View all devices currently connected to the AirStation.	Page 99
Ping	Test the AirStation's connection to other devices on the network.	Page100
Logout		
Click this to log out of the AirStation's configuration interface.		

Configuration Interface Menus in Bridge Mode

The menu structure in bridge mode is as follows. Please refer to the pages listed at right for explanations of each item.

Main screen	Descriptions	Page
LAN Config		
LAN	Configure LAN side ports and devices.	Page 42
Route	Configure the AirStation's IP communication route.	Page 46
Wireless Config		
WPS	WPS settings and status.	Page 47
Basic	Configure basic wireless settings.	Page 48
Advanced	Configure advanced wireless settings.	Page 51
WMM	Set priorities for Wireless Multimedia Extensions (Wi-Fi Multimedia).	Page 52
MAC Filter	Limit access to specific devices.	Page 54
Multicast Control	Configure limits on sending unnecessary multicast packets to the wireless LAN port.	Page 55
Guest Port	Configure guest port settings.	Page 56
AOSS	AOSS (AirStation One-touch Secure System) settings and status.	Page 58
QoS		
Movie Engine	Configure options for the Movie Engine feature.	Page 69
NAS		
Disk Management	View the status and configure of attached USB disks.	Page 71
Shared Folder	Set the USB disk to use as shared folders.	Page 73
User Management	Configure the name to access shared folders.	Page 75
Shared Service	Configure the name to access shared folders.	Page 76
Web Access	Set to use the Web Access function.	Page 77
Media Server	Set to use the Media Server function.	Page 79
BitTorrent	Set to use the BitTorrent function.	Page 80
Admin Config		
Name	Configure the AirStation's name.	Page 82
Password	Configure the AirStation's login password for access to configuration interface.	Page 83
Time/Date	Configure the AirStation's internal clock.	Page 84

NTP	Configure the AirStation to synchronize with an NTP server to automatically set the AirStation's internal clock.	Page 85
ECO	Configure ECO Mode.	Page 86
Network-USB	Configure Network-USB from this screen.	Page 88
Access	Configure access restrictions to the AirStation's configuration interface.	Page 89
Log	Check the AirStation's logs.	Page 90
Save/Restore	Save or restore the AirStation's configuration from a configuration file.	Page 91
Initialize/Restart	Initialize the AirStation or reboot it.	Page 92
Update	Update the AirStation's firmware.	Page 93
Diagnostic		
System Info	View current system information for the AirStation.	Page 95
Logs	Check the AirStation's logs.	Page 97
Packet Info	View all packets transferred by the AirStation.	Page 98
Client Monitor	View all devices currently connected to the AirStation.	Page 99
Ping	Test the AirStation's connection to other devices on the network.	Page100
Logout		
Click this to log out of the AirStation's configuration interface.		

Setup

Setup is the home page of the configuration interface. You can verify settings and the status of the AirStation here.

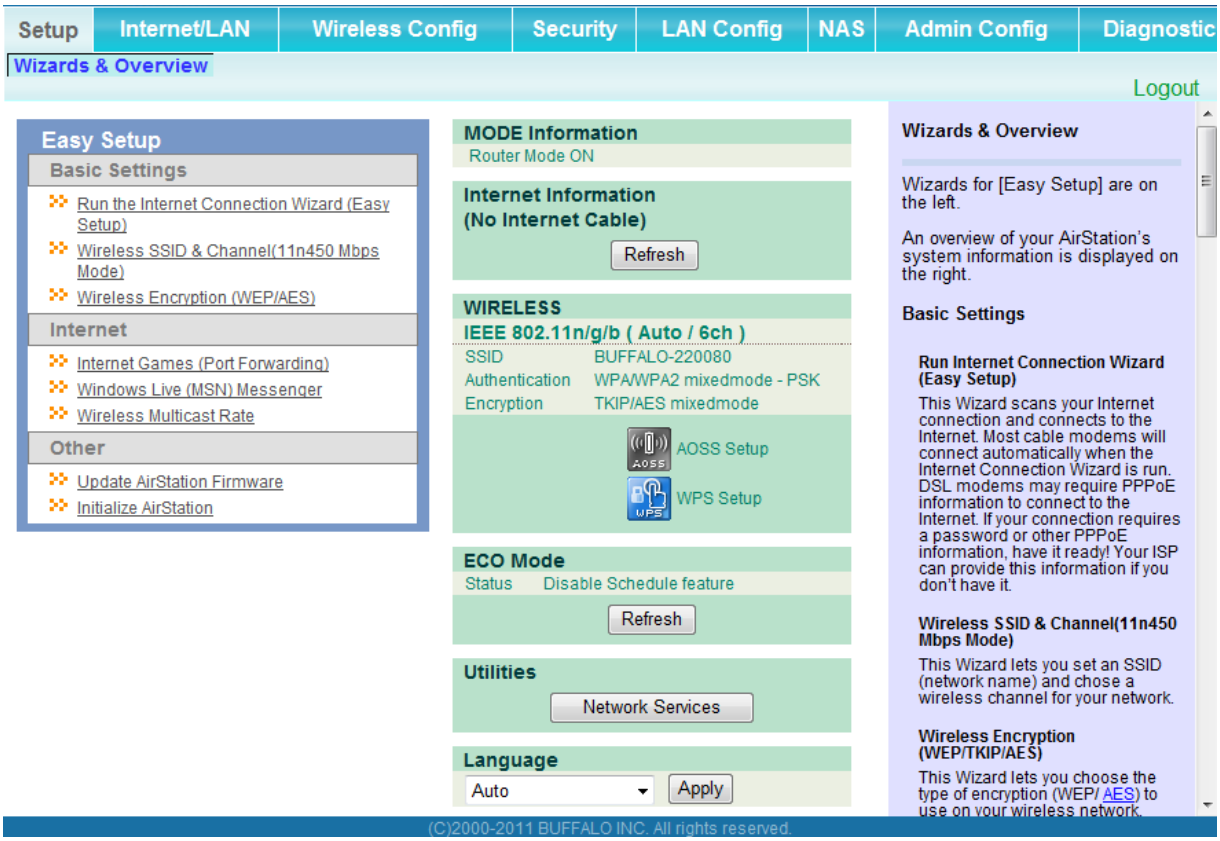
Setup
Internet/LAN
Wireless Config
Security
LAN Config
NAS
Admin Config
Diagnostic
Wizards & Overview
Logout
Easy Setup
Basic Settings
Run the Internet Connection Wizard (Easy Setup)
Wireless SSID & Channel(11n450 Mbps Mode)
Wireless Encryption (WEP/AES)
Internet
Internet Games (Port Forwarding)
Windows Live (MSN) Messenger
Wireless Multicast Rate
Other
Update AirStation Firmware
Initialize AirStation
MODE Information
Router Mode ON
Internet Information
(No Internet Cable)
Refresh
WIRELESS
IEEE 802.11n/g/b (Auto / 6ch)
SSID BUFFALO-220080
Authentication WPA/WPA2 mixedmode - PSK
Encryption TKIP/AES mixedmode
AOSS Setup
WPS Setup
ECO Mode
Status Disable Schedule feature
Refresh
Utilities
Network Services
Language
Auto
Apply
Wizards & Overview
Wizards for [Easy Setup] are on the left.
An overview of your AirStation's system information is displayed on the right.
Basic Settings
Run Internet Connection Wizard (Easy Setup)
This Wizard scans your Internet connection and connects to the Internet. Most cable modems will connect automatically when the Internet Connection Wizard is run. DSL modems may require PPPoE information to connect to the Internet. If your connection requires a password or other PPPoE information, have it ready! Your ISP can provide this information if you don't have it.
Wireless SSID & Channel(11n450 Mbps Mode)
This Wizard lets you set an SSID (network name) and chose a wireless channel for your network.
Wireless Encryption (WEP/TKIP/AES)
This Wizard lets you choose the type of encryption (WEP/ AES) to use on your wireless network.
(C)2000-2011 BUFFALO INC. All rights reserved.

Parameter	Meaning
Internet/LAN (LAN Config)	Displays the configuration screen for the Internet port and LAN ports.
Wireless Config	Click this button to display the configuration screen for wireless settings.
Security	Click this button to display the configuration screen for security.
LAN Config	Click this button to display the configuration screen to open ports for games and applications.
NAS	Click this button to display the configuration screen for NAS settings.

Parameter	Meaning
Admin Config	Click this button to display the configuration screen for administration settings.
Diagnostic	Click this button to display the status of the AirStation.
Easy Setup	Enables you to easily configure the AirStation's network settings automatically.
MODE Information	This indicates the operation mode of the AirStation.
Internet Information	Displays WAN-side system information for the AirStation.
Check Connection	Click this button to check if the AirStation is connected to the Internet properly.
Refresh	Click this button to refresh the current screen.
WIRELESS	Displays the current wireless settings.
AOSS Setup	Click this button to display the AOSS configuration screen.
WPS Setup	Click this button to display the WPS configuration screen.
ECO Mode	This indicates the operating status of ECO Mode.
Network Service List	Displays the list of the network devices for which information is provided from the network on the LAN-side.
Media Server	Displays the status of the media server.
Download List	Displays the list of BitTorrent files downloading.
Language	Enables you to select the language you use.
Logout	Log out of the configuration interface. If the AirStation does not communicate for 5 minutes, it will log out automatically.

Internet/LAN (LAN Config)

Internet (Router Mode only)

Configure the WAN-side port (“Internet port”).

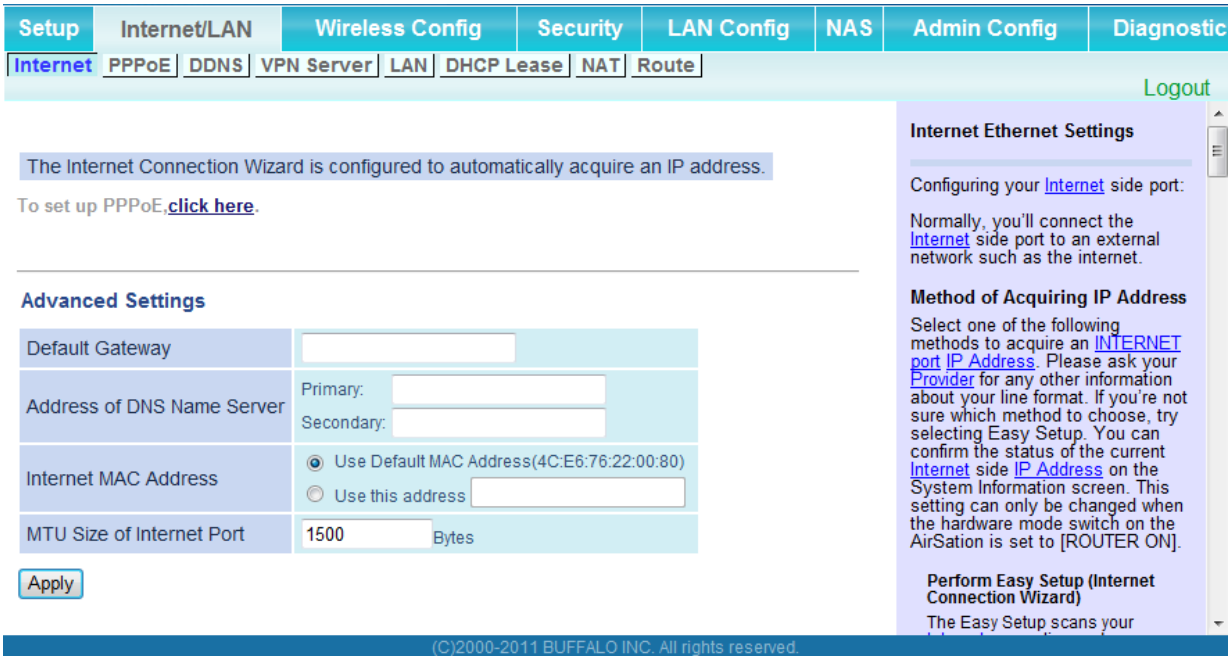
Setup
Internet/LAN
Wireless Config
Security
LAN Config
NAS
Admin Config
Diagnostic
Internet
PPPoE
DDNS
VPN Server
LAN
DHCP Lease
NAT
Route
Logout
The Internet Connection Wizard is configured to automatically acquire an IP address.
To set up PPPoE,click here.
Advanced Settings
Default Gateway
Address of DNS Name Server
Primary:
Secondary:
Internet MAC Address
Use Default MAC Address(4C:E6:76:22:00:80)
Use this address
MTU Size of Internet Port
1500
Bytes
Apply
Internet Ethernet Settings
Configuring your Internet side port:
Normally, you'll connect the Internet side port to an external network such as the internet.
Method of Acquiring IP Address
Select one of the following methods to acquire an INTERNET port IP Address. Please ask your Provider for any other information about your line format. If you're not sure which method to choose, try selecting Easy Setup. You can confirm the status of the current Internet side IP Address on the System Information screen. This setting can only be changed when the hardware mode switch on the AirSation is set to [ROUTER ON].
Perform Easy Setup (Internet Connection Wizard)
The Easy Setup scans your
(C)2000-2011 BUFFALO INC. All rights reserved.

Parameter	Meaning
Method of Acquiring IP Address	Specify how the WAN-side IP address is obtained.
Default Gateway	Configure an IP address for the default gateway.
Address of DNS Name Server	Specify an IP address for the DNS server.
Internet MAC Address	Configure the Internet side MAC address. Note: Configuring an improper MAC address may make the AirStation unusable. Change this setting at your own risk.
MTU size of Internet Port	Configure the MTU value of the Internet port. Values of 578 to 1500 bytes may be entered.

PPPoE (Router Mode only)

Configure PPPoE settings.

Setup
Internet/LAN
Wireless Config
Security
LAN Config
NAS
Admin Config
Diagnostic
Internet
PPPoE
DDNS
VPN Server
LAN
DHCP Lease
NAT
Route
Logout
Default PPPoE Connection
1 : Easy Setup
IP Unnumbered PPPoE Connection
1 : Easy Setup
Apply
PPPoE Connection List
Number
Name
Status
1
Easy Setup
Enable
Edit Connection List
Preferred Connections
No.
Name
Destination Address
Source Address
No Preferred Connections are Registered.
Edit Preferred Connections
PPPoE Settings
If PPPoE is specified in the Internet side configuration, you'll have more detailed setup options on this page. To specify PPPoE as the Internet side communication method, on [Internet Setup]-[Internet Port], select [PPPoE Client Function] or select [Use IP Unnumbered] .
Note:
If [Acquire IP address automatically from DHCP server] or [Manual Setup] is set as the Internet side communication method, or if something besides PPPoE was detected when [Easy Setup] ran, it is not necessary to enter information on this page. (Even if it is set, it is not used.) Additionally, when [Easy Setup] is executed, information set on this page may be rewritten.
Default PPPoE Connection
If multiple destinations are registered to the PPPoE Destination List, the destination
(C)2000-2011 BUFFALO INC. All rights reserved.

Parameter	Meaning
Default PPPoE Connection	If you have registered multiple connection destinations in the PPPoE Connection List, connection destinations selected here have priority. You need to configure the route to which PPPoE is connected to if you don't use the default settings.
IP Unnumbered PPPoE Connection	Select the destination from the PPPoE Connection List which is used when "Use IP Unnumbered" is chosen for the Method of Acquiring IP Address (page 34).
PPPoE Connection List	Edit PPPoE destination. You can register up to 5 sessions.
[Edit Connection List]	Click this button to edit destination settings.

Parameter	Meaning
PPPoE Connection No.*-Add	This is displayed when [Edit Connection List] is clicked. **Name of Connection** Enter the name to identify the connected destination. You may enter up to 32 alphanumerical characters and symbols. **Username** Enter the username specified by your ISP for PPPoE certification. You may enter up to 32 alphanumerical characters and symbols. **Password** Enter the password specified by your ISP for PPPoE certification. You may enter up to 32 alphanumerical characters and symbols. **Service Name** Fill in this field only if your ISP specifies a Service Name. Leave blank otherwise. You may enter up to 32 alphanumerical characters and symbols. **Connection Type** Specifies the timing for the AirStation to connect to your provider. **Automatic disconnection** Set time to disconnect after communication is stopped when the connection method is set to [Connect on Demand] or [Manual]. You can enter up to 1440 minutes. **Authorization** Configure an authorization method with a provider. **MTU Size** Configure the MTU size for PPPoE. Values of 578 to 1500 bytes may be entered. **MRU Size** Configure MRU (Maximum Receive Unit) for PPPoE. Values of 578 to 1492 may be entered.

Parameter	Meaning
PPPoE Connection No. *-Add	**Keep Alive** If Keep Alive is enabled, then the AirStation will issue an LCP echo request once a minute in order to maintain the connection with the PPPoE. If the server does not respond for more than 6 minutes, the line is recognized as disconnected and the AirStation will terminate the connection. [Disabled] is the recommended setting.
Preferred Connections	Displays information you have set regarding to the connection destination route.
[Edit Preferred Connections]	Click to edit the connection destination route settings.
Preferred PPPoE Connection -Add	Click [Edit Preferred Connections] to display. **Name** The destination to connect by PPPoE if [Destination address] and [Source address] match. Select the destination registered to the PPPoE Connection List. **Destination address** When communicating to this address, the AirStation will communicate with [Name of Connection.] **Source address** When communicating from this address, the AirStation will communicate with [Name of Connection.]

DDNS (Router Mode only)

Configure Dynamic DNS settings. Many settings are only available when the appropriate Dynamic DNS service is enabled.

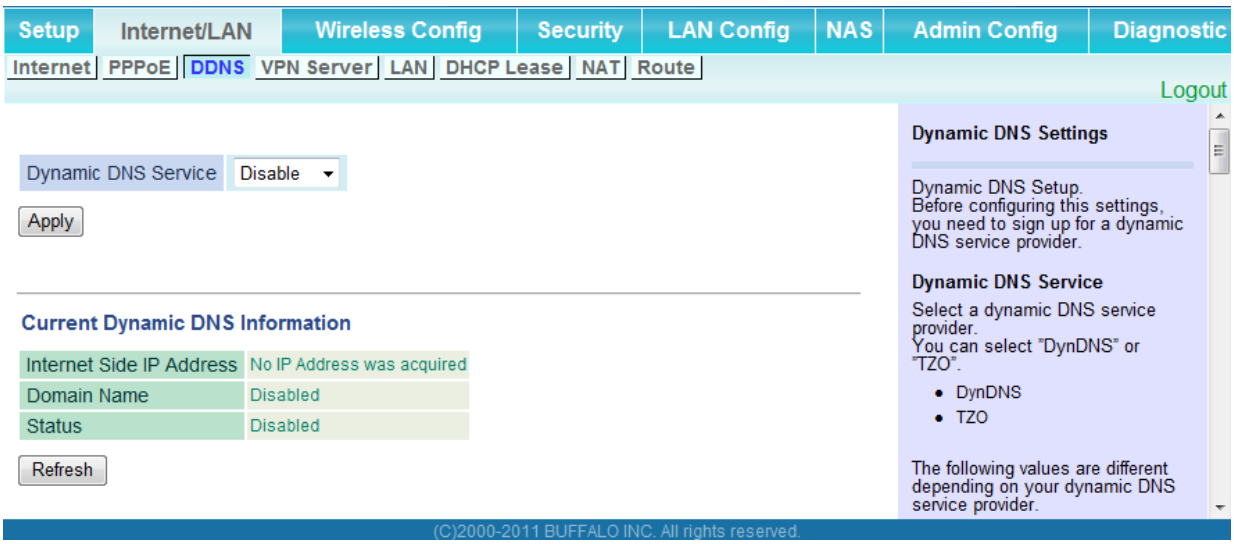

Parameter	Meaning
Dynamic DNS Service	Select a provider (DynDNS or TZO) for Dynamic DNS.
Username	Enter the Dynamic DNS username. You may enter up to 64 alphanumerical characters and symbols.
Password	Enter the Dynamic DNS password. You may enter up to 64 alphanumerical characters and symbols.
Hostname	Enter the Dynamic DNS hostname. You may enter up to 255 alphanumerical characters, hyphens, and periods.
Email Address	Enter the email address which is registered to the Dynamic DNS service. You may enter up to 64 alphanumerical characters and symbols.
TZO Key	Enter the TZO Key which is registered to the Dynamic DNS service. You may enter up to 64 alphanumerical characters and symbols.
Domain Name	Enter the domain name which is registered to the Dynamic DNS service. You may enter up to 255 alphanumerical characters, hyphens, and periods.

Parameter	Meaning
IP Address Update Period	Specifies the period to notify the dynamic DNS service provider of the current IP address. For DynDNS, set it between 0 and 35 days. For TZO, set it between 0 and 99 days. If 0 (zero) days is set, no periodic update is performed.
Internet Side IP Address	The WAN-side IP address of the AirStation's Internet port. This address is sent to the dynamic DNS service provider.
Domain Name	The domain name assigned by the dynamic DNS Service provider. The AirStation can be accessed from the Internet using this domain name.
Status	Display the status of dynamic DNS service.

VPN server (Router Mode Only)

Configure the VPN server.

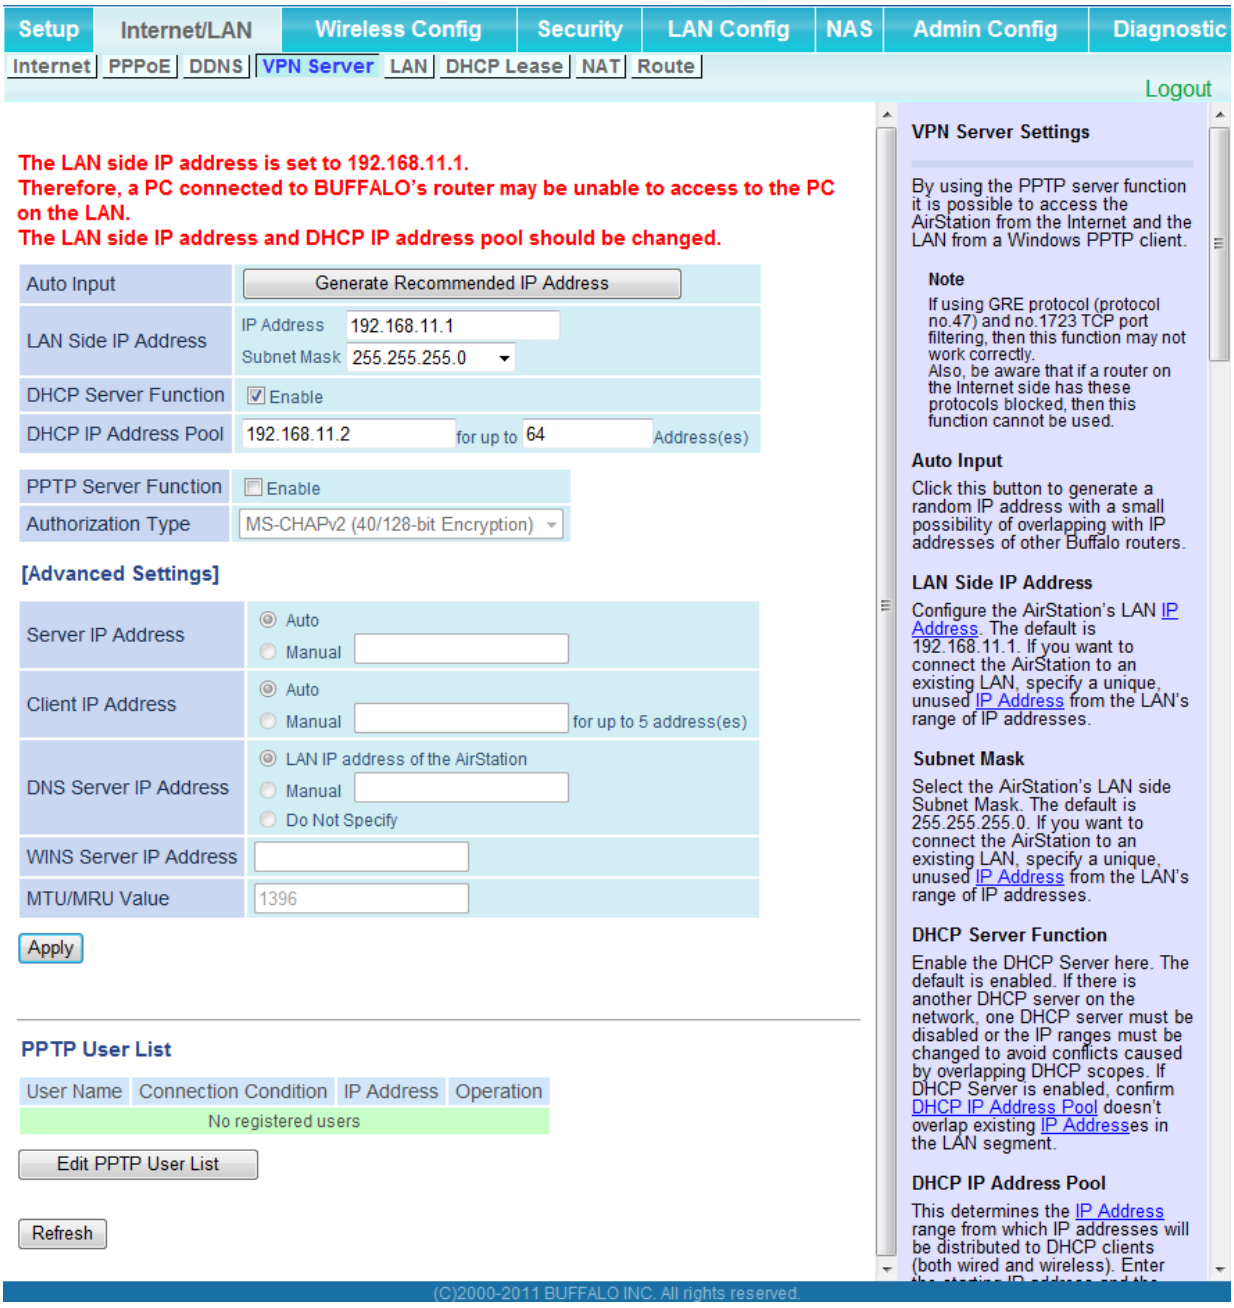
Setup
Internet/LAN
Wireless Config
Security
LAN Config
NAS
Admin Config
Diagnostic
Internet
PPPoE
DDNS
VPN Server
LAN
DHCP Lease
NAT
Route
Logout
The LAN side IP address is set to 192.168.11.1.
Therefore, a PC connected to BUFFALO's router may be unable to access to the PC on the LAN.
The LAN side IP address and DHCP IP address pool should be changed.
Auto Input
Generate Recommended IP Address
LAN Side IP Address
IP Address 192.168.11.1
Subnet Mask 255.255.255.0
DHCP Server Function
Enable
DHCP IP Address Pool
192.168.11.2 for up to 64 Address(es)
PPTP Server Function
Enable
Authorization Type
MS-CHAPv2 (40/128-bit Encryption)
[Advanced Settings]
Server IP Address
Auto
Manual
Client IP Address
Auto
Manual
for up to 5 address(es)
DNS Server IP Address
LAN IP address of the AirStation
Manual
Do Not Specify
WINS Server IP Address
MTU/MRU Value
1396
Apply
PPTP User List
User Name
Connection Condition
IP Address
Operation
No registered users
Edit PPTP User List
Refresh
VPN Server Settings
By using the PPTP server function it is possible to access the AirStation from the Internet and the LAN from a Windows PPTP client.
Note
If using GRE protocol (protocol no.47) and no.1723 TCP port filtering, then this function may not work correctly.
Also, be aware that if a router on the Internet side has these protocols blocked, then this function cannot be used.
Auto Input
Click this button to generate a random IP address with a small possibility of overlapping with IP addresses of other Buffalo routers.
LAN Side IP Address
Configure the AirStation's LAN IP Address. The default is 192.168.11.1. If you want to connect the AirStation to an existing LAN, specify a unique, unused IP Address from the LAN's range of IP addresses.
Subnet Mask
Select the AirStation's LAN side Subnet Mask. The default is 255.255.255.0. If you want to connect the AirStation to an existing LAN, specify a unique, unused IP Address from the LAN's range of IP addresses.
DHCP Server Function
Enable the DHCP Server here. The default is enabled. If there is another DHCP server on the network, one DHCP server must be disabled or the IP ranges must be changed to avoid conflicts caused by overlapping DHCP scopes. If DHCP Server is enabled, confirm DHCP IP Address Pool doesn't overlap existing IP Addresses in the LAN segment.
DHCP IP Address Pool
This determines the IP Address range from which IP addresses will be distributed to DHCP clients (both wired and wireless). Enter
(C)2000-2011 BUFFALO INC. All rights reserved.

Parameter	Meaning
Auto Input	Click to generate a random IP address.
LAN Side IP Address	Set a LAN side IP address and subnet mask.
DHCP Server Function	Enable or disable the DHCP server, which assigns IP addresses automatically.
DHCP IP Address Pool	Configure the range of IP addresses to be assigned by the DHCP server and IP addresses to be excluded from that range. Values from 0-253 may be entered.
PPTP Server Function	Enable to use a PPTP server.
Authorization Type	Select the authentication method for PPTP connection.
Server IP Address	Select the server IP address.
Client IP Address	Select the IP address range.
DNS Server IP Address	Choose the IP address for the DHCP server.
WINS Server IP Address	Choose the IP address for the WINS server.
[Edit PPTP User List]	Click to edit user information.
Username	Enter the username to connect to the PPTP server. You may enter up to 16 alphanumerical characters and symbols.
Password	Enter the password to connect to the PPTP server. You may enter up to 16 alphanumerical characters and symbols.
Method of Acquiring IP Address	Select the method to be used to assign the IP address is assigned to the PPTP client.
PPTP User List	Displays the PPTP connection user information.

LAN

Configure LAN-side and DHCP Server settings.

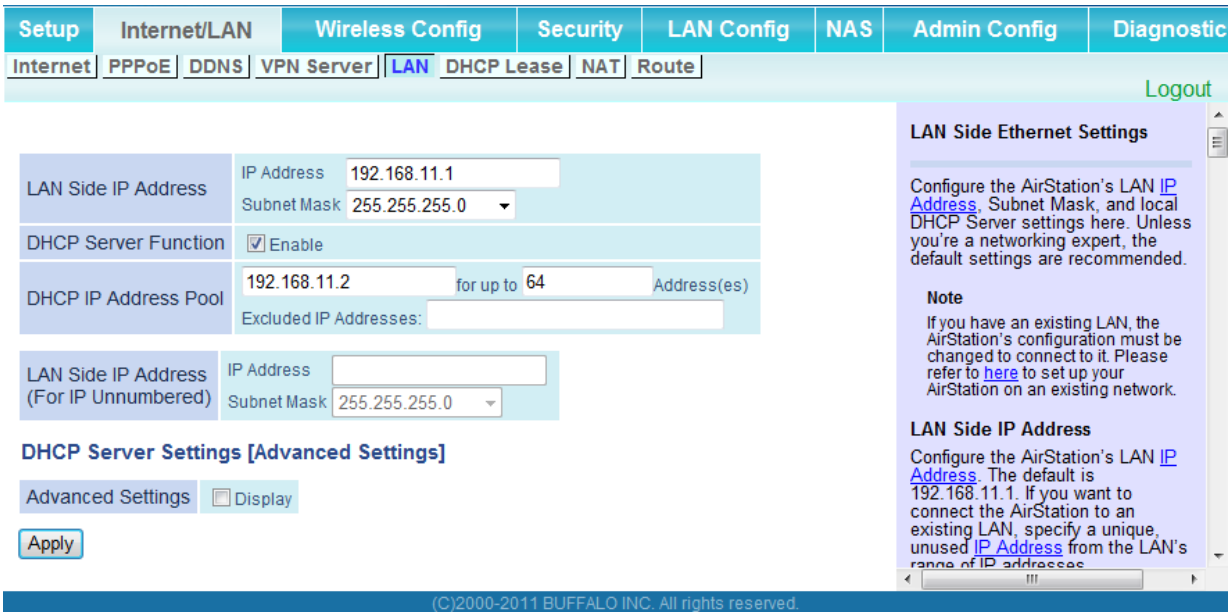
Setup
Internet/LAN
Wireless Config
Security
LAN Config
NAS
Admin Config
Diagnostic
Internet
PPPoE
DDNS
VPN Server
LAN
DHCP Lease
NAT
Route
Logout
LAN Side IP Address
IP Address 192.168.11.1
Subnet Mask 255.255.255.0
DHCP Server Function
Enable
DHCP IP Address Pool
192.168.11.2 for up to 64 Address(es)
Excluded IP Addresses:
LAN Side IP Address (For IP Unnumbered)
IP Address
Subnet Mask 255.255.255.0
DHCP Server Settings [Advanced Settings]
Advanced Settings
Display
Apply
LAN Side Ethernet Settings
Configure the AirStation's LAN IP Address, Subnet Mask, and local DHCP Server settings here. Unless you're a networking expert, the default settings are recommended.
Note
If you have an existing LAN, the AirStation's configuration must be changed to connect to it. Please refer to here to set up your AirStation on an existing network.
LAN Side IP Address
Configure the AirStation's LAN IP Address. The default is 192.168.11.1. If you want to connect the AirStation to an existing LAN, specify a unique, unused IP Address from the LAN's
(C)2000-2011 BUFFALO INC. All rights reserved.

Parameter	Meaning
LAN Side IP Address	By default, the LAN side IP address is 192.168.11.1 with subnet mask 255.255.255.0. You may change it here.
DHCP Server Function	Enable or disable the DHCP server, which assigns LAN-side IP addresses automatically.
DHCP IP Address Pool	Configure the range of IP addresses to be assigned by the DHCP server and IP addresses to be excluded from that range. Values from 0-253 may be entered.
LAN Side IP Address (For IP Unnumbered)	Set an IP unnumbered LAN side IP address. Note: A PC with a normal LAN side IP address and a PC with an IP Unnumbered IP address cannot communicate each other.
Advanced Settings	Check [Display] to display DHCP server advanced settings options.
Lease Period	Set the effective period of an IP address assigned by the DHCP server. Up to 999 hours may be entered.
Default Gateway	Set the default gateway IP address for the DHCP server to issue to clients.

Parameter	Meaning
DNS Servers Router Mode only	Set the DNS server IP address for the DHCP server to issue to clients.
WINS Server Router Mode only	Set the WINS server IP address for the DHCP server to issue to clients.
Domain Name Router Mode only	Set the domain name for the DHCP server to issue to clients. You may enter up to 127 alphanumerical characters, hyphens, and periods.
Default Gateway Bridge Mode only	Set the default gateway IP address.
DNS Server Address Bridge Mode only	Set the DNS server IP address.

DHCP Lease (Router Mode only)

Configure DHCP Exceptions.

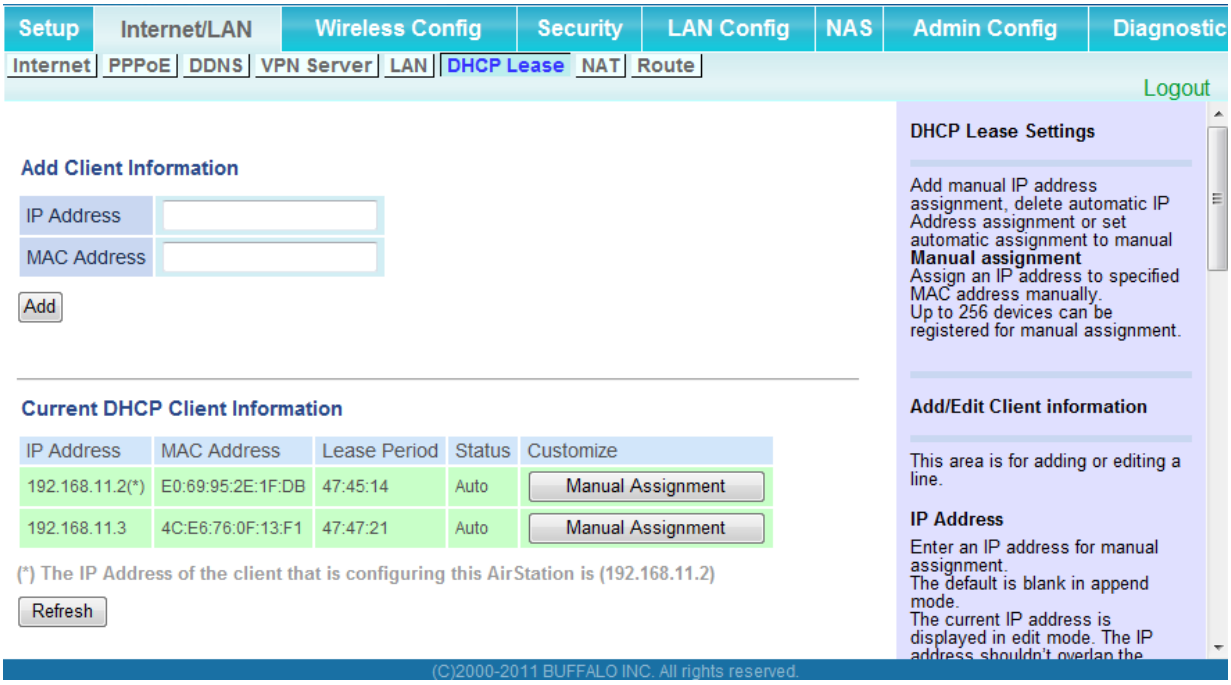

Parameter	Meaning
IP Address	Enter an IP address to lease manually. The IP address should be from the same subnet as the DHCP scope, but not be within the range that DHCP is assigning to other devices.
MAC Address	Enter the MAC address which identifies the client.
Current DHCP Client Information	Displays information for current leases. An IP address which is leased automatically can be changed to manual leasing by clicking [Manual Assignment].

NAT (Router Mode only)

Configure network address translation settings. This enables LAN-side devices to communicate with the Internet.

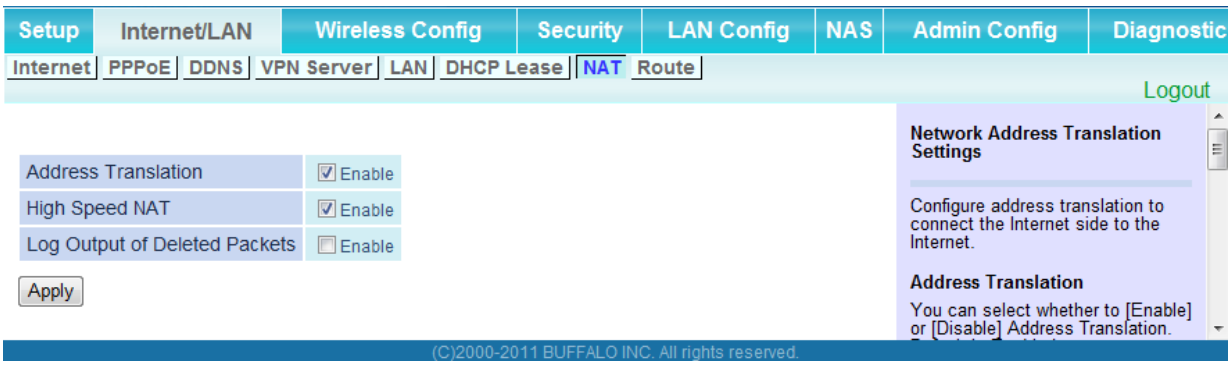

Parameter	Meaning
Address Translation	Enable to use Network Address Translation.
High Speed NAT	Enable to use high speed NAT.
Log Output of Deleted Packets	Enable to log deleted packets (such as errors) during address translation.

Route

Configure the AirStation's IP communication route.

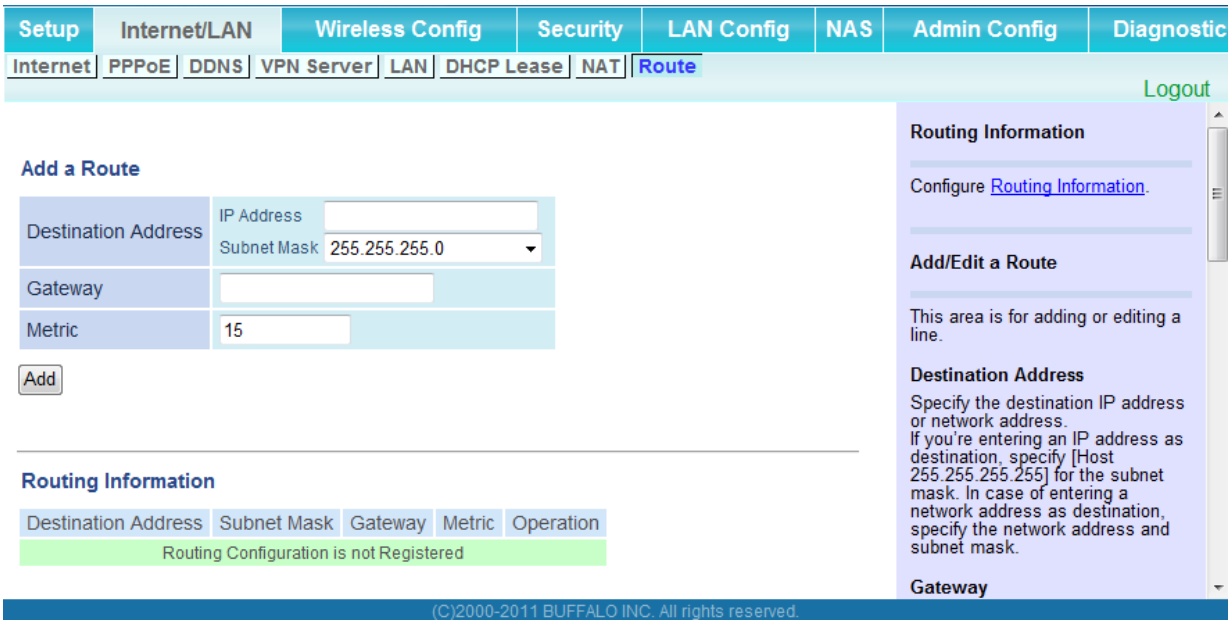

Parameter	Meaning
Destination Address	Adds a destination IP address and subnet mask to a routing table.
Gateway	Adds a gateway address to a routing table.
Metric	The metric is the maximum number of router hops a packet may take on the way to its destination address. Values between 1 and 15 may be entered. The default value is 15.
Routing Information	Manual entries will appear here after being added.

Wireless Config

WPS

WPS Status and Settings.

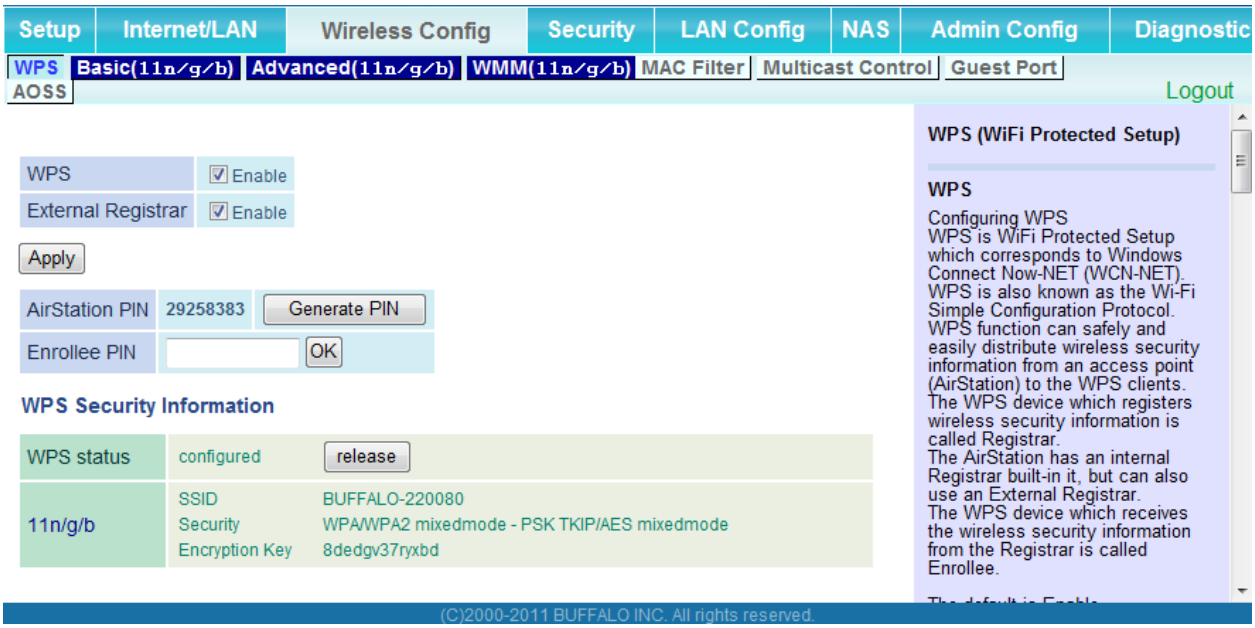

Parameter	Meaning
WPS	Enable to use WPS automatic configuration.
External Registrar	Enable to accept configure requests from other WPS devices. Note: Configure requests will not be accepted if AOSS is in use.
AirStation PIN	Displays the PIN code of the AirStation. Clicking [Generate PIN] will generate a new PIN code. This code can be entered into other wireless devices that support WPS.
Enrollee PIN	Enter the PIN code for the other wireless device and click [OK].
WPS status	Displays "configured" if all available wireless bands are configured. Displays "unconfigured" if at least one wireless band is unconfigured.

Basic

The screen to configure a basic wireless settings.

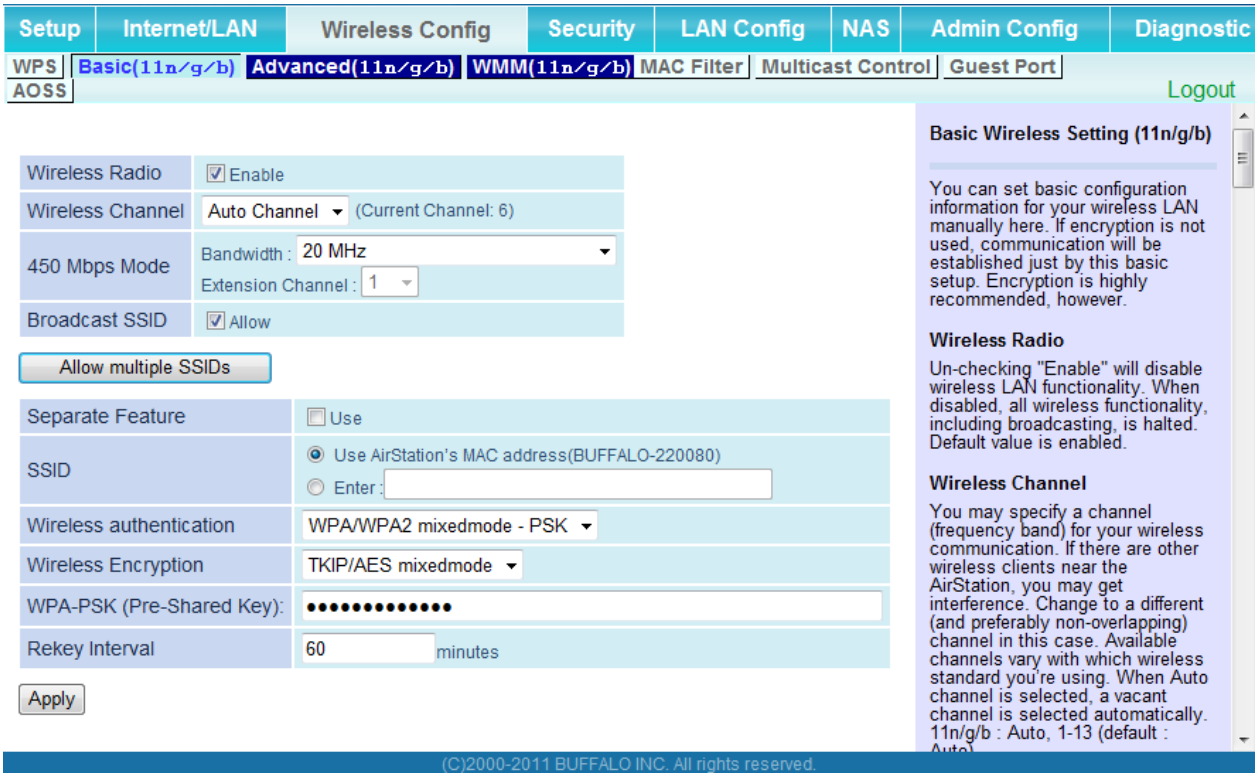

Parameter	Meaning
Wireless Radio	Determines whether to allow wireless communication. If this is unchecked, then no wireless connections will be allowed.
Wireless Channel	Sets a channel (a range of frequencies) for wireless connections. With Auto Channel selected, the AirStation will automatically use the best available channel.
450 Mbps Mode	450 Mbps mode uses twice the normal frequency range, 40 MHz instead of 20 MHz. In uncongested areas this can increase performance. To use 450 Mbps mode, set the Bandwidth to 40 MHz and choose an Extension Channel. Note: If Auto Channel is selected, then the Extension Channel is set automatically.

Parameter	Meaning
Broadcast SSID	If [Allow] is checked, then the AirStation will respond to SSID searches from wireless devices by broadcasting its SSID. If [Allow] is unchecked, then the AirStation ignores SSID searches from wireless devices.
[Allow multiple SSIDs] [Use Single SSID]	Clicking [Allow multiple SSIDs] will enable Multi Security, allowing the use of multiple SSIDs, each with different wireless security settings. Clicking [Use Single SSID] will disable Multi Security. The AirStation will then allow one SSID and one type of wireless security. Note: When using Multi Security, enable at least one of the following: SSID1,or SSID2.
SSID1	Multi Security SSID1 can use WPA-PSK-AES, WPA2-PSK-AES, or WPA/WPA2-Mixed for wireless security.
SSID2	Multi Security SSID2 can use WEP for wireless security.
Separate	When enabled, wireless devices connected to the AirStation can communicate only with the Internet side, not with each other.
SSID	Set SSID using 1 - 32 alphanumeric characters.
Wireless authentication	Specifies an authentication method used when connecting to a wireless device.

Parameter	Meaning
Wireless encryption	You may use any of the following types of encryption: **No encryption** Data is transmitted without encryption. With this setting, anyone within range can connect to your wireless network and might be able to access data on the network. Not recommended for anyone with private data that needs to be kept secure. [No encryption] can be selected only when [No authentication] is selected for wireless authentication. **WEP** WEP is a common encryption method supported by most devices. WEP can only be selected when wireless authentication is set to [No authentication]. Note that WEP's encryption is weak, and networks protected with WEP are not much more secure than those with no encryption at all. Not recommended for anyone with private data that needs to be kept secure. **AES** AES is more secure than WEP, and faster. Use a pre-shared-key to communicate with a wireless device. AES can be selected only when WPA-PSK or WPA2-PSK is selected for wireless authentication. **TKIP/AES mixed mode** TKIP/AES mixed mode allows both TKIP and AES authentication and communication. This is no more secure than TKIP alone, but more convenient for some users. TKIP/AES mixed mode can be selected only when WPA/WPA2 mixed mode - PSK is selected for wireless authentication.
WPA-PSK (Pre-Shared Key)	A pre-shared key or passphrase is the password for your wireless connections. There are two different formats for a pre-shared key. Use 8 to 63 alphanumeric characters (case-sensitive) for an ASCII passphrase, or use 64 alphanumeric characters (0 to 9 and a to f, not case-sensitive) for a hexadecimal passphrase.
Rekey interval	Set the update interval for the encryption key between 0 and 1440 (minutes).
Set up WEP encryption key	A WEP encryption key (passphrase) may have any of four different formats. An ASCII passphrase may use either 5 or 13 alphanumeric characters (case-sensitive). A hexadecimal passphrase may use either 10 or 26 alphanumeric characters (0 to 9 and a to f, not case-sensitive).

Advanced

Configure advanced wireless settings.

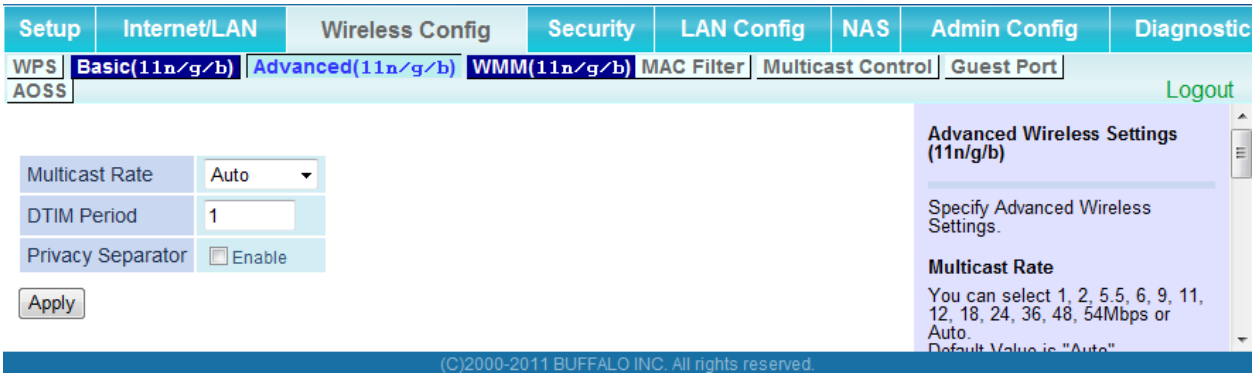

Parameter	Meaning
Multicast Rate	Set the communication speed of multi-cast packets.
DTIM Period	Set the beacon responding interval (1 -255) for which the AirStation responds to a wireless device. This setting is effective only when power management is enabled for the wireless device.
Privacy Separator	If enabled, the Privacy Separator blocks communication between wireless devices connected to the AirStation. Wireless devices will be able to connect to the Internet but not with each other. Devices that are connected to the AirStation with wired connections will still be able to connect to wireless devices normally.

WMM

Set priorities for specific communications.

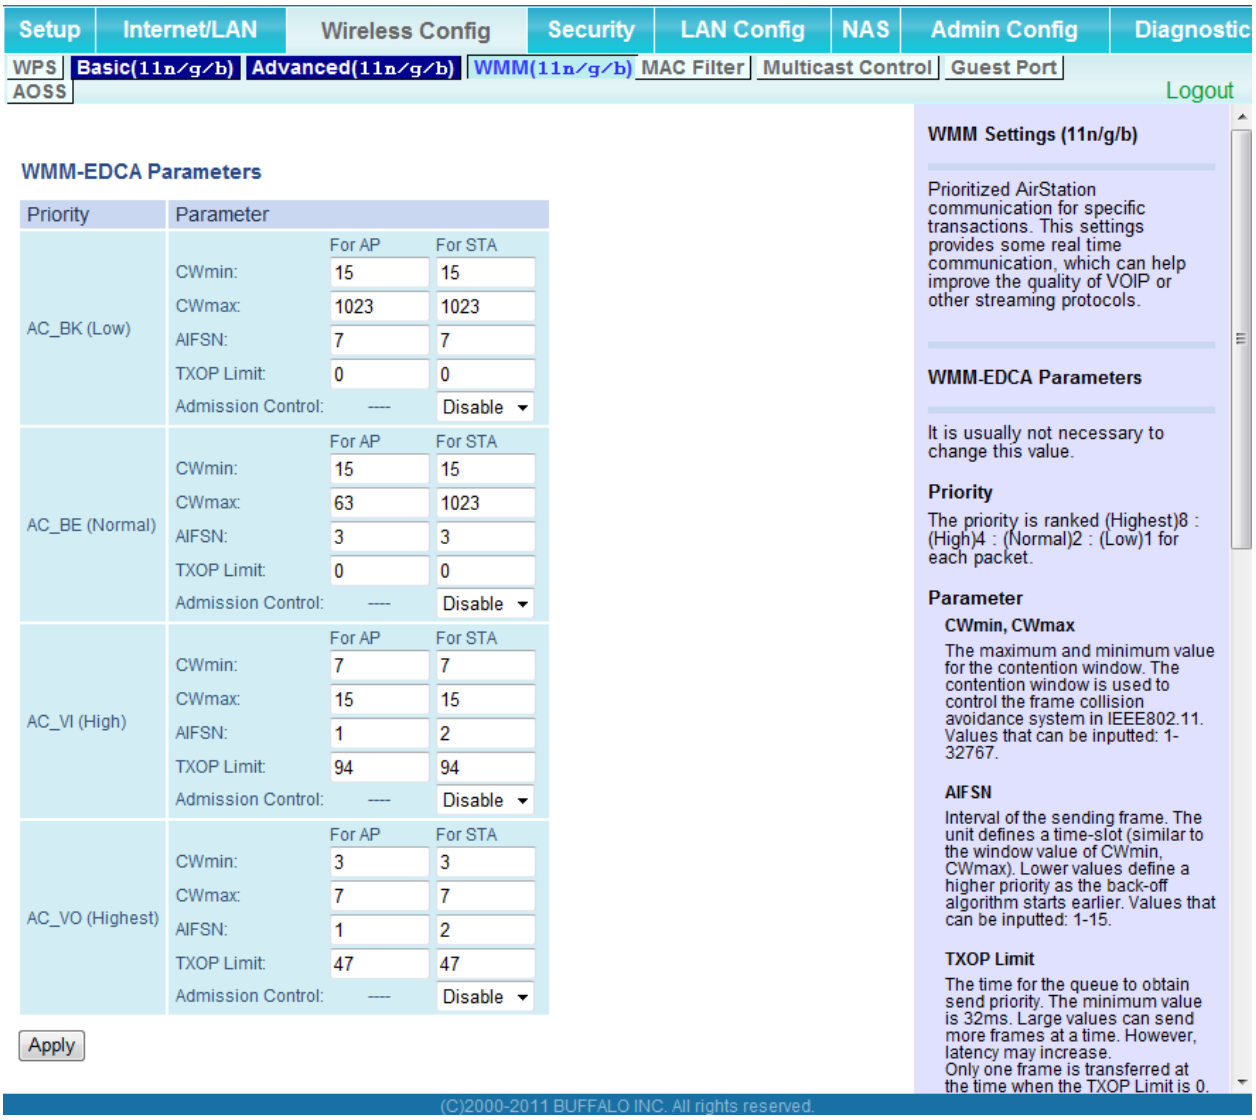
Setup
Internet/LAN
Wireless Config
Security
LAN Config
NAS
Admin Config
Diagnostic
WPS
Basic(11n/g/b)
Advanced(11n/g/b)
WMM(11n/g/b)
MAC Filter
Multicast Control
Guest Port
AOSS
Logout
WMM-EDCA Parameters
Priority
Parameter
AC_BK (Low)
AC_BE (Normal)
AC_VI (High)
AC_VO (Highest)
For AP
For STA
CWmin:
CWmax:
AIFSN:
TXOP Limit:
Admission Control:
Disable
Apply
WMM Settings (11n/g/b)
Prioritized AirStation communication for specific transactions. This settings provides some real time communication, which can help improve the quality of VOIP or other streaming protocols.
WMM-EDCA Parameters
It is usually not necessary to change this value.
Priority
The priority is ranked (Highest)8 : (High)4 : (Normal)2 : (Low)1 for each packet.
Parameter
CWmin, CWmax
The maximum and minimum value for the contention window. The contention window is used to control the frame collision avoidance system in IEEE802.11. Values that can be inputted: 1-32767.
AIFSN
Interval of the sending frame. The unit defines a time-slot (similar to the window value of CWmin, CWmax). Lower values define a higher priority as the back-off algorithm starts earlier. Values that can be inputted: 1-15.
TXOP Limit
The time for the queue to obtain send priority. The minimum value is 32ms. Large values can send more frames at a time. However, latency may increase.
Only one frame is transferred at the time when the TXOP Limit is 0.
(C)2000-2011 BUFFALO INC. All rights reserved.

Parameter	Meaning
WMM-EDCA Parameters	You don't usually need to change these settings. Using the default settings is recommended. **Priority** The following priorities may be applied to individual transmission packets: (Highest) 8, (High) 4, (Normal) 2, and (Low) 1. From the queue, these packets are processed in order of priority. **CWmin, CWmax** The maximum and minimum value of the contention window. The contention window is used in the frame collision avoidance structure performed in IEEE802.11, and generally, the smaller the value in the window, the higher the probability that the queue obtains the right to send. **AIFSN** The interval to send frames. The unit of the AIFSN is a slot, just as the window defined by CWmin and CWmax is. The smaller the interval of sending frames, the faster the algorithm can restart. As a result, the priority of the queue is higher. **TXOP Limit** The period of time that the queue can use after obtaining the right to send. The unit is 32 ms. The longer this time, the more frames can be sent per right to send. However, the queue may interfere with other packet transmissions. If TXOP Limit is set to 0 (zero), only one frame can be sent per right to send. **Admission Control** Restricts new frames from interfering with a previous queue. New packets are prioritized lower until a queue of them is collected. As the new queue accumulates more packets, its priority increases.

MAC Filter

Restrict access to specific wireless devices.

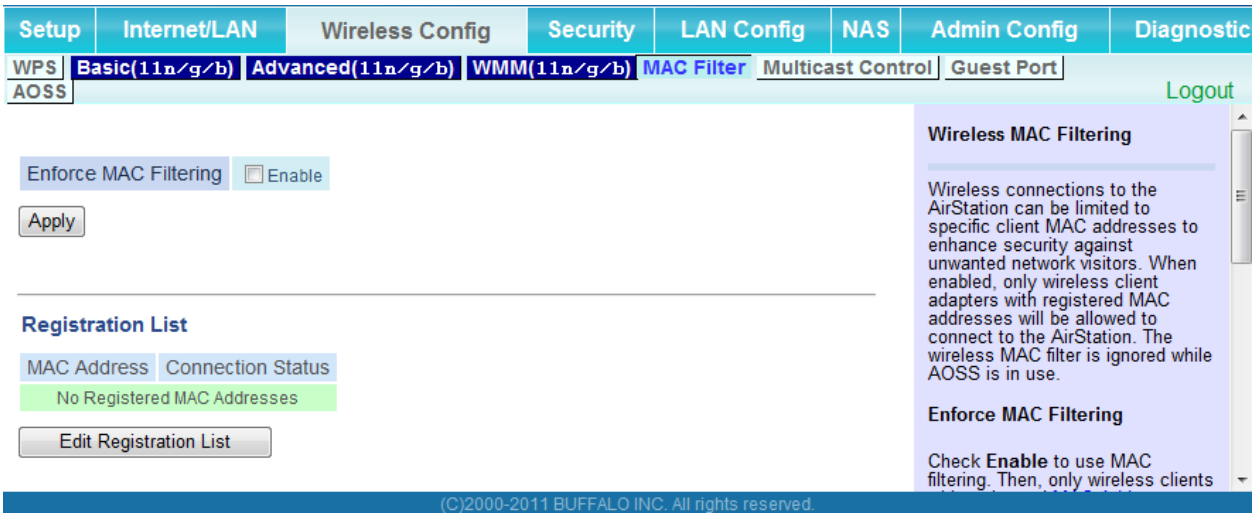

Parameter	Meaning
Enforce MAC Filtering	Enable to restrict wireless connections to devices with registered MAC addresses.
Registration List	Displays the MAC addresses of registered devices which are permitted to connect wirelessly.
Edit Registration List	Adds a wireless device to the list of permitted devices.
MAC Addresses to be Registered	Enter a MAC address of a wireless device to permit to connect to the AirStation. Click [Register] to add that MAC address to the list.
List of all clients associated with this AirStation	Display the list of all MAC addresses of wireless devices connected to the AirStation.

Multicast Control

Configure restrictions on unnecessary multicast packets sent to the wireless LAN port.

Parameter	Meaning
Snooping	If enabled, snooping supervises multicast administrative packets such as IGMP and restricts unnecessary multicast transfers to wired or wireless ports.
Multicast Aging Time	Set the time to hold the data from multicast snooping in the range of 1 to 3600 (seconds). Enter a value bigger than the IGMP/MLD query interval.

Guest Port

Configure the AirStation's guest port.

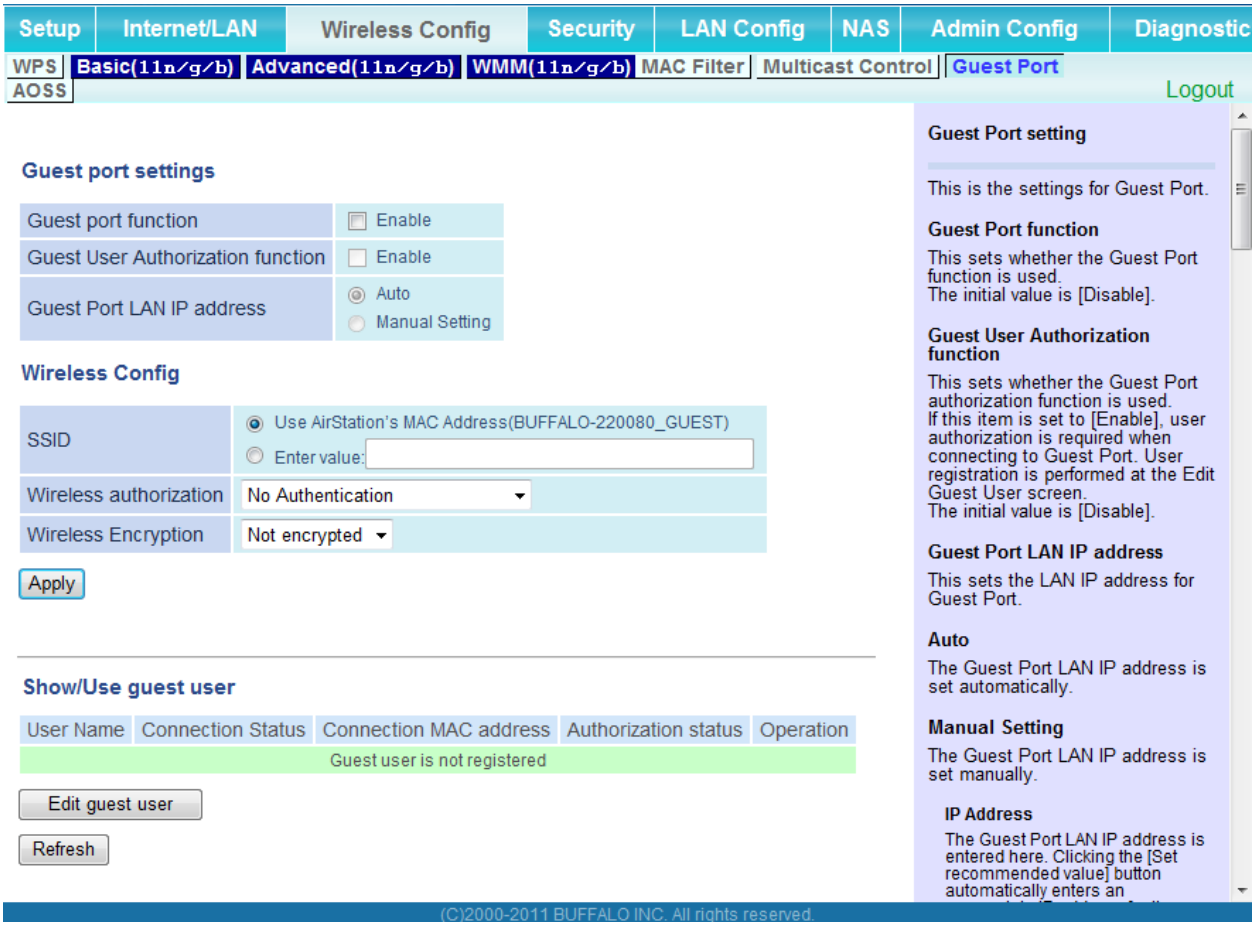

Parameter	Meaning
Guest port function	This sets whether the guest port function is enabled.
Guest User Authorization function	This sets whether authorization is performed for users who use the guest port.
Guest Port LAN IP address	This sets the LAN-side IP address for the guest port.
Guest user DHCP server function	This sets whether IP addresses are automatically assigned for devices connected to the guest port.
SSID	This sets the SSID for the guest port.

Parameter	Meaning
Wireless authorization	This sets whether wireless authorization is performed for the guest port.
Wireless Encryption	This sets the wireless encryption system for the guest port.
WPA-PSK(Pre-Shared Key)	This sets the wireless encryption key for the guest port.
Edit guest user	Click to register a user who is using the guest port.
Username	This sets the name of the user using the guest port.
Password	This sets the password of the user using the guest port.

Guest User Settings

To enable guest users, configure the AirStation with the settings below, then click [Apply].

Guest port : Enabled
Guest User Authorization : Disabled
Guest Port LAN IP address : Auto
SSID : Guest
Wireless authorization : No Authentication
Wireless Encryption : Not encrypted

Notes: Wireless clients connected to the guest SSID can connect to the Internet only.
Communication with other devices on the LAN is not allowed.
To allow only registered guests to connect, enable Guest User Authorization, click [Edit guest user], and register the user.

AOSS

AOSS Status and Settings.

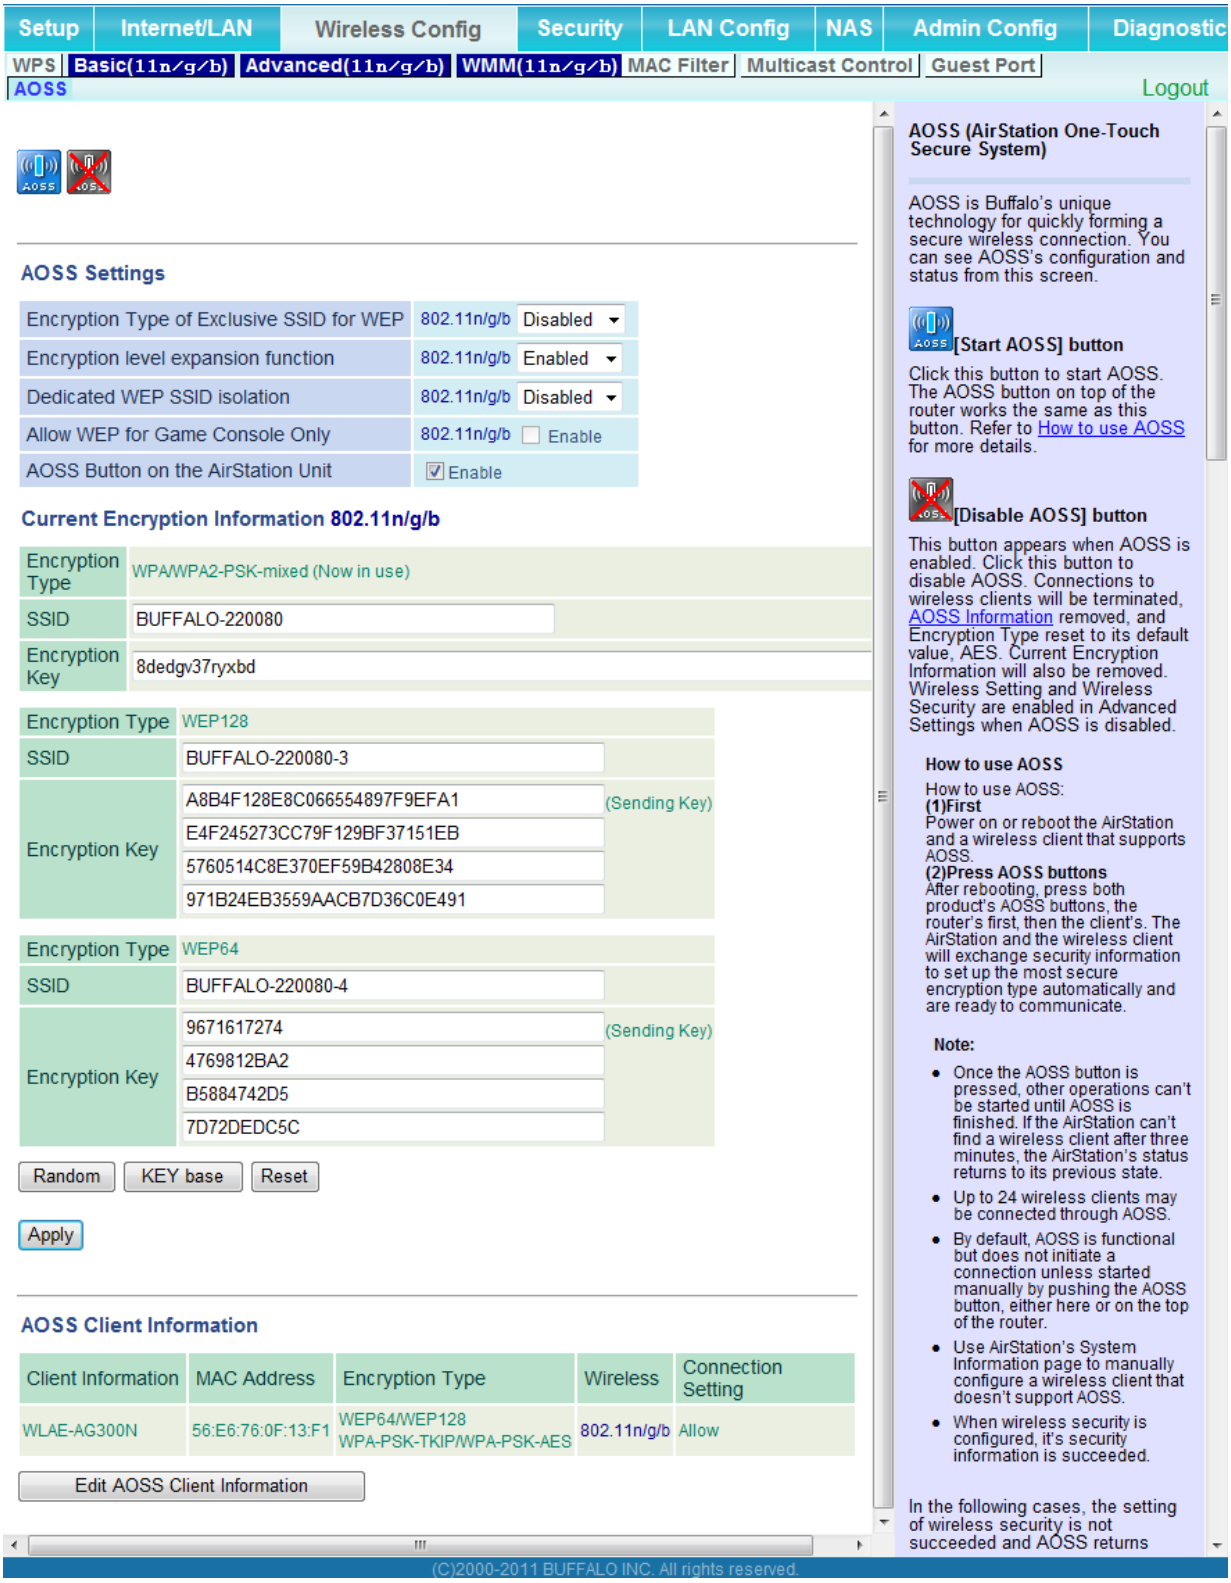
Setup
Internet/LAN
Wireless Config
Security
LAN Config
NAS
Admin Config
Diagnostic
WPS
Basic(11n/g/b)
Advanced(11n/g/b)
WMM(11n/g/b)
MAC Filter
Multicast Control
Guest Port
AOSS
Logout
AOSS Settings
Encryption Type of Exclusive SSID for WEP
802.11n/g/b Disabled
Encryption level expansion function
802.11n/g/b Enabled
Dedicated WEP SSID isolation
802.11n/g/b Disabled
Allow WEP for Game Console Only
802.11n/g/b Enable
AOSS Button on the AirStation Unit
Enable
Current Encryption Information 802.11n/g/b
Encryption Type
WPA/WPA2-PSK-mixed (Now in use)
SSID
BUFFALO-220080
Encryption Key
8dedgv37ryxbd
Encryption Type
WEP128
SSID
BUFFALO-220080-3
Encryption Key
A8B4F128E8C066554897F9EFA1
(Sending Key)
E4F245273CC79F129BF37151EB
5760514C8E370EF59B42808E34
971B24EB3559AACB7D36C0E491
Encryption Type
WEP64
SSID
BUFFALO-220080-4
Encryption Key
9671617274
(Sending Key)
4769812BA2
B5884742D5
7D72DEDC5C
Random
KEY base
Reset
Apply
AOSS Client Information
Client Information
MAC Address
Encryption Type
Wireless
Connection Setting
WLAE-AG300N
56:E6:76:0F:13:F1
WEP64/WEP128 WPA-PSK-TKIP/WPA-PSK-AES
802.11n/g/b
Allow
Edit AOSS Client Information
AOSS (AirStation One-Touch Secure System)
AOSS is Buffalo's unique technology for quickly forming a secure wireless connection. You can see AOSS's configuration and status from this screen.
[Start AOSS] button
Click this button to start AOSS. The AOSS button on top of the router works the same as this button. Refer to How to use AOSS for more details.
[Disable AOSS] button
This button appears when AOSS is enabled. Click this button to disable AOSS. Connections to wireless clients will be terminated, AOSS Information removed, and Encryption Type reset to its default value, AES. Current Encryption Information will also be removed. Wireless Setting and Wireless Security are enabled in Advanced Settings when AOSS is disabled.
How to use AOSS
How to use AOSS:
(1)First
Power on or reboot the AirStation and a wireless client that supports AOSS.
(2)Press AOSS buttons
After rebooting, press both product's AOSS buttons, the router's first, then the client's. The AirStation and the wireless client will exchange security information to set up the most secure encryption type automatically and are ready to communicate.
Note:
Once the AOSS button is pressed, other operations can't be started until AOSS is finished. If the AirStation can't find a wireless client after three minutes, the AirStation's status returns to its previous state.
Up to 24 wireless clients may be connected through AOSS.
By default, AOSS is functional but does not initiate a connection unless started manually by pushing the AOSS button, either here or on the top of the router.
Use AirStation's System Information page to manually configure a wireless client that doesn't support AOSS.
When wireless security is configured, it's security information is succeeded.
In the following cases, the setting of wireless security is not succeeded and AOSS returns
(C)2000-2011 BUFFALO INC. All rights reserved.

Parameter	Meaning
	Initiates AOSS automatic wireless configuration. Click this, then press or click the AOSS button on your AOSS-compatible wireless client. Repeat for additional AOSS clients.
	Click this button to disconnect AOSS connections. Note: If AOSS connections are disconnected, the SSID and encryption keys will be restored to their last settings from before AOSS was used.
Encryption Type of Exclusive SSID for WEP	You may allow a separate SSID specifically for WEP connections. If "disabled" is selected, then clients will not be able to connect with WEP.
Encryption level expansion function	Expands security method from AES to WPA/WPA2-PSK-mixed mode.
Dedicated WEP SSID isolation	Set a separate SSID and network segment specifically for WEP connections. Devices connected with WEP will not be able to communicate with devices connected using AES/TKIP. All connected devices will be able to communicate with the internet.
Allow WEP for Game console only	When enabled, the AirStation allows wireless devices to connect with 64-bit or 128-bit WEP.
AOSS Button on the AirStation Unit	Uncheck to disable the physical AOSS button on the AirStation.
Current Encryption Information (AOSS connection only)	Displays the encryption type, SSID, and encryption key configured by AOSS.
[Random]	Click to enter random values for SSID, encryption key, and other settings.
[KEY base]	Click to return the SSID, encryption key, and other wireless settings to the values on the case sticker.
[Reset]	Click to return the SSID, encryption key, and other wireless settings to their previous values.
AOSS Client Information	Displays AOSS clients connected to the AirStation and information of the devices which are wirelessly communicated.
AOSS Ethernet Converter Information Only displayed if there are AOSS Connections	Displays information about Ethernet converters connected to the AirStation via AOSS.

Security (Router Mode only)

Firewall (Router Mode only)

Configure the AirStation's firewall.

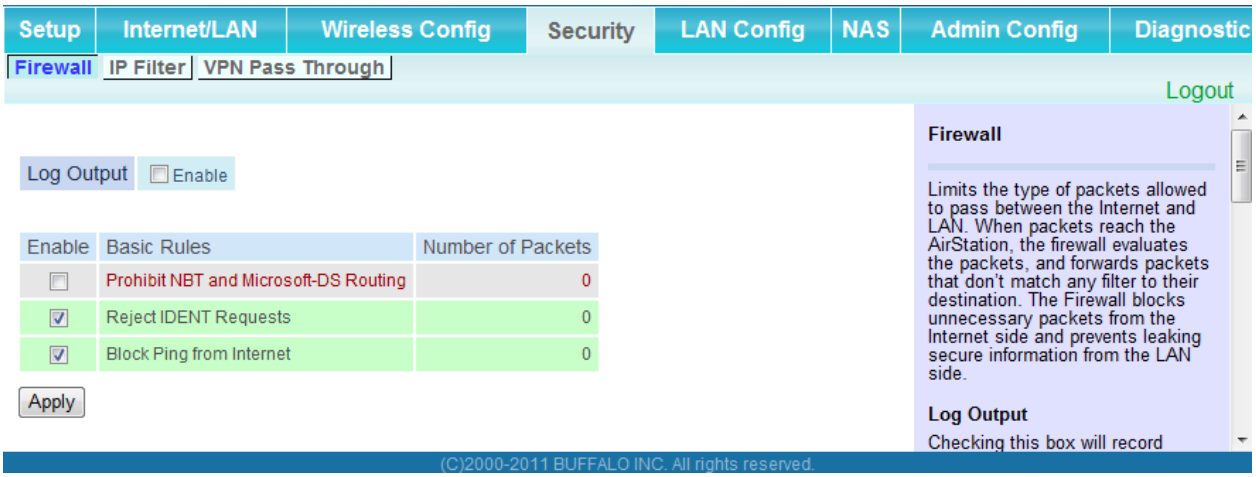

Parameter	Meaning
Log Output	Enable to output a log of firewall activity.
Basic Rules	Enable to use any of the quick filters. Preconfigured quick filters include: **Prohibit NBT and Microsoft-DS Routing** Enabling this blocks communication using these protocols from the WAN side to the LAN side or from the LAN side to the Internet. You can configure this with PPPoE if you select [Use PPPoE Client] or [Use IP Unnumbered] in Method of Acquiring IP address (page 34), or if Easy Setup identified a PPPoE connection during setup.

Parameter	Meaning
	Reject IDENT Requests Enabling this option will answer IDENT requests from the Internet side with corresponding rejection packets. Enable this option if you experienced slow transfer speeds for network applications such as mail, ftp or web browsing. If you have configured transfer of IDENT requests to the LAN side computer in the address translation settings (DMZ or TCP port 113), then that setting has higher priority, and overrides this setting. **Block Ping from Internet** If this is enabled, the AirStation will not respond to pings from the Internet side. You can configure this with PPPoE if you select [Use PPPoE Client] or [Use IP Unnumbered] in Method of Acquiring IP address (page 34), or if Easy Setup identified a PPPoE connection during setup.

IP Filter (Router Mode only)

Edit IP filters.

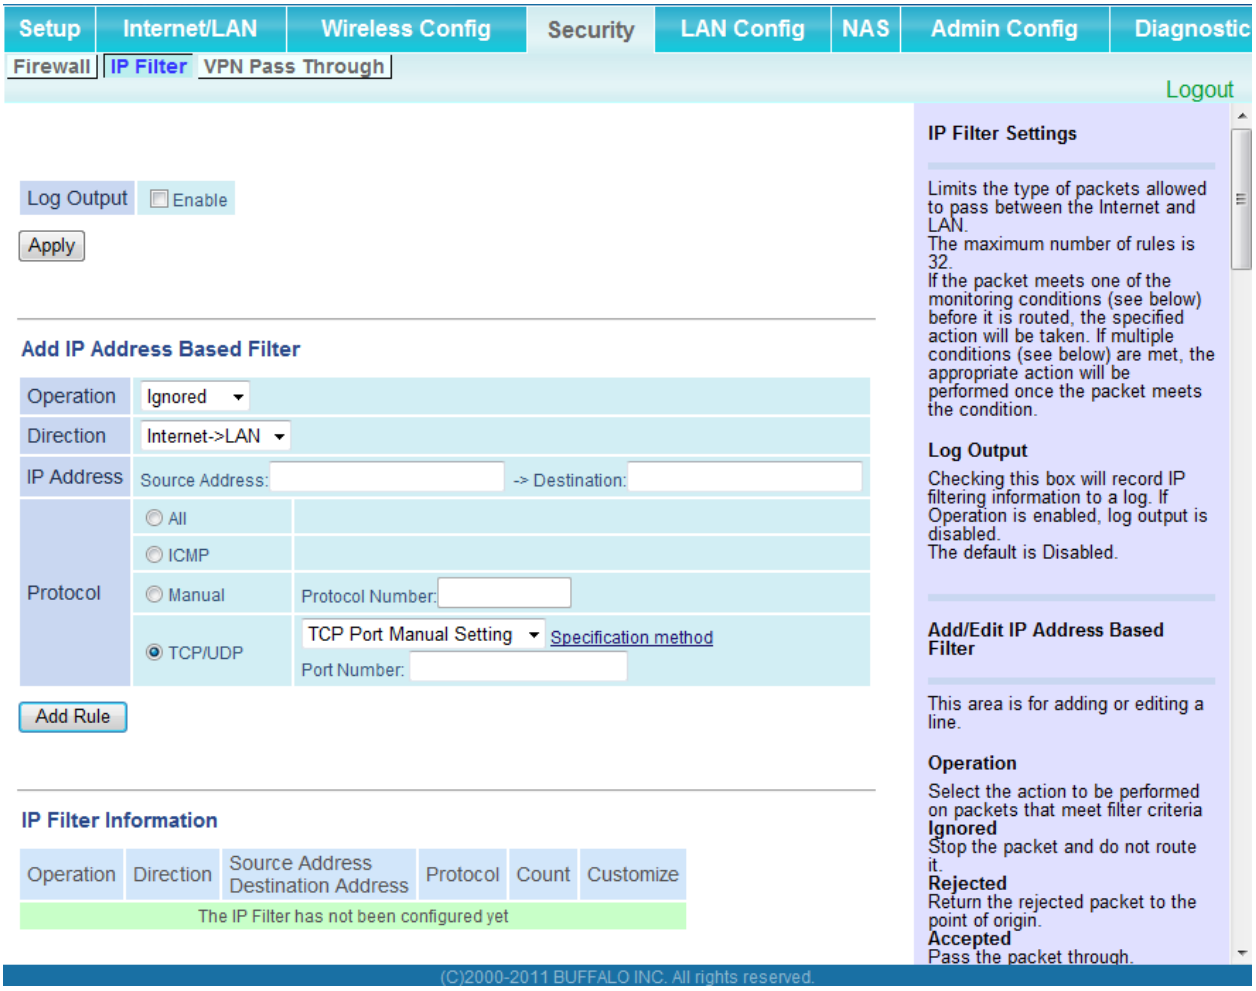

Parameter	Meaning
Log Output	If enabled, IP filter activity is saved to a log.
Operation	Specify how to process target packets.
Direction	Specify the transmission direction of target packets.
IP Address	Specify the sender's IP address and receiver's IP address of the target packets.
Protocol	Select a protocol for target transmission packet.
IP Filter Information	Display the list of IP filters which have been registered.

VPN Passthrough (Router Mode only)

Configure IPv6 passthrough, PPPoE passthrough, and PPTP passthrough.

Parameter	Meaning
IPv6 Passthrough	Enable to use IPv6 Passthrough for address translation.
PPPoE Passthrough	Enable to use PPPoE bridging. PPPoE bridging lets you automatically obtain an IP address from your provider for your LAN-side computer using the PPPoE protocol because PPPoE packets can pass between the Internet and LAN.
PPTP Passthrough	Enable to use PPTP passthrough for address translation.

LAN Config

Port Forwarding (Router Mode only)

Configure port translation.

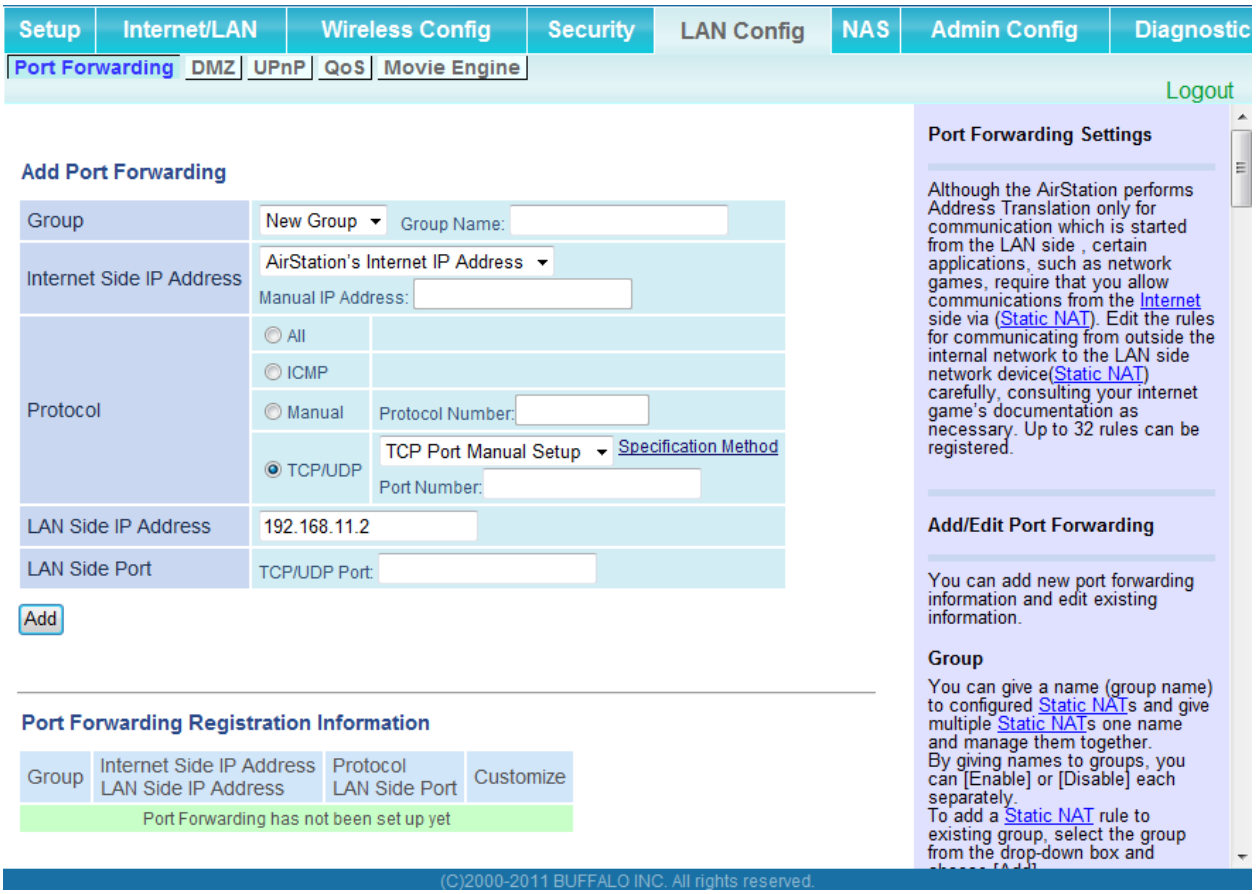
Setup
Internet/LAN
Wireless Config
Security
LAN Config
NAS
Admin Config
Diagnostic
Port Forwarding
DMZ
UPnP
QoS
Movie Engine
Logout
Add Port Forwarding
Group
New Group
Group Name:
Internet Side IP Address
AirStation's Internet IP Address
Manual IP Address:
Protocol
All
ICMP
Manual
Protocol Number:
TCP/UDP
TCP Port Manual Setup
Specification Method
Port Number:
LAN Side IP Address
192.168.11.2
LAN Side Port
TCP/UDP Port:
Add
Port Forwarding Registration Information
Group
Internet Side IP Address
LAN Side IP Address
Protocol
LAN Side Port
Customize
Port Forwarding has not been set up yet
Port Forwarding Settings
Although the AirStation performs Address Translation only for communication which is started from the LAN side , certain applications, such as network games, require that you allow communications from the Internet side via (Static NAT). Edit the rules for communicating from outside the internal network to the LAN side network device(Static NAT) carefully, consulting your internet game's documentation as necessary. Up to 32 rules can be registered.
Add/Edit Port Forwarding
You can add new port forwarding information and edit existing information.
Group
You can give a name (group name) to configured Static NATs and give multiple Static NATs one name and manage them together.
By giving names to groups, you can [Enable] or [Disable] each separately.
To add a Static NAT rule to existing group, select the group from the drop-down box and
(C)2000-2011 BUFFALO INC. All rights reserved.

Parameter	Meaning
Group	Specify a group name for a new rule to belong to. Select [New Group] and enter the new group name in the Group Name field to create a new group. A group name can include up to 16 alphanumeric characters.
Internet Side IP Address	Enter the Internet side IP address (before translation) for the port translation table entry.
Protocol	Select the Internet side protocol (before translation) for the port translation table entry.

Parameter	Meaning
LAN Side IP Address	Enter the LAN side IP address (after translation) for the port translation table entry.
LAN Side Port	Select the LAN side (after translation) port number (1 - 65535) for the port translation table entry.
Port Forwarding Registration Information	Shows current entries in the port translation table.

DMZ (Router Mode only)

Configure a destination to transfer communication packets without a LAN side destination to.

Parameter	Meaning
IP Address of DMZ	Enter the IP address of the destination to which packets which are not routed by a port translation table are forwarded. Note: RIP protocol packets (UDP port number 520) will not be forwarded.

UPnP (Router Mode only)

Configure UPnP (Universal Plug and Play).

Parameter	Meaning
UPnP	Enable or disable Universal Plug and Play (UPnP) functionality.

QoS (Router Mode only)

Configure the priority of packets sent to the Internet.

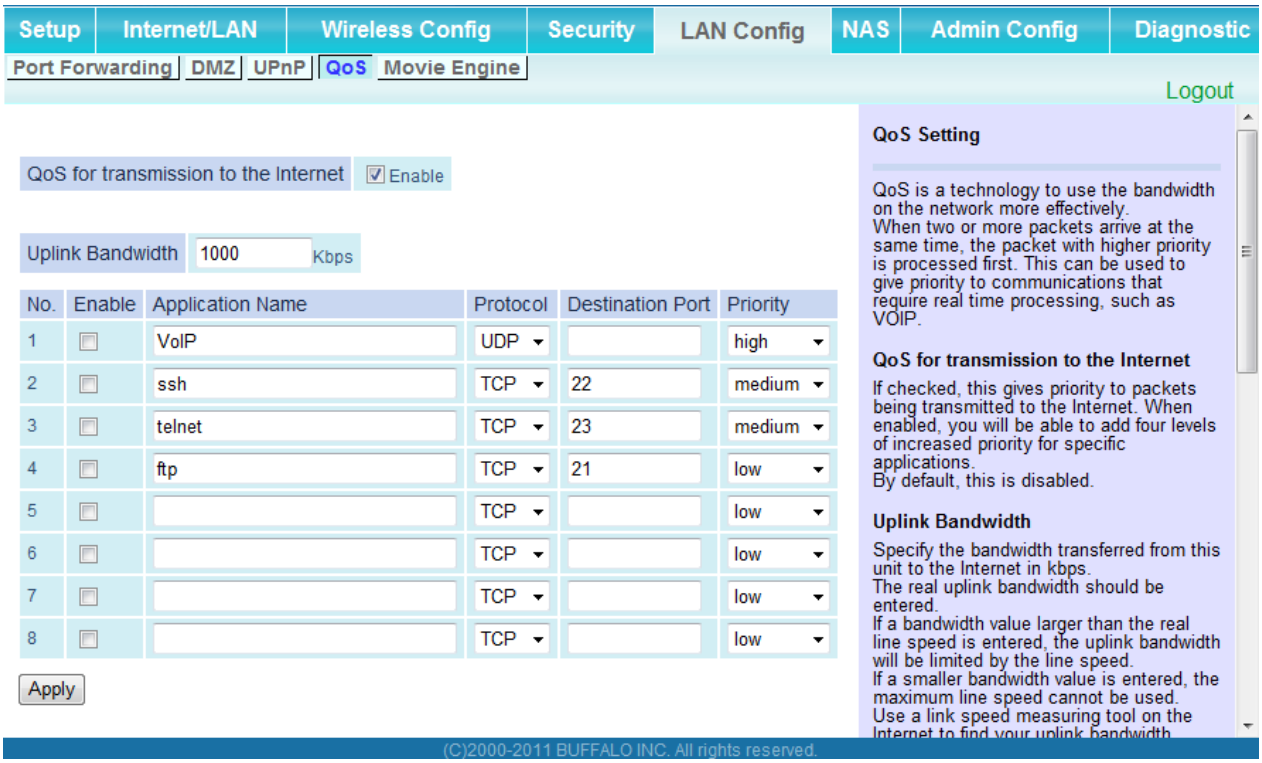
Setup
Internet/LAN
Wireless Config
Security
LAN Config
NAS
Admin Config
Diagnostic
Port Forwarding
DMZ
UPnP
QoS
Movie Engine
Logout
QoS for transmission to the Internet
Enable
Uplink Bandwidth
1000
Kbps
No.
Enable
Application Name
Protocol
Destination Port
Priority
1 VoIP UDP high
2 ssh TCP 22 medium
3 telnet TCP 23 medium
4 ftp TCP 21 low
5 TCP low
6 TCP low
7 TCP low
8 TCP low
Apply
QoS Setting
QoS is a technology to use the bandwidth on the network more effectively.
When two or more packets arrive at the same time, the packet with higher priority is processed first. This can be used to give priority to communications that require real time processing, such as VOIP.
QoS for transmission to the Internet
If checked, this gives priority to packets being transmitted to the Internet. When enabled, you will be able to add four levels of increased priority for specific applications.
By default, this is disabled.
Uplink Bandwidth
Specify the bandwidth transferred from this unit to the Internet in kbps.
The real uplink bandwidth should be entered.
If a bandwidth value larger than the real line speed is entered, the uplink bandwidth will be limited by the line speed.
If a smaller bandwidth value is entered, the maximum line speed cannot be used.
Use a link speed measuring tool on the Internet to find your uplink bandwidth.
(C)2000-2011 BUFFALO INC. All rights reserved.

Parameter	Meaning
QoS for transmission to the Internet	Determine whether or not to prioritize packets sent to the Internet. Check this box to enable QoS.
Upload bandwidth	Specify the upstream bandwidth in kbps from the AirStation to the internet side. Set the actual value for the upstream bandwidth.
Enable	Enable or disable this entry.
application name	Enter an application name. Names may use up to 32 alphanumerical characters, double or single tick marks ("'), quotation marks (”), and semicolons (;).
protocol	Select either TCP or UDP.
destination Port	Specify a destination port from 1 - 65535. If this field is empty, a random port is selected.

Parameter	Meaning
priority	Select high, medium or low. If packets do not qualify for classification as a type on the list, then their priority is treated as a level between medium and low.

Movie Engine (QoS)

Configure Movie Engine options.

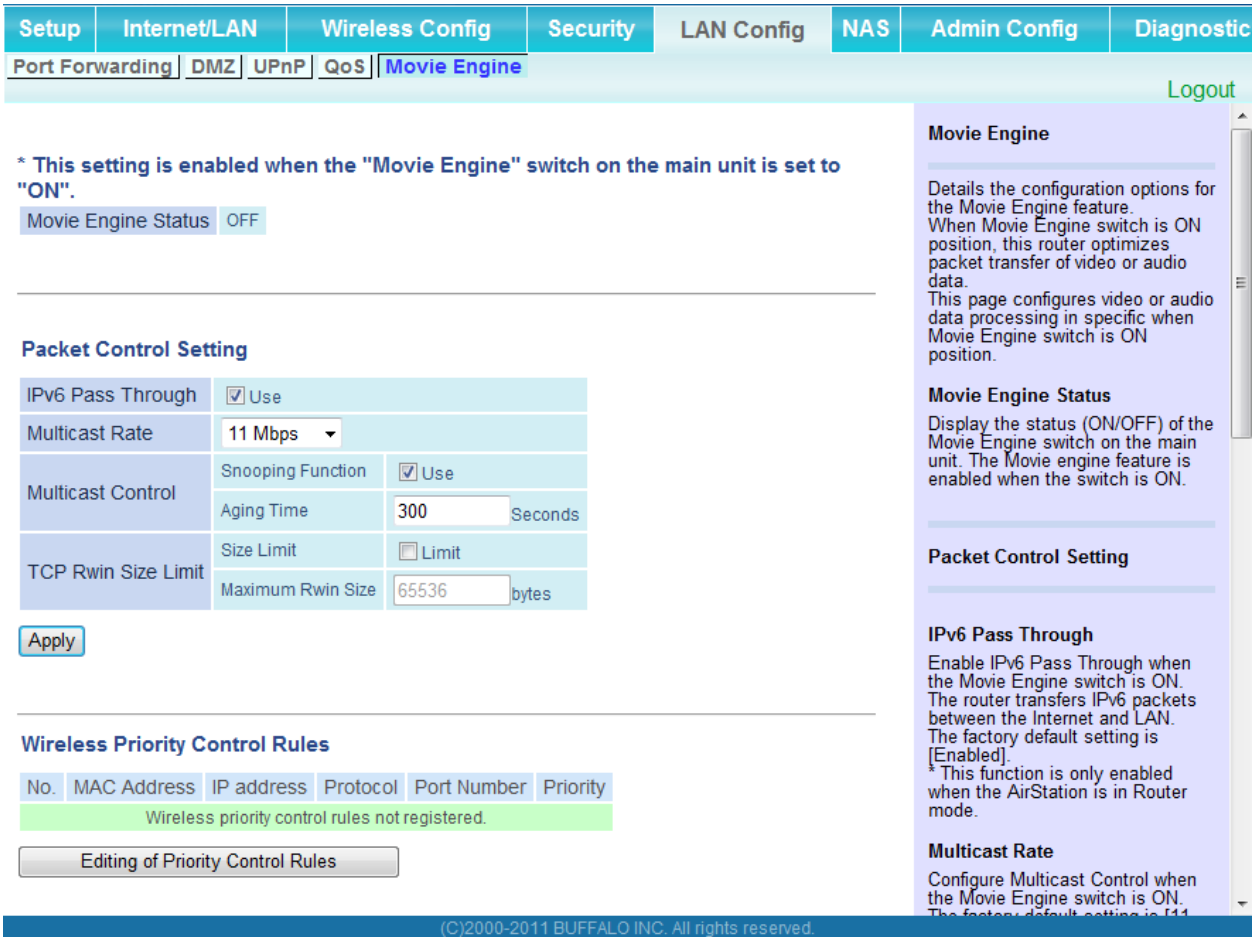
Setup
Internet/LAN
Wireless Config
Security
LAN Config
NAS
Admin Config
Diagnostic
Port Forwarding
DMZ
UPnP
QoS
Movie Engine
Logout
* This setting is enabled when the "Movie Engine" switch on the main unit is set to "ON".
Movie Engine Status
OFF
Packet Control Setting
IPv6 Pass Through
Use
Multicast Rate
11 Mbps
Multicast Control
Snooping Function
Use
Aging Time
300
Seconds
TCP Rwin Size Limit
Size Limit
Limit
Maximum Rwin Size
65536
bytes
Apply
Wireless Priority Control Rules
No.
MAC Address
IP address
Protocol
Port Number
Priority
Wireless priority control rules not registered.
Editing of Priority Control Rules
Movie Engine
Details the configuration options for the Movie Engine feature.
When Movie Engine switch is ON position, this router optimizes packet transfer of video or audio data.
This page configures video or audio data processing in specific when Movie Engine switch is ON position.
Movie Engine Status
Display the status (ON/OFF) of the Movie Engine switch on the main unit. The Movie engine feature is enabled when the switch is ON.
Packet Control Setting
IPv6 Pass Through
Enable IPv6 Pass Through when the Movie Engine switch is ON. The router transfers IPv6 packets between the Internet and LAN. The factory default setting is [Enabled].
* This function is only enabled when the AirStation is in Router mode.
Multicast Rate
Configure Multicast Control when the Movie Engine switch is ON.
(C)2000-2011 BUFFALO INC. All rights reserved.

Parameter	Meaning
Movie Engine switch status	Displays the status of the Movie Engine switch.
IPv6 Passthrough	Set to enable the IPv6 pass-through.
Multicast Rate	Select the Multicast Control rate.
Multicast Control	Turn on Multicast Control.
TCP Rwin Size Limit	Limits the maximum size of TCP Rwin packets passing through the AirStation's wireless LAN.
Wireless Priority Control Rules	Display the list of rules controlling the priority of packets passing through the AirStation's wireless LAN.

NAS

Disk management

View the status of and configure attached USB hard disks.

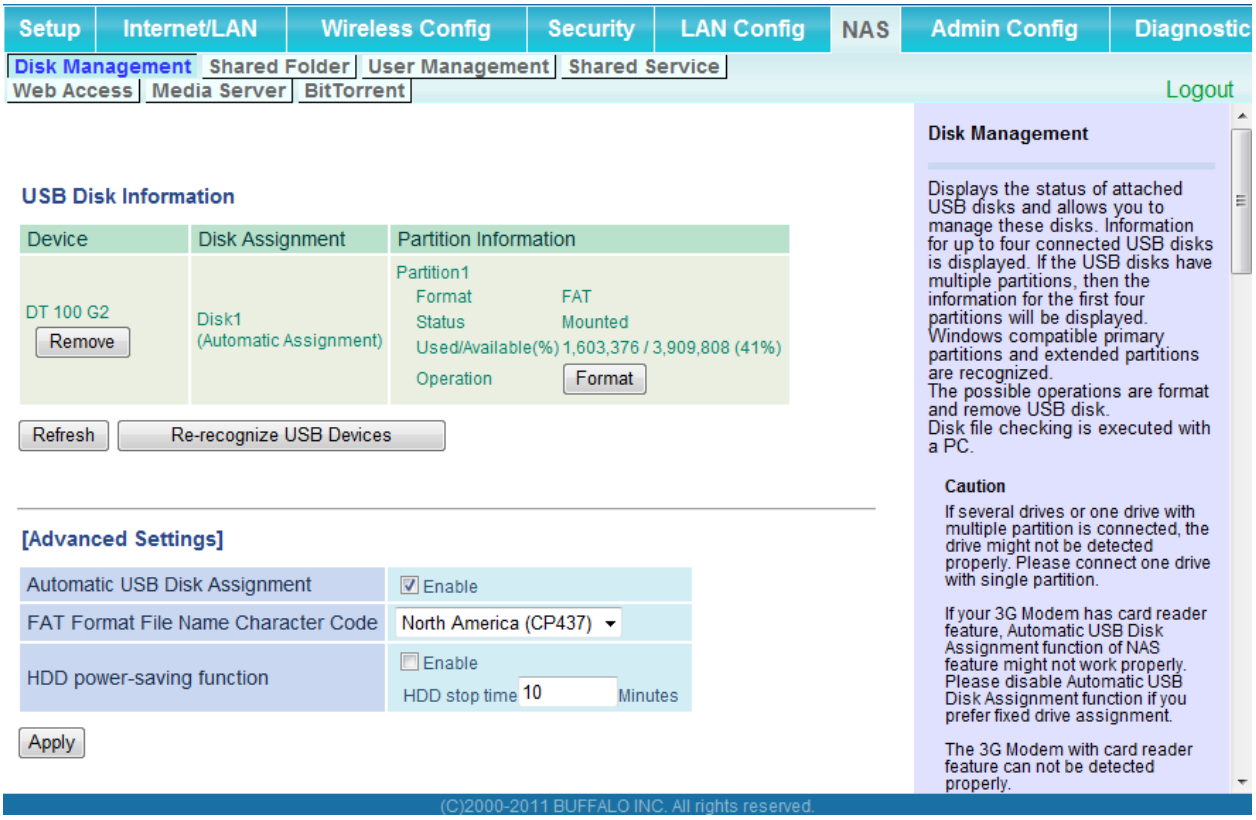
Setup
Internet/LAN
Wireless Config
Security
LAN Config
NAS
Admin Config
Diagnostic
Disk Management
Shared Folder
User Management
Shared Service
Web Access
Media Server
BitTorrent
Logout
USB Disk Information
Device
Disk Assignment
Partition Information
DT 100 G2
Remove
Disk1
(Automatic Assignment)
Partition1
Format FAT
Status Mounted
Used/Available(%) 1,603,376 / 3,909,808 (41%)
Operation
Format
Refresh
Re-recognize USB Devices
[Advanced Settings]
Automatic USB Disk Assignment
Enable
FAT Format File Name Character Code
North America (CP437)
HDD power-saving function
Enable
HDD stop time 10 Minutes
Apply
Disk Management
Displays the status of attached USB disks and allows you to manage these disks. Information for up to four connected USB disks is displayed. If the USB disks have multiple partitions, then the information for the first four partitions will be displayed.
Windows compatible primary partitions and extended partitions are recognized.
The possible operations are format and remove USB disk.
Disk file checking is executed with a PC.
Caution
If several drives or one drive with multiple partition is connected, the drive might not be detected properly. Please connect one drive with single partition.
If your 3G Modem has card reader feature, Automatic USB Disk Assignment function of NAS feature might not work properly. Please disable Automatic USB Disk Assignment function if you prefer fixed drive assignment.
The 3G Modem with card reader feature can not be detected properly.
(C)2000-2011 BUFFALO INC. All rights reserved.

Parameter	Meaning
Device	Displays information for attached USB disks. Disks are removed when [Remove] in the Device column is clicked.
Disk Assignment	A disk number will be automatically assigned to the disk or you can choose a number. Select a disk number, or select [Do not assign], then click [Apply].
Partition Information	Displays the partition information for the selected USB disk. Click [Format] to format the disk. Note: formatting a disk will erase all information on it.
Re-recognize USB devices	Click this to re-scan for connected USB disks.

Parameter	Meaning
Automatic USB Disk Assignment	Check [Enable] to automatically select an attached USB hard disk. The entire drive will be used as the shared folder. To configure your disk and share manually, uncheck [Enable]. [Enable] is selected by default.
FAT format file name character code	Select the character code for filenames in FAT formatted partitions.
HDD power-saving function	Click [Enable] to enable power saving mode.
HDD stop time	Powers down the drive after this duration of time.

Shared Folder

Configure a USB hard disk for use with shared folders.

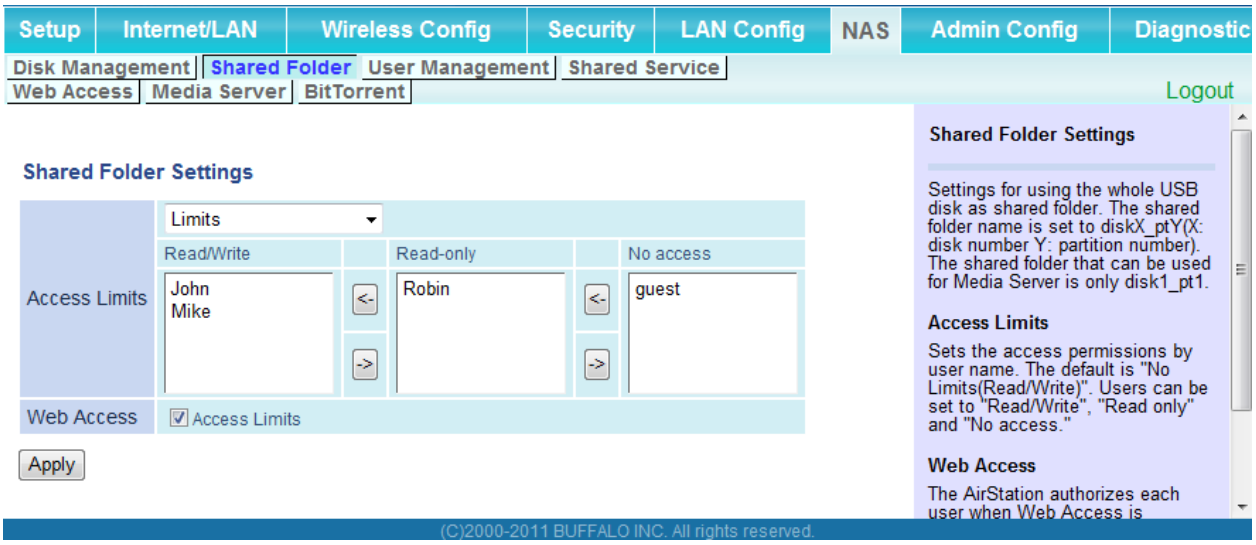

Parameter	Meaning
Shared Folder Name*	Enter a name for the shared folder. Up to 18 alphanumeric characters, spaces, hyphens (-), and underscores (_) may be used.
Shared Folder Description*	Enter a description of the shared folder (optional). Up to 75 alphanumeric characters, spaces, hyphens (-), and underscores (_) may be used.
Disk Partition Area*	Displays the partition area, format type, and the capacity of the USB disk.
Disclosed to*	Check the functionality that you want to support. Win/Mac OS (Samba NAS), Web Access, Media Server, and/or BitTorrent may be checked. Only one folder may be chosen for either Media Server or BitTorrent functionality.
Access Limits	If access limits are enabled, use the arrows to move highlighted users between the columns for [Read/Write], [Read-only], or [No access] privileges.

Parameter	Meaning
Web Access	You may also select to enforce access limits on users accessing through Web Access by checking the Access Limits checkbox. Users will have the same access levels as assigned above. If Access Limits is not checked, then all users accessing the shared folder via Web Access will have [Read only] access..
Shared Folder Registration Information*	Displays information about the shared folder.

* This is not displayed when Automatic USB Disk Assignment (page 72) is used:

The following shared folder settings are used when Disk Management is activated:

- All folders: Access limits in effect.
- Shared Folder/ Web Access: All folders are shared.
- Media Server/BitTorrent: The first folder is shared.

User Management

This screen lets you add users to the access list with the ability to access shared folders.

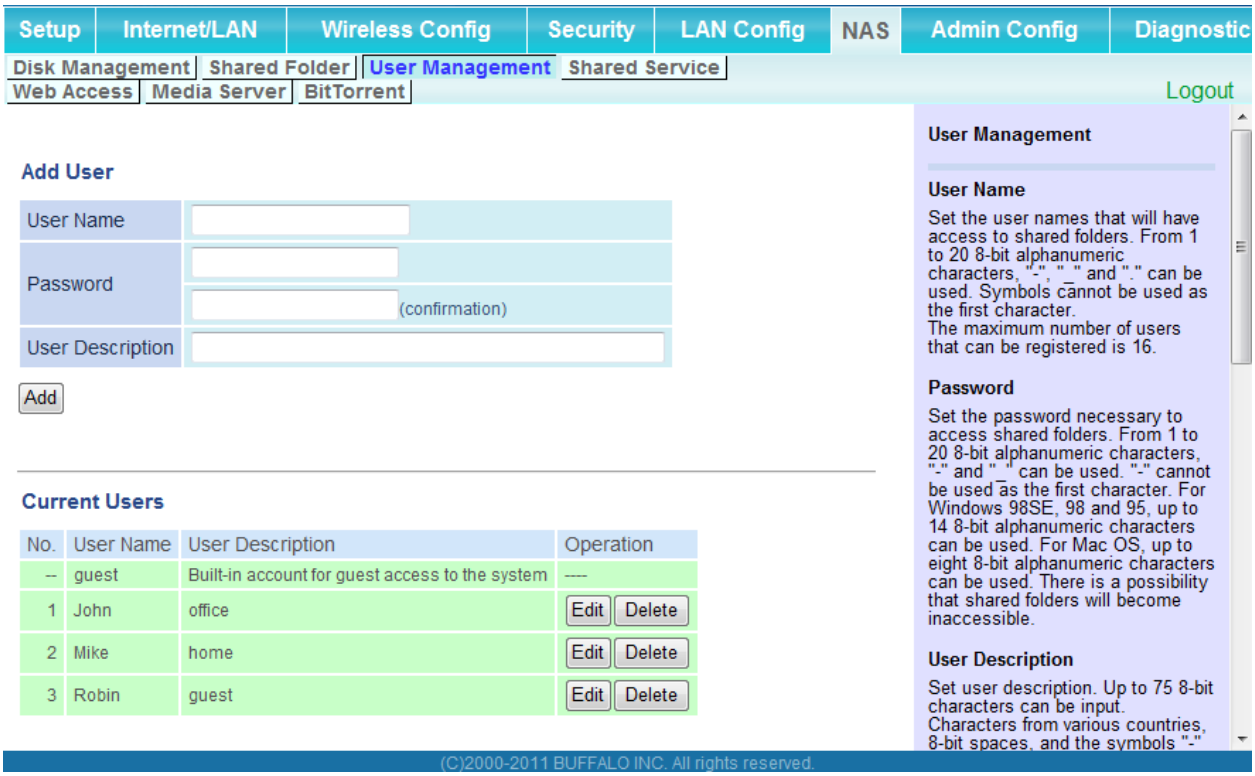
Setup
Internet/LAN
Wireless Config
Security
LAN Config
NAS
Admin Config
Diagnostic
Disk Management
Shared Folder
User Management
Shared Service
Web Access
Media Server
BitTorrent
Logout
Add User
User Name
Password
(confirmation)
User Description
Add
Current Users
No.
User Name
User Description
Operation
-- guest Built-in account for guest access to the system ----
1 John office Edit Delete
2 Mike home Edit Delete
3 Robin guest Edit Delete
User Management
User Name
Set the user names that will have access to shared folders. From 1 to 20 8-bit alphanumeric characters, "-", "_" and "." can be used. Symbols cannot be used as the first character.
The maximum number of users that can be registered is 16.
Password
Set the password necessary to access shared folders. From 1 to 20 8-bit alphanumeric characters, "-" and "_" can be used. "-" cannot be used as the first character. For Windows 98SE, 98 and 95, up to 14 8-bit alphanumeric characters can be used. For Mac OS, up to eight 8-bit alphanumeric characters can be used. There is a possibility that shared folders will become inaccessible.
User Description
Set user description. Up to 75 8-bit characters can be input.
Characters from various countries,
8-bit spaces, and the symbols "-"
(C)2000-2011 BUFFALO INC. All rights reserved.

Parameter	Meaning
Username	Enter the name of a user to be given access to the shared folder. Up to 20 alphanumeric characters, space, hyphens (-), and underscores (_) may be used for each user. Up to 16 users may be entered.
Password	Enter the user's password. Use of the same password that they use to log into their computer is recommended. Up to 20 alphanumeric characters, spaces, hyphens (-), and underscores (_) may be used. For Windows 98SE/98/95 users, up to 14 alphanumeric characters may be used. Mac OS users may use up to 8 alphanumeric characters. If you enter a longer password than your users can use, then they will not be able to access the share.
User Description	Describe the user (optional). Up to 75 alphanumeric characters, spaces, hyphens (-), and underscores (_) may be used.
Current Users	Lists current users, including "guest". Guest is a built-in account that cannot be changed or deleted.

Shared Service

Assign AirStation and workgroup names to access shared folders.

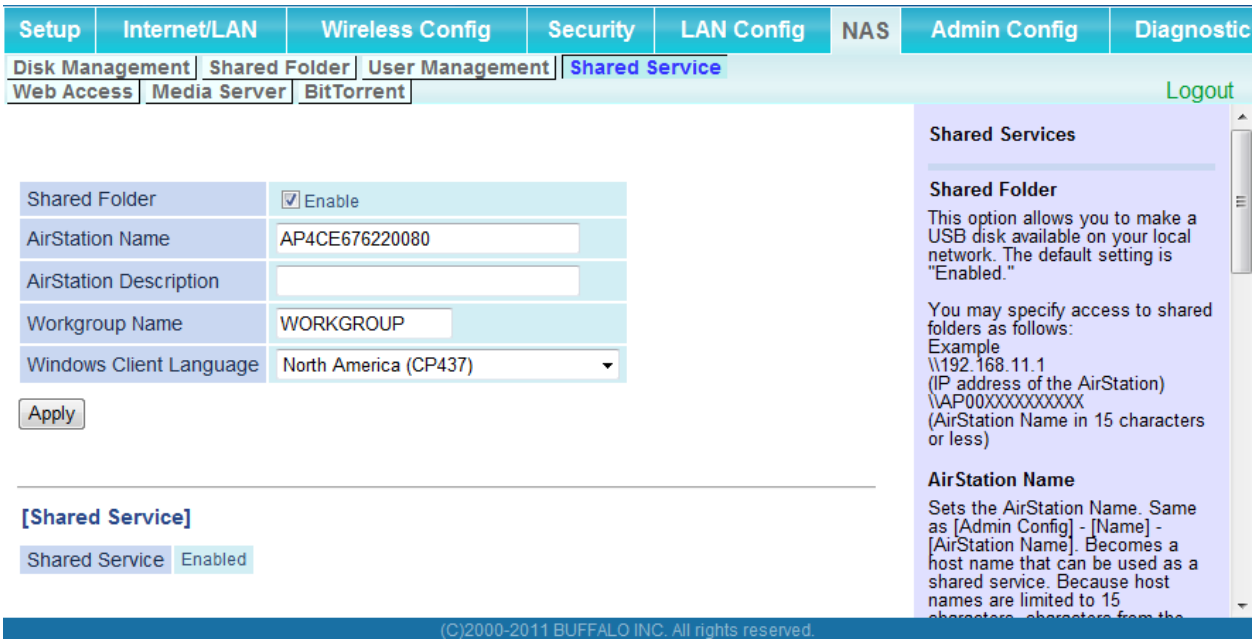

Parameter	Meaning
Shared Folder	Enable to make a USB disk available on your local network.
AirStation name	Rename your AirStation if desired. Up to 15 alphanumeric characters, space, and hyphens (-), may be used. The AirStation name is also used as the hostname that will be used with the shared service. The shared service may not be available if you use over 15 alphanumeric characters in your AirStation's name.
AirStation Description	Describe the AirStation (optional). Up to 48 alphanumeric characters, space, hyphens (-), and underscores (_) may be used.
Workgroup name	Enter your workgroup name. Up to 15 alphanumeric characters, space, hyphens (-), underscores (_), and periods (.) may be used.
Windows Client Language	Select the language to be used by the Windows client.
Shared Service	Displays the status of the USB disk that is used with the shared service.

Web Access

The screen to configure Web Access.

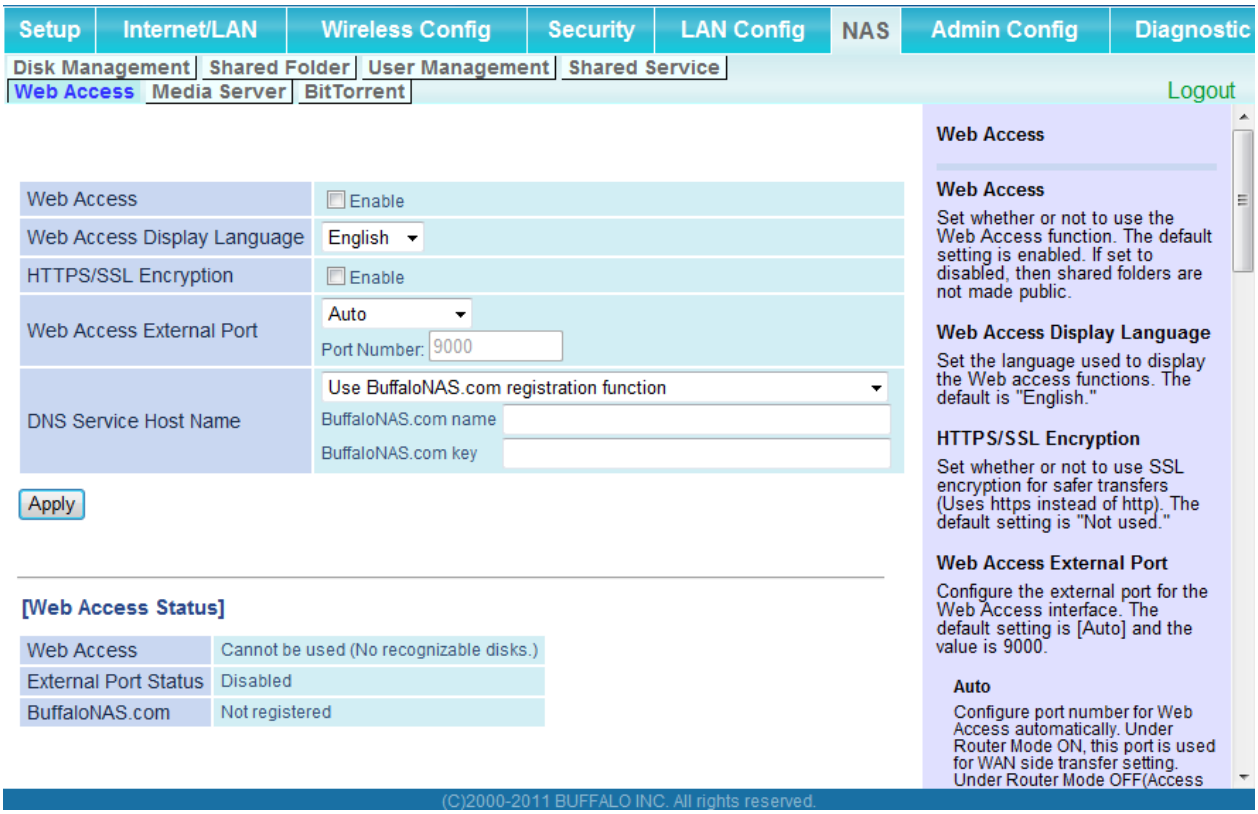
Setup
Internet/LAN
Wireless Config
Security
LAN Config
NAS
Admin Config
Diagnostic
Disk Management
Shared Folder
User Management
Shared Service
Web Access
Media Server
BitTorrent
Logout
Web Access
Enable
Web Access Display Language
English
HTTPS/SSL Encryption
Enable
Web Access External Port
Auto
Port Number: 9000
DNS Service Host Name
Use BuffaloNAS.com registration function
BuffaloNAS.com name
BuffaloNAS.com key
Apply
[Web Access Status]
Web Access
Cannot be used (No recognizable disks.)
External Port Status
Disabled
BuffaloNAS.com
Not registered
Web Access
Web Access
Set whether or not to use the Web Access function. The default setting is enabled. If set to disabled, then shared folders are not made public.
Web Access Display Language
Set the language used to display the Web access functions. The default is "English."
HTTPS/SSL Encryption
Set whether or not to use SSL encryption for safer transfers (Uses https instead of http). The default setting is "Not used."
Web Access External Port
Configure the external port for the Web Access interface. The default setting is [Auto] and the value is 9000.
Auto
Configure port number for Web Access automatically. Under Router Mode ON, this port is used for WAN side transfer setting. Under Router Mode OFF(Access
(C)2000-2011 BUFFALO INC. All rights reserved.

Parameter	Meaning
Web Access	Check [Enable] to use Web Access.
Web Access Display Language	Set the language to be used with Web Access.
HTTPS/SSL Encryption	Check [Enable] to use SSL encryption for protected data transfer.
Web Access External Port	Automatically sets the external port used for Web access. To select the port manually, select [Manual].

Parameter	Meaning
DNS Service Hostname	Sets the DNS Service Hostname when the Web access function is activated. Select [Use BuffaloNAS.com registration function] to use the Web access function easily. You'll have to configure a [BuffaloNAS.com name] and [BuffaloNAS.com key] to use BuffaloNAS.com. 3 - 0 alphanumeric characters, spaces, hyphens (-), underscores (_) and period (.), may be used in the BuffaloNAS.com name. 3 - 20 alphanumeric characters, spaces, hyphens (-), underscores (_) and period (.), may be used in the BuffaloNAS.com key. Note: The registered name is deleted from the server if the AirStation is disconnected from power, even for a moment.
Web Access	Displays the status of web access.
External Port Status	Displays the status of the external port.
BuffaloNAS.com	Displays the status of BuffaloNAS.com.

Media Server

Media Server settings.

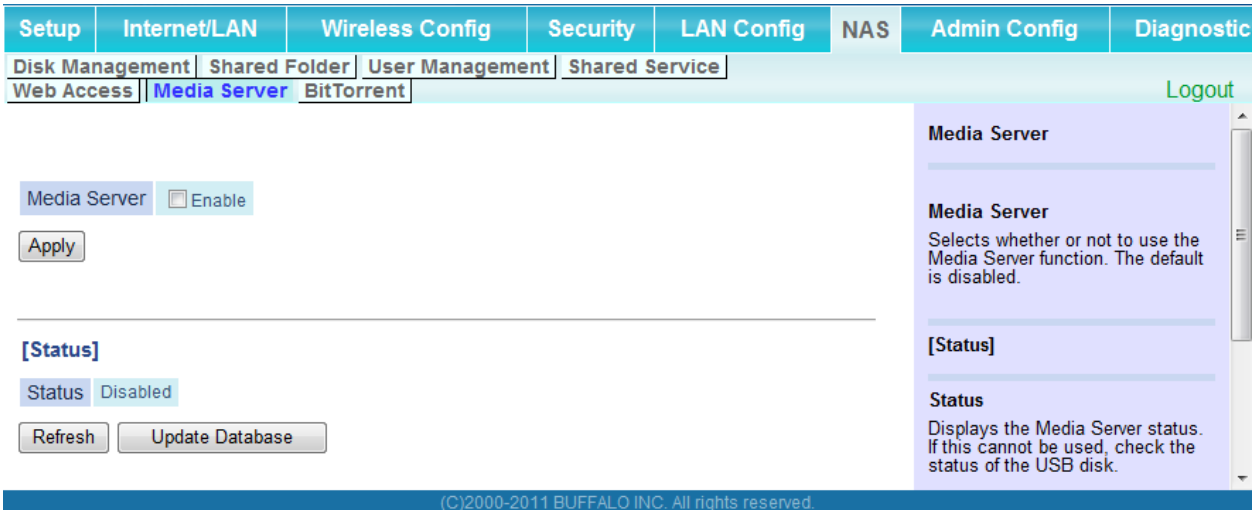

Parameter	Meaning
Media Server	Enable to use the media server.
Status	Displays the status of the media server.

BitTorrent

Configure the BitTorrent client.

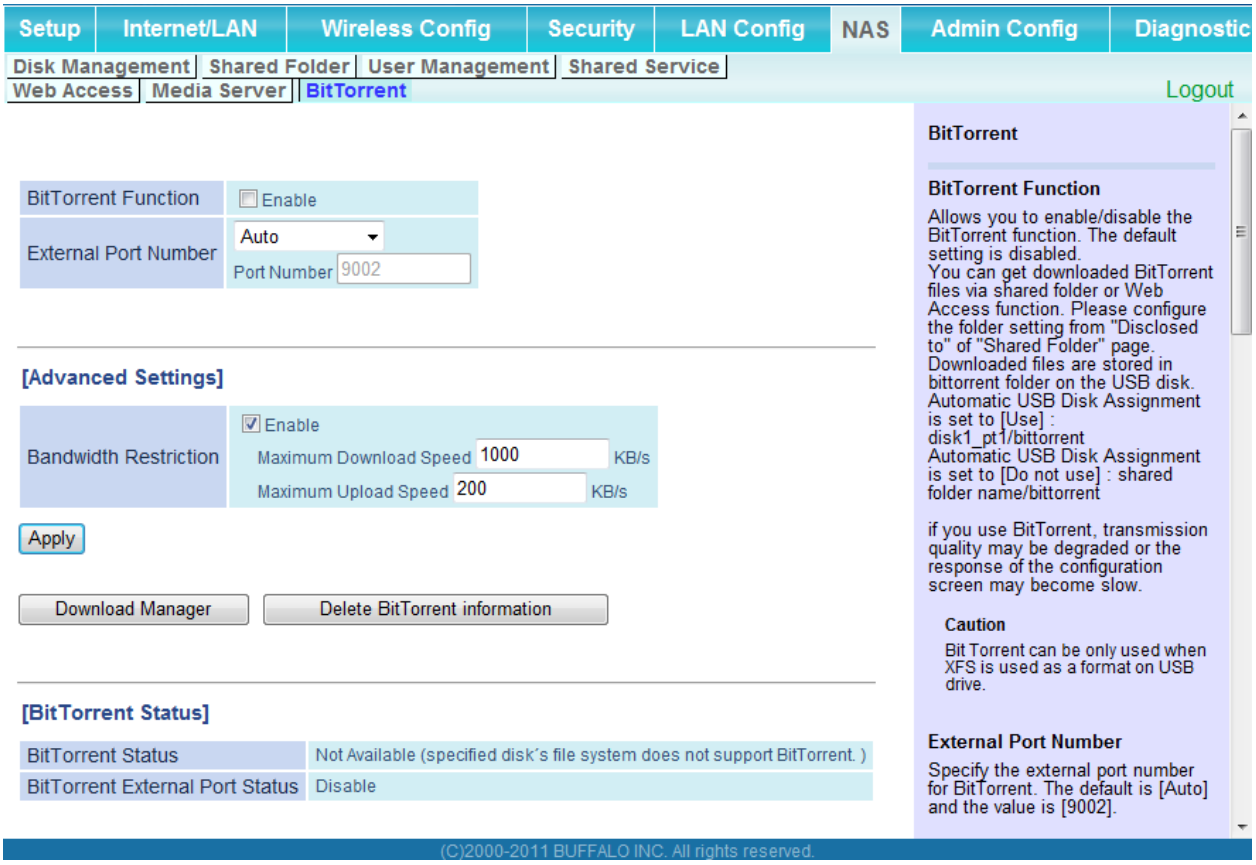
Setup
Internet/LAN
Wireless Config
Security
LAN Config
NAS
Admin Config
Diagnostic
Disk Management
Shared Folder
User Management
Shared Service
Web Access
Media Server
BitTorrent
Logout
BitTorrent Function
Enable
External Port Number
Auto
Port Number 9002
[Advanced Settings]
Bandwidth Restriction
Enable
Maximum Download Speed 1000 KB/s
Maximum Upload Speed 200 KB/s
Apply
Download Manager
Delete BitTorrent information
[BitTorrent Status]
BitTorrent Status
Not Available (specified disk's file system does not support BitTorrent.)
BitTorrent External Port Status
Disable
BitTorrent
BitTorrent Function
Allows you to enable/disable the BitTorrent function. The default setting is disabled.
You can get downloaded BitTorrent files via shared folder or Web Access function. Please configure the folder setting from "Disclosed to" of "Shared Folder" page.
Downloaded files are stored in bittorrent folder on the USB disk.
Automatic USB Disk Assignment is set to [Use] : disk1_pt1/bittorrent
Automatic USB Disk Assignment is set to [Do not use] : shared folder name/bittorrent
if you use BitTorrent, transmission quality may be degraded or the response of the configuration screen may become slow.
Caution
Bit Torrent can be only used when XFS is used as a format on USB drive.
External Port Number
Specify the external port number for BitTorrent. The default is [Auto] and the value is [9002].
(C)2000-2011 BUFFALO INC. All rights reserved.

Parameter	Meaning
BitTorrent Function	Enable to use the BitTorrent client. If the BitTorrent client is enabled, overall communication performance may decrease and settings screens may respond slower. If that happens, reformat the USB disk with XFS. That may help performance.
External Port Number	Select an external port number.

Parameter	Meaning
Bandwidth Restriction	Set a bandwidth limit for BitTorrent.
[Download Manager]	Displays the BitTorrent download manager screen. Add a torrent, then click [Add] to download the file(s).
[Delete BitTorrent information]	Deletes all files, including the torrent files and files which are currently downloading. Downloaded files are not deleted.
BitTorrent Status	Displays the status of the BitTorrent client.
BitTorrent External Port Status	Display the external port status of the BitTorrent client.

You can download the latest Windows BitTorrent client from www.bittorrent.com.

Admin Config

Name

Configure basic AirStation settings.

Parameter	Meaning
AirStation Name	Enter a name for the AirStation. Names may include up to 64 alphanumeric characters and hyphens (-).
List Network Services	Enable or disable this to display the computers and devices on your network with their supported services.

Password

Configure the password to log in to the AirStation's configuration screen.

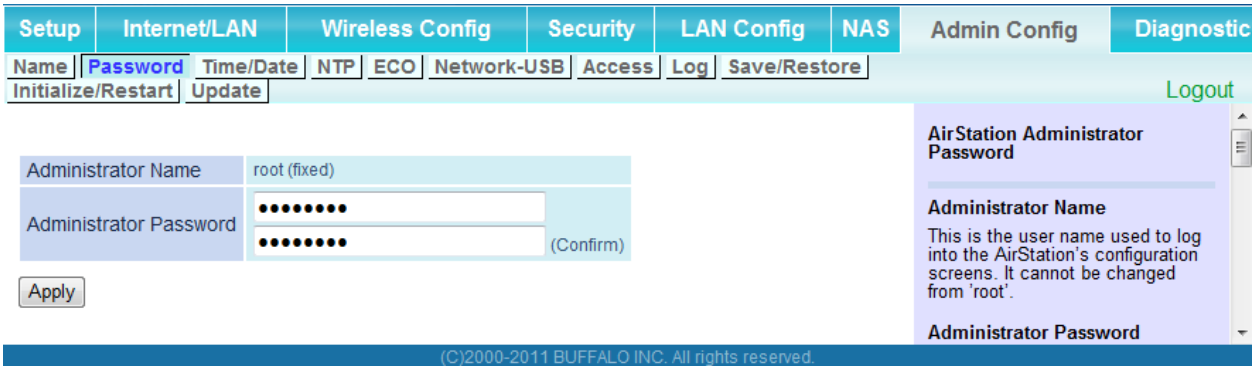

Parameter	Meaning
Administrator Name	The name of the Administrator account is "root".
Administrator Password	The Administrator password may contain up to 8 alphanumeric characters and underscores (_).

Time/Date

Configure the AirStation's internal clock.

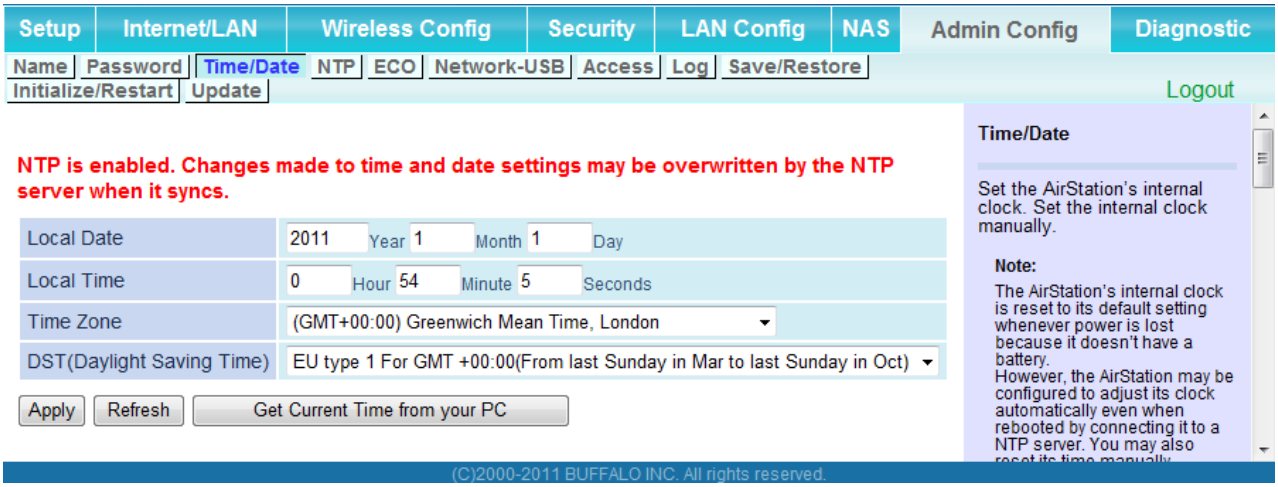
Setup
Internet/LAN
Wireless Config
Security
LAN Config
NAS
Admin Config
Diagnostic
Name
Password
Time/Date
NTP
ECO
Network-USB
Access
Log
Save/Restore
Initialize/Restart
Update
Logout
NTP is enabled. Changes made to time and date settings may be overwritten by the NTP server when it syncs.
Local Date
2011 Year 1 Month 1 Day
Local Time
0 Hour 54 Minute 5 Seconds
Time Zone
(GMT+00:00) Greenwich Mean Time, London
DST(Daylight Saving Time)
EU type 1 For GMT +00:00(From last Sunday in Mar to last Sunday in Oct)
Apply
Refresh
Get Current Time from your PC
Time/Date
Set the AirStation's internal clock. Set the internal clock manually.
Note:
The AirStation's internal clock is reset to its default setting whenever power is lost because it doesn't have a battery.
However, the AirStation may be configured to adjust its clock automatically even when rebooted by connecting it to a NTP server. You may also
(C)2000-2011 BUFFALO INC. All rights reserved.

Parameter	Meaning
Local Date	You may manually set the date of the AirStation's internal clock.
Local Time	You may manually set the time of the AirStation's internal clock.
Time Zone	Specify the time zone (offset of Greenwich Mean Time) of the AirStation's internal clock.
DST (Daylight Saving Time)	You may configure the AirStation to automatically use DST (Daylight Saving Time). If selected, the AirStation will automatically adjust the time at the beginning and end of DST.

NTP

Configure an NTP server to automatically synchronise the AirStation's internal clock.

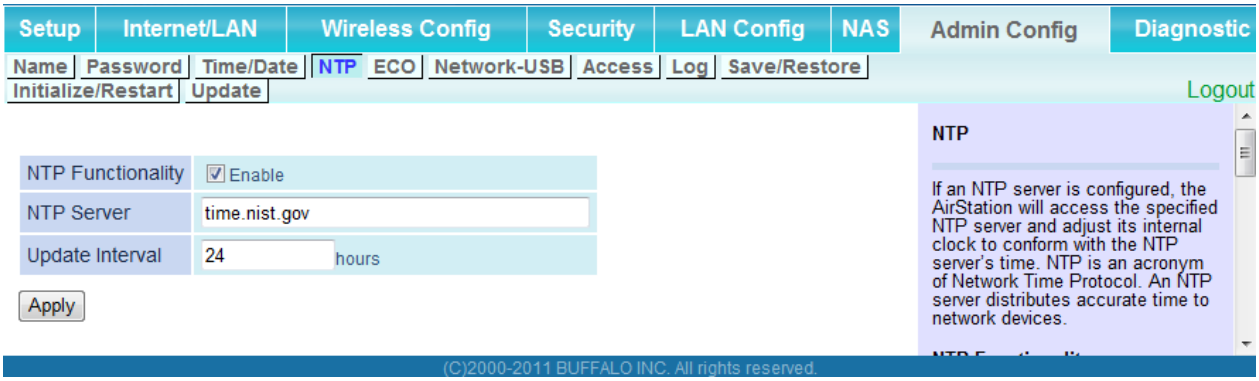

Parameter	Meaning
NTP Functionality	Enable to use an NTP server. The default is Enabled.
NTP Server	Enter the name of the NTP server as a hostname, hostname with domain name, or IP address. Up to 255 alphanumeric characters, hyphens (-), and underscores (_) may be used. The default is "time.nist.gov".
Update Interval	How often will the AirStation check the NTP server for the correct time? Intervals of 1 - 24 hours may be set. The default is 24 hours.

ECO

Configure Eco mode from this screen.

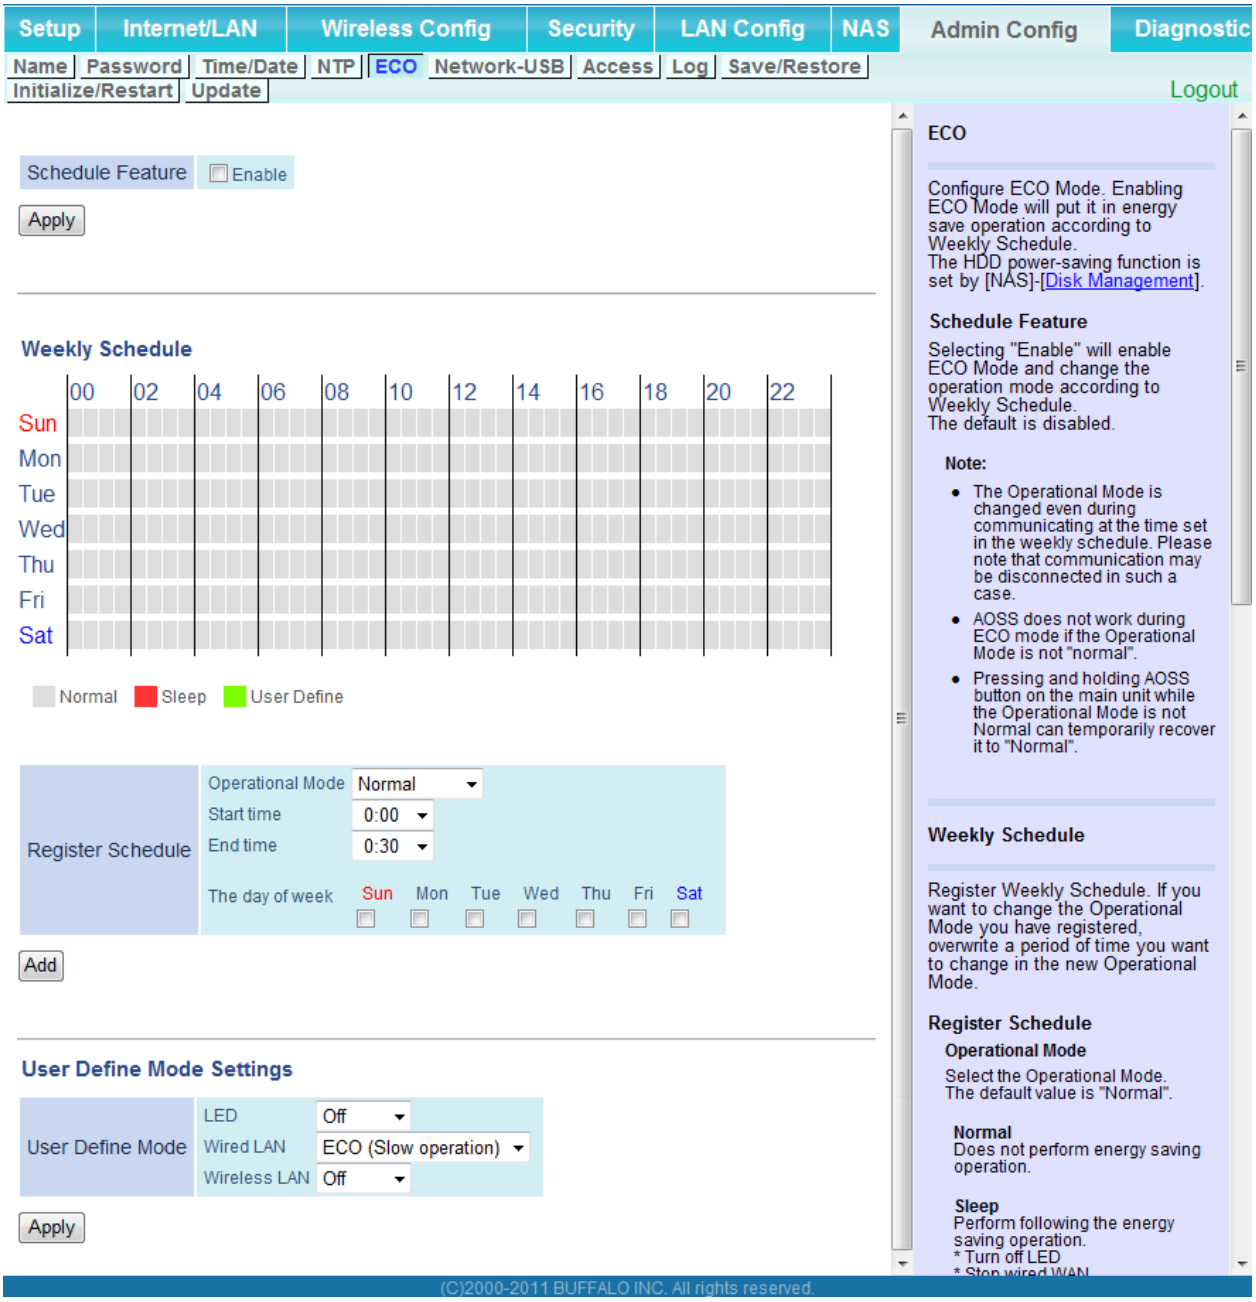

Parameter	Meaning
Schedule feature	Enable to schedule Eco Mode. If Eco mode is enabled, AOSS will function only when the AirStation is in Normal operating mode.
Weekly schedule	Graphically displays the configured schedule.
Register schedule	Configure operational mode for time periods in the weekly schedule. If User Defined mode is chosen, configure it below.
User Defined Mode	Individual power saving elements may be configured for User Defined mode.

Network-USB

Configure Network-USB from this screen.

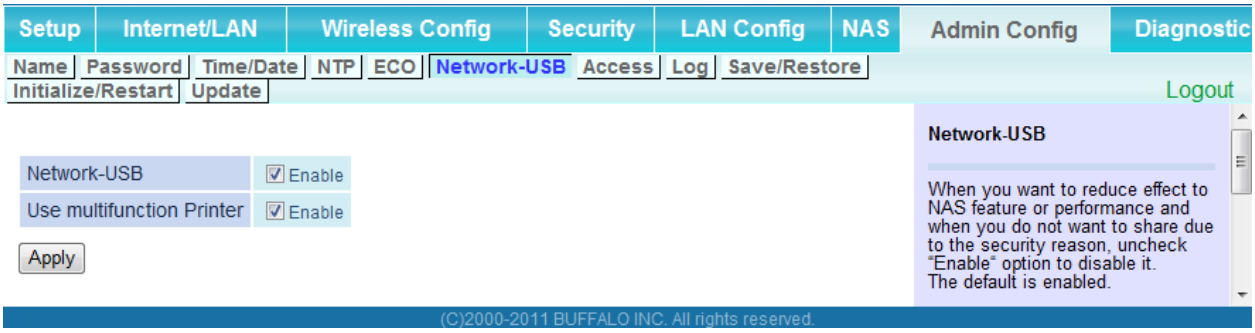

Parameter	Meaning
Network-USB	Network-USB allows sharing USB devices connected to the AirStation from multiple computers on a wired or wireless LAN. Disable to reduce the impact on the NAS and other functions, improve performance, or for security reasons.
Use multifunction Printer	This uses a multifunction printer supporting mass storage classes as a printer. Disable if using as a NAS instead.

Access

Restrict access to the AirStation's settings screens.

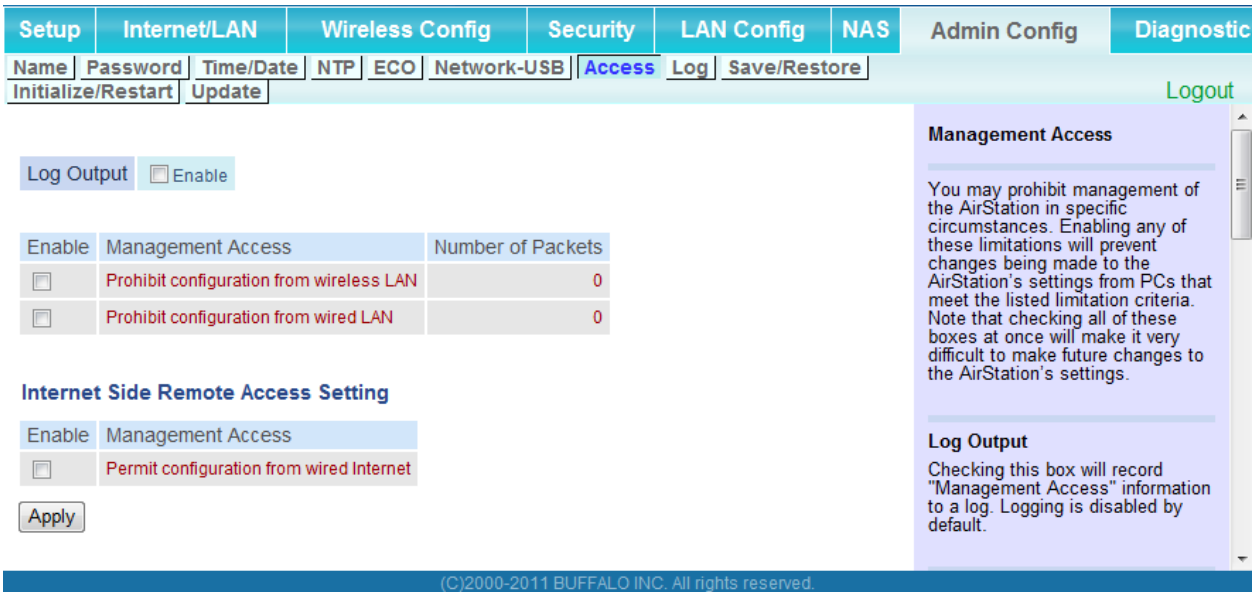

Parameter	Meaning
Log Output	Enabling outputs a log of changes to access settings.
Prohibit configuration from wireless LAN	If enabled, prevents access to settings screens from wirelessly connected devices (only wired devices may configure).
Prohibit configuration from wired LAN	If enabled, prevents access to settings screens from wired devices (only wirelessly connected devices may configure).
Permit configuration from wired Internet	If enabled, allows access to settings screens from network devices on the WAN (Internet) side.
Permitted IP address	Displayed only if Internet side configuration is enabled. Enter the IP address of a device that is permitted to configure the AirStation remotely from the WAN (Internet) side.
Permitted Port	Displayed only if Internet side configuration is enabled. Set a port number (1 - 65535) to configure the AirStation from the WAN (Internet) side.

Log

Transfer the AirStation's logs to a syslog server.

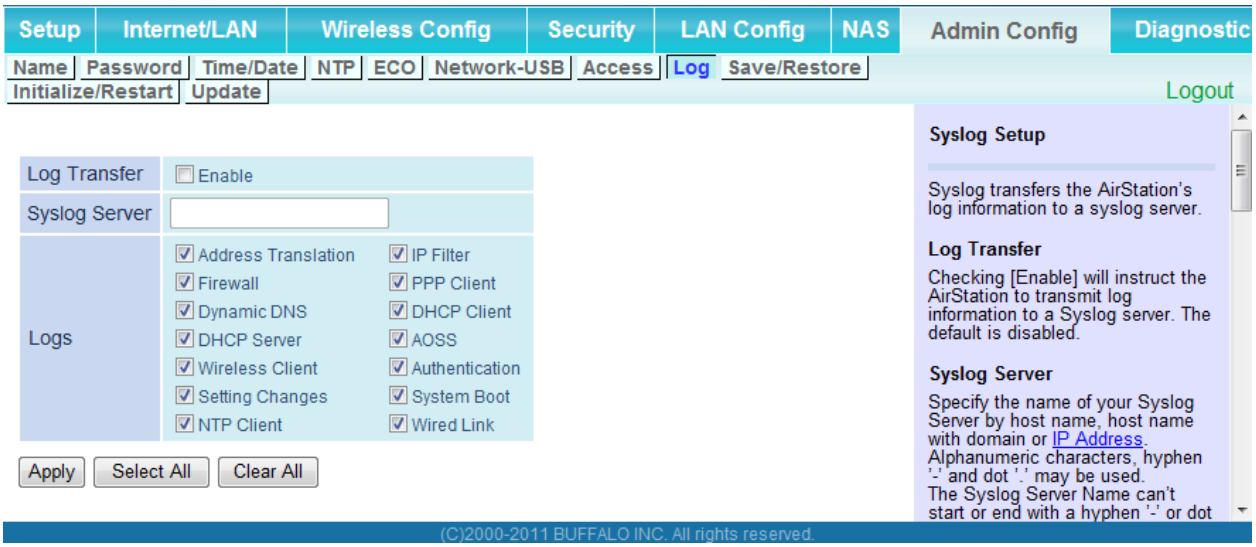

Parameter	Meaning
Log Transfer	Enable to send logs to a syslog server.
Syslog Server	Identify the syslog server by hostname, hostname with domain name, or IP address. You may enter up to 255 alphanumeric characters, hyphens (-), and underscores (_).
Logs	Choose which logs will be transferred to the syslog server.

Save/Restore

Save AirStation settings as a file, and restore from them later.

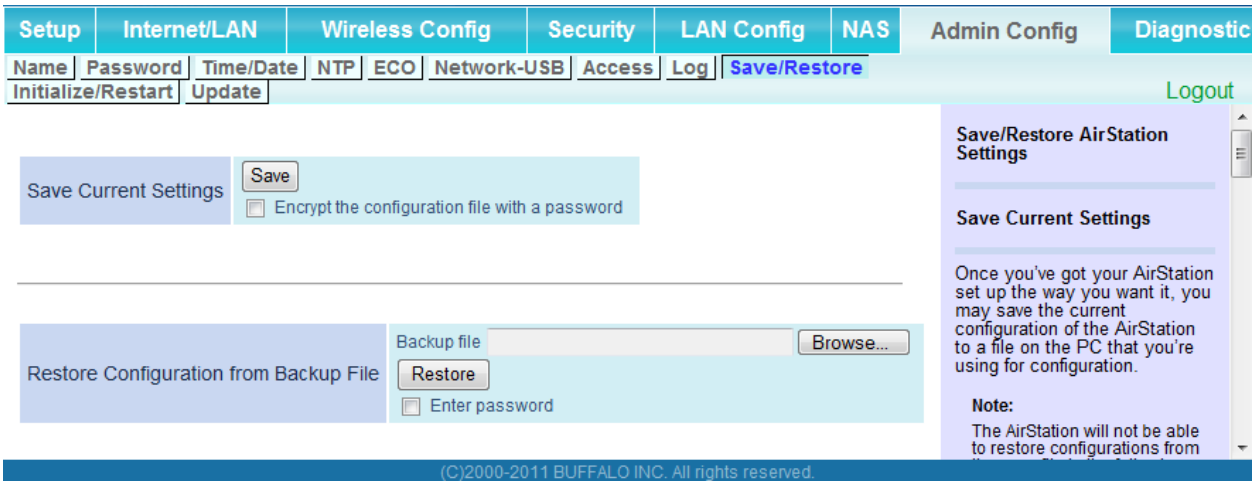

Parameter	Meaning
Save current settings	Clicking [Save] will save the current configuration of the AirStation to a file. If the [Encrypt the configuration file with a password] option is checked, then the configuration file will be password protected with the current administrator password.
Restore Configuration from Backup File	Restore the configuration of the AirStation from a saved configuration file by clicking the [Browse...] button, navigating to the configuration file, and then clicking Restore. If the configuration file was password protected, then put a check next to [To restore from the file you need the password], enter the password, and click [Open].

Initialize/Restart

Initialize or restart the AirStation.

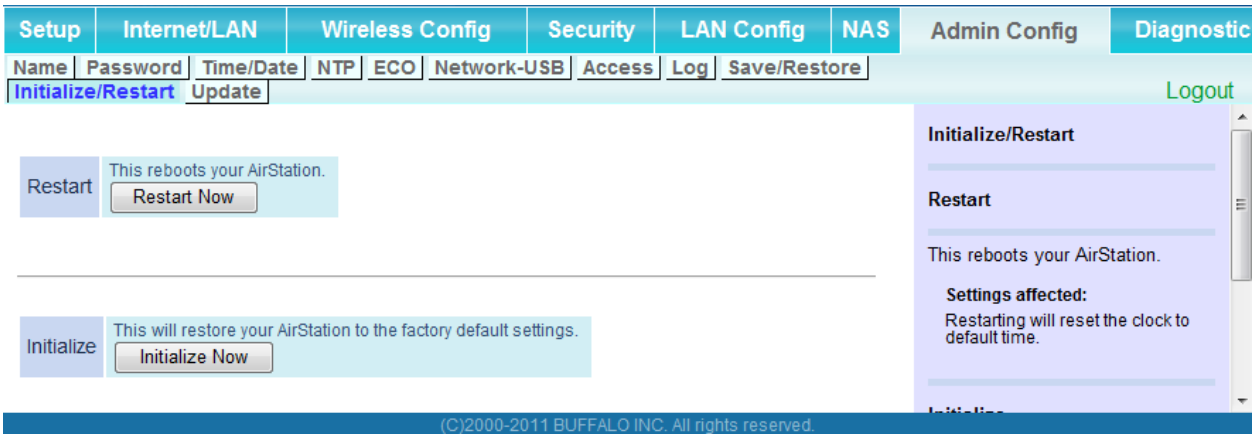

Parameter	Meaning
Restart	Click [Restart Now] to restart the AirStation.
Initialize	Click [Initialize Now] to initialize and restart the AirStation.

Update

Update the AirStation's firmware.

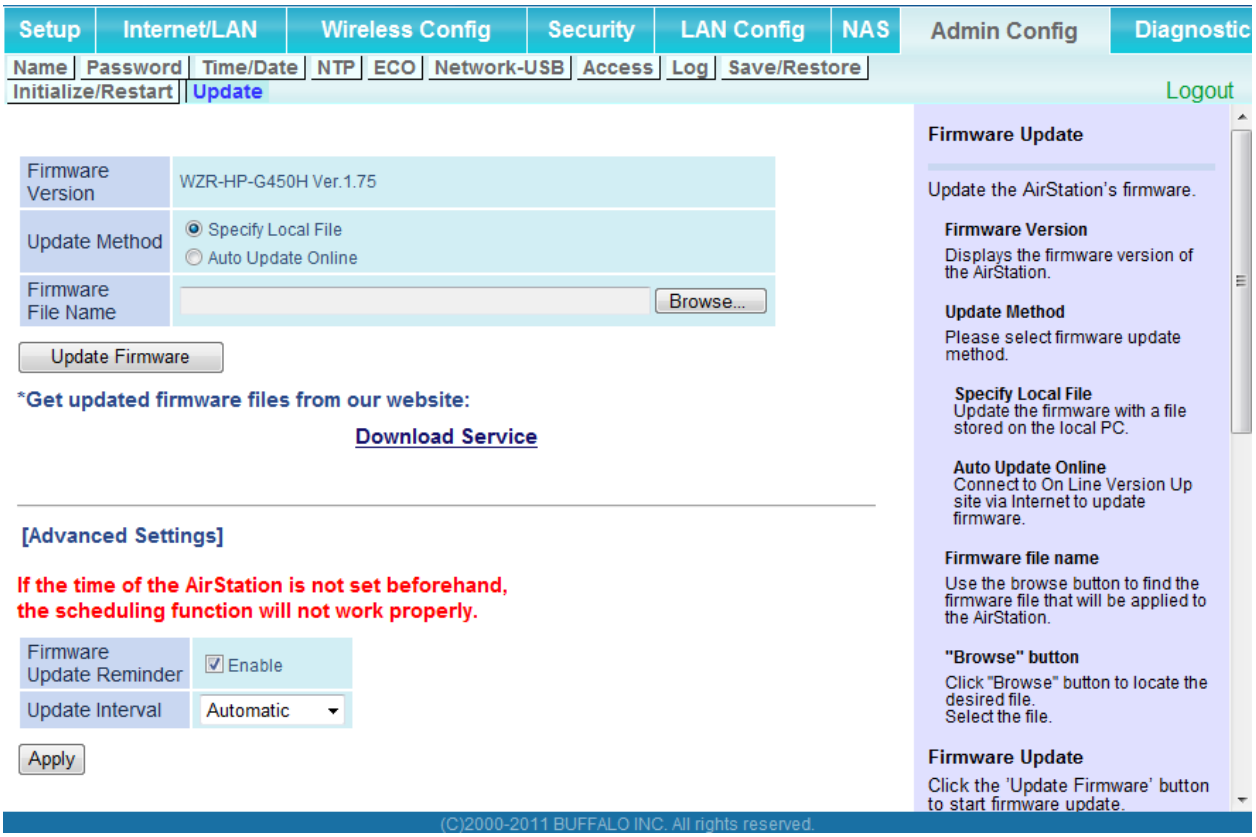

Parameter	Meaning
Firmware Version	Displays the current firmware version of the AirStation.
Update Method	**Specify Local File** Updates from a firmware file stored on your computer. **Automatic Update Online** Automatically updates to the latest firmware available.
Firmware File Name	Click [Browse...] to navigate to the firmware file on your computer if [Specify Local File] was selected. You don't need to specify the firmware location if you're using [Automatic Update]. Click [Update Firmware] to update the firmware.

Parameter	Meaning
Firmware Update Reminder Function	This sets whether the Firmware Update Reminder function is used. When enabled, if new firmware is found, notification is sent to the Configuration Interface.
Update Interval	This sets the interval for checking whether a new firmware version has been released.

Diagnostic

System Info

View system information for the AirStation.

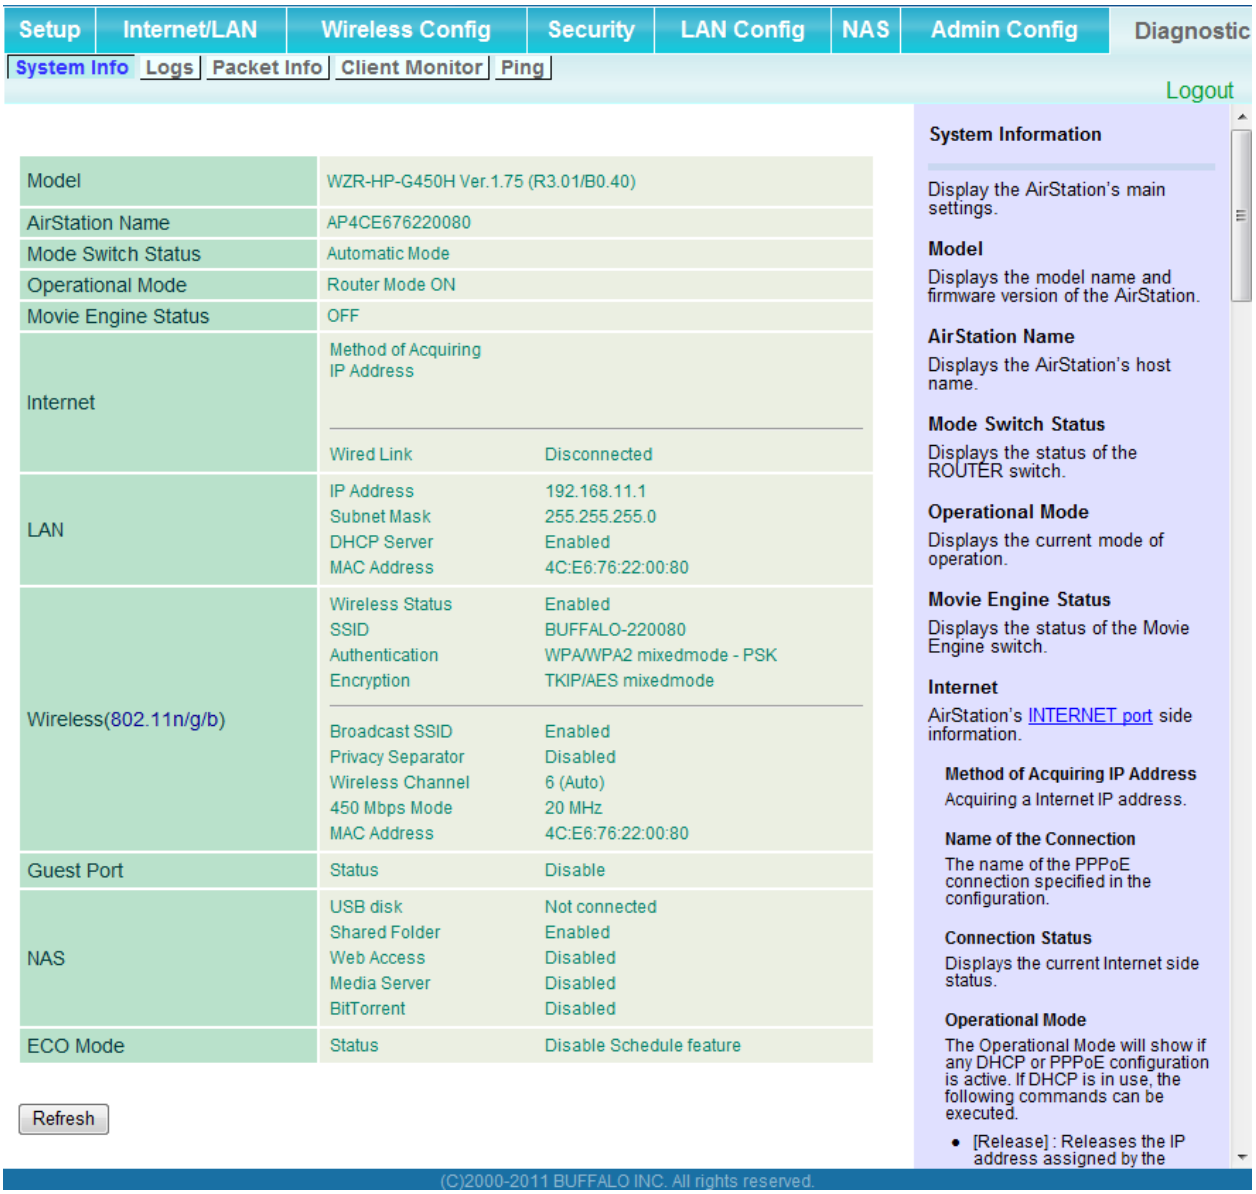

Parameter	Meaning
Model	Displays the product name of the AirStation and the firmware version.
AirStation Name	Displays the name of the AirStation.
Mode Switch Status	Displays the status of the AirStation's mode switch.
Operational Mode	Displays the AirStation's current operational mode.
Movie Engine Status	Displays the current Movie Engine Status.
Internet	Displays information about the Internet port.
LAN	Displays information about the LAN port.
Wireless	Displays the wireless status.
Guest port function	Displays information about Guest port.
NAS	Displays information about the USB disk.
ECO Mode	This indicates the operating status of ECO Mode.

Logs

The AirStation's logs are recorded here.

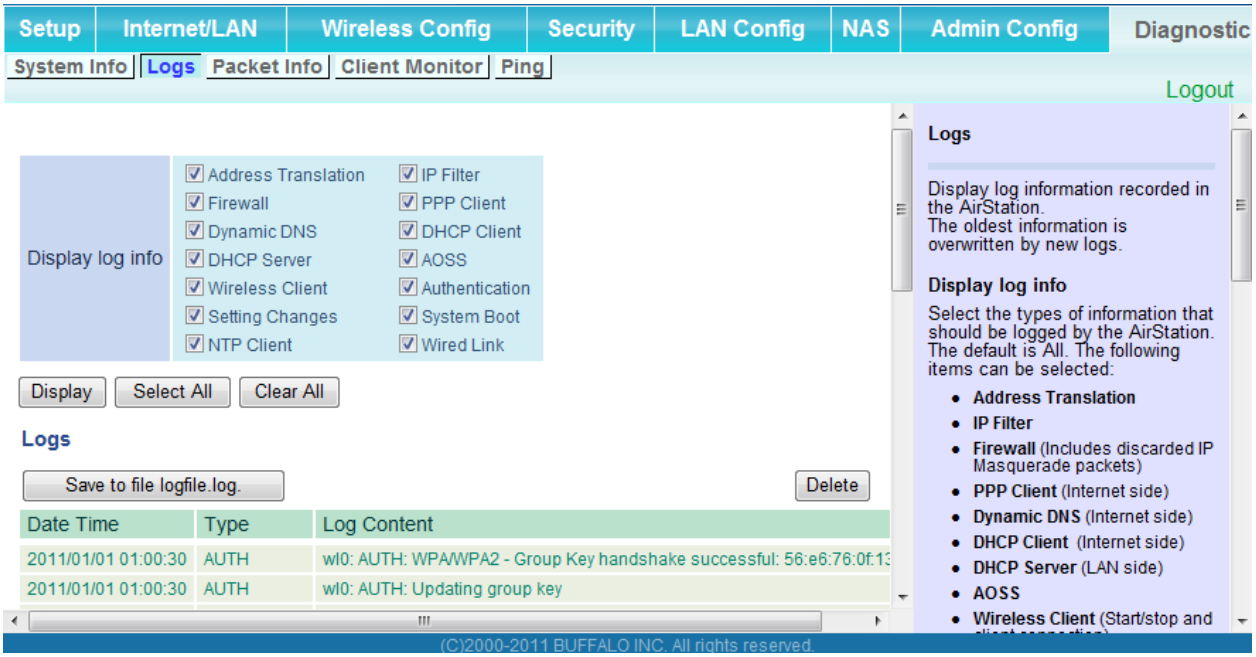

Parameter	Meaning
Display log info	Choose the types of logs to display.
Logs	Displays the log information recorded in the AirStation.

Packet Info

View packet transfer information.

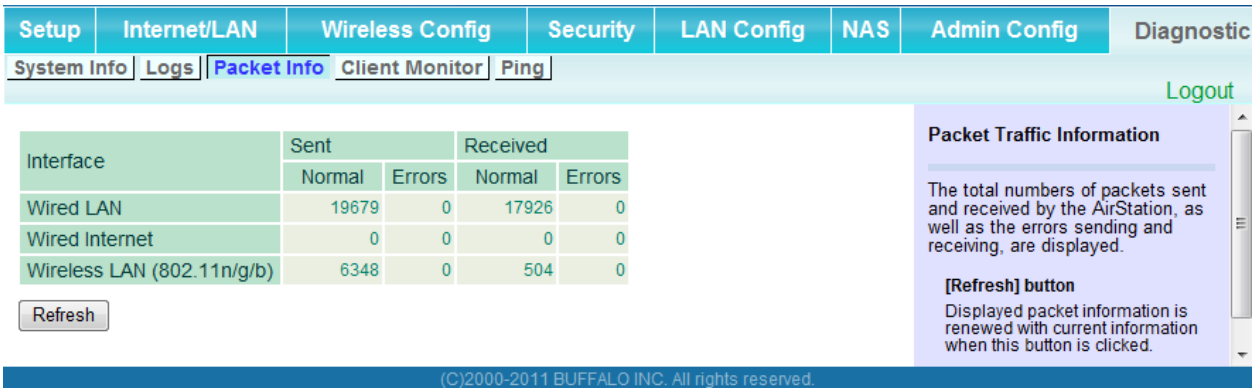

Parameter	Meaning
Sent	Displays the number of packets sent to the WAN, the LAN, and the wireless LAN.
Received	Displays the number of packets received from the WAN, the LAN, and the wireless LAN.

Client Monitor

This screen shows devices that are connected to the AirStation.

Parameter	Meaning
Client Monitor	Displays information (MAC address, lease IP address, hostname, communication method, wireless authentication and 802.11n) for devices that are connected to the AirStation.

Ping

A ping test checks whether the AirStation can communicate with a specific network device.

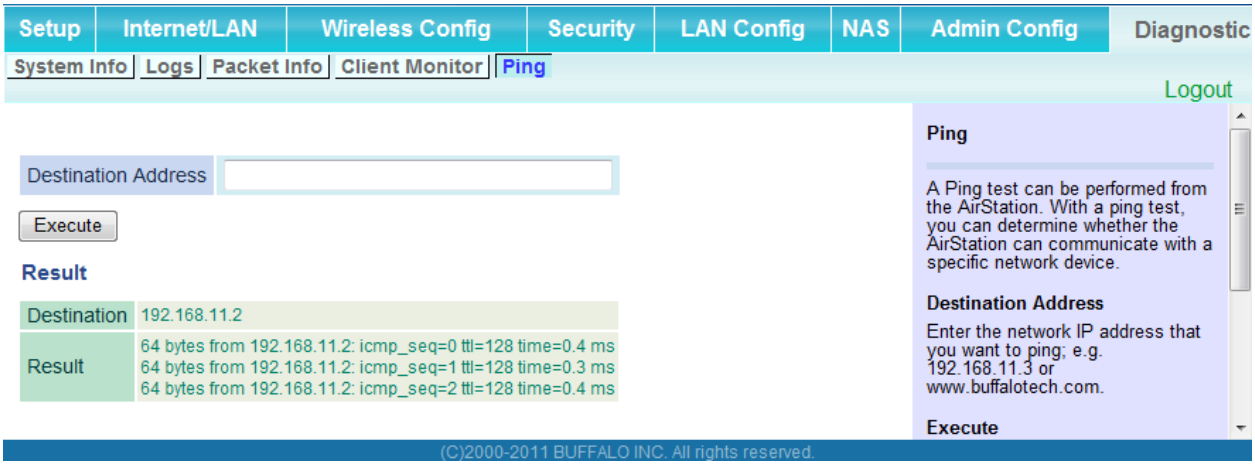

Parameter	Meaning
Destination Address	Enter the IP address or hostname of the device that you are testing communication with, then click [Execute]. The result will be displayed below.

Chapter 5 - Connect to a Wireless Network

Automatic Secure Setup (AOSS/WPS)

AOSS and WPS are systems that let you automatically configure wireless LAN settings. Just pressing the buttons will connect wireless devices and complete security settings. Easily connect to wireless devices, computers, or game machines which support AOSS or WPS.

AOSS (AirStation One-Touch Secure System) was developed by Buffalo Technology. WPS was created by the Wi-Fi Alliance.

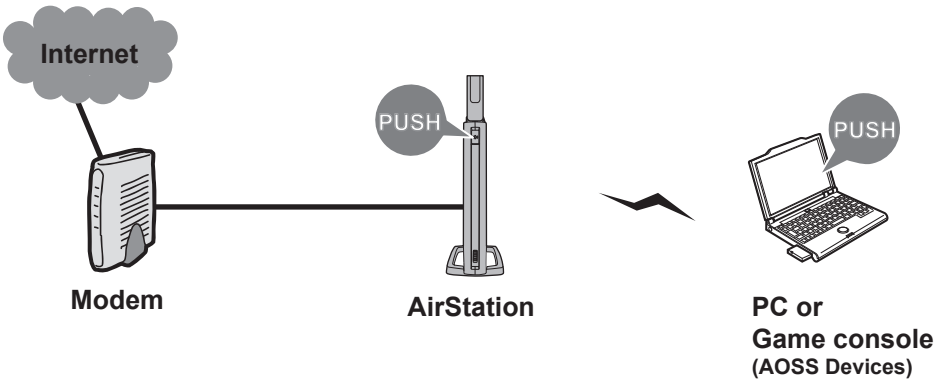

- Before using AOSS/WPS to connect to a Buffalo wireless client, install Client Manager software from the included AirNavigator CD. Consult your wireless client's documentation for more information.
- Buffalo's Client Manager software can be used with the wireless LAN devices built into most computers. However, it is not guaranteed to work with all wireless LAN devices available. Some wireless clients may require manual setup.

Windows 7/Vista (Client Manager V)

If you are using Windows 7 or Vista, use the included Client Manager V software to connect wirelessly with AOSS/WPS.

1 Click [Start] > [All Programs] > [BUFFALO] > [AirStation Utility] > [Client Manager V].

2

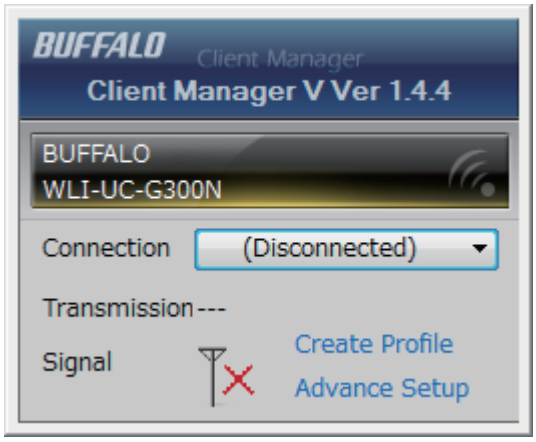

Click [Create Profile].

3 If the User Account Control screen opens, click [Yes] or [Continue].

4

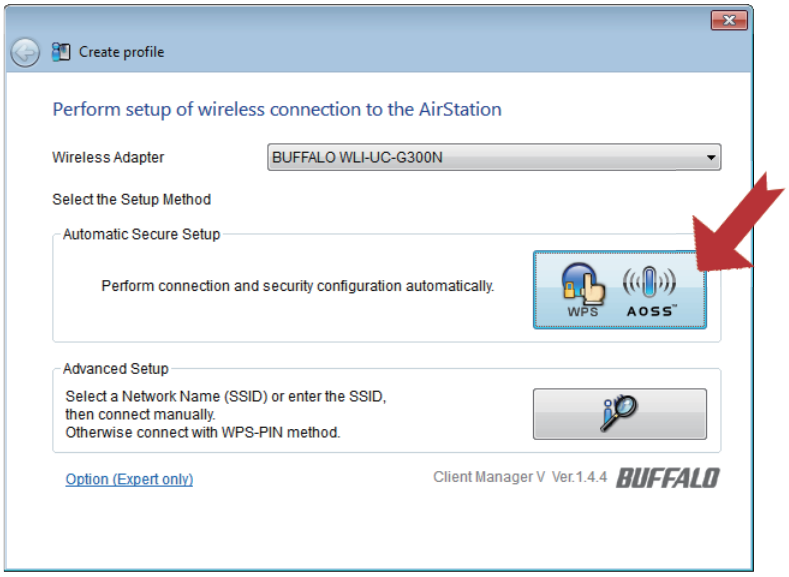

Click the [WPS AOSS] button.

Follow any instructions displayed on the screen. When the Security LED on the front of the AirStation stop flashing and glows steadily, the connection is complete.

Windows XP (Client Manager 3)

If you are using Windows XP, use Client Manager 3 to connect wirelessly with AOSS/WPS.

1 Right click on the icon in the system tray and select [Profile].

2

Click the [WPS AOSS] button.

It will take several seconds for your wireless connection to be configured. When the Security LED on the front of the AirStation stop flashing and glows steadily, the connection is complete.

Mac OS X (AOSS Assistant)

If you are using Mac OS X 10.6 / 10.5 / 10.4, use the included AOSS Assistant software to connect wirelessly with AOSS.

1 Load the AirNavigator CD in your Macintosh.

2 Double-click the Mac folder in the AirNavigator CD.

3 Double-click [AOSS Assistant].

4 The software license screen is displayed. Click [Agree] to proceed.

5

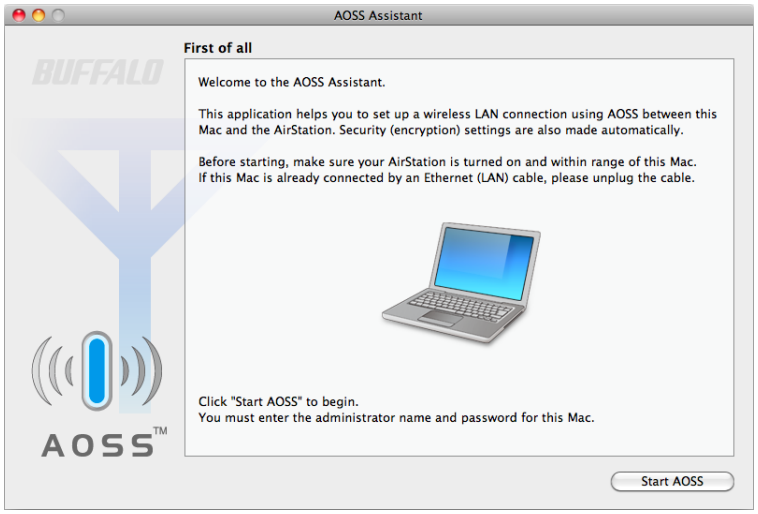
AOSS Assistant
First of all
BUFFALO
Welcome to the AOSS Assistant.
This application helps you to set up a wireless LAN connection using AOSS between this Mac and the AirStation. Security (encryption) settings are also made automatically.
Before starting, make sure your AirStation is turned on and within range of this Mac. If this Mac is already connected by an Ethernet (LAN) cable, please unplug the cable.
Click "Start AOSS" to begin.
You must enter the administrator name and password for this Mac.
AOSS™
Start AOSS

Click [Start AOSS].

6

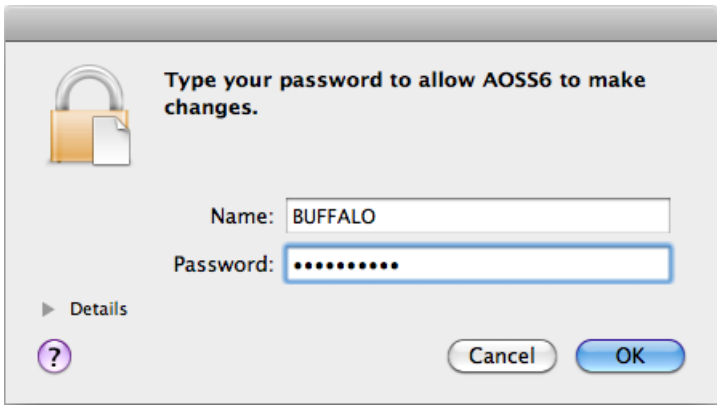

Enter the Mac's username and password and click [OK].

It will take several seconds for your wireless connection to be configured. When the Security LED on the front of the AirStation stop flashing and glows steadily, the connection is complete.

Other Devices (e.g. Game Console)

If you are using a game machine which supports AOSS or WPS, refer to that device's manual to initiate AOSS/WPS. When instructed, hold down the AOSS button on the AirStation for 1 second.

When the Security LED on the front of the AirStation stop flashing and glows steadily, the connection is complete.

Manual Setup

You can also connect to the AirStation without installing Client Manager V or Client Manager 3 by using the utility built-in to Windows. The procedure varies depending on which version of Windows you are using.

Note:
- **If the AirNavigator CD is used to perform setup when making the initial settings of AirStation, the wireless connection settings for the AirStation are completed during the Setup process. As a result, you do not need to make the settings below. After setup is complete, once the LAN cable is removed, you can connect from your wireless client to the AirStation.**
- **Before performing setup, make the settings to enable the wireless client of the computer.**

Windows 7 (WLAN AutoConfig)

With Windows 7, use WLAN AutoConfig to connect to the AirStation.

1 Click on the network icon in the system tray.

2

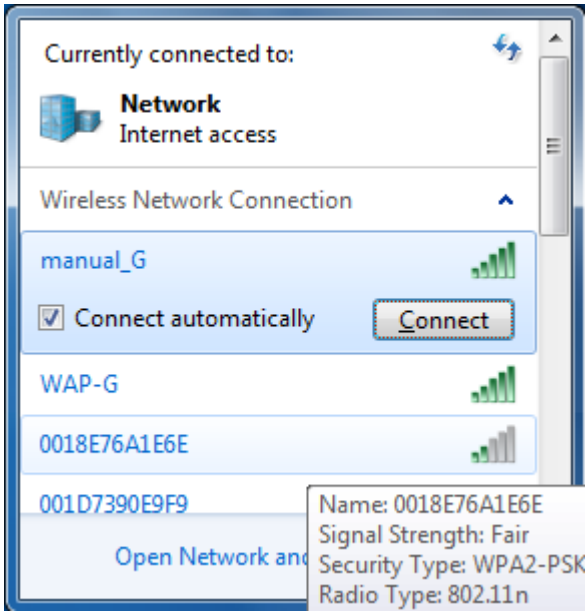

Select the target AirStation and click [Connect]. If you will be connecting to this device in the future, checking [Connect automatically] is recommended.

3 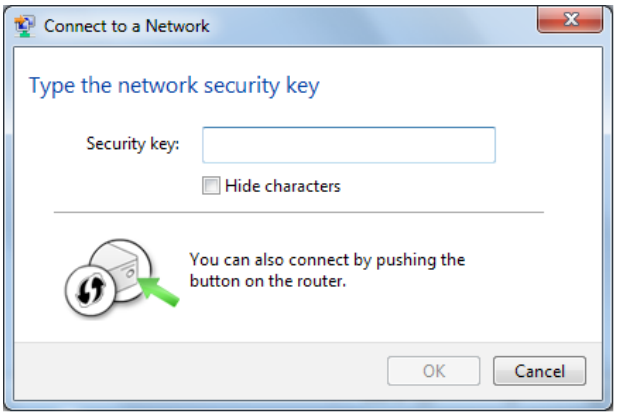

Enter the encryption key and click [OK].

Windows Vista (WLAN AutoConfig)

With Vista, use WLAN AutoConfig to connect to the AirStation.

1 Right click on the wireless network icon in the system tray.

2 Click [Connect to a network].

3 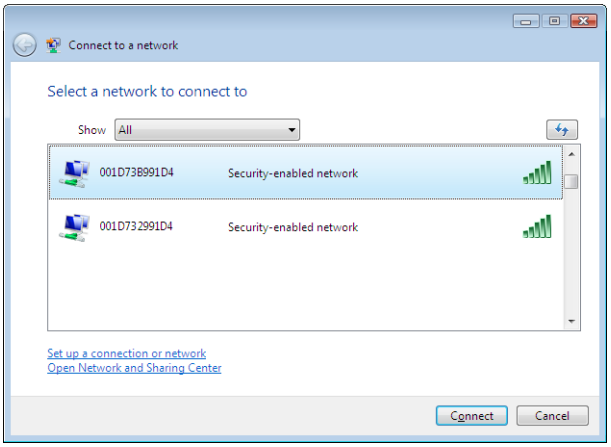

When this screen is displayed, select your network and click [Connect].

If the screen below is displayed, click [I want to enter the network key or passphrase instead]. Otherwise,go to step 4.

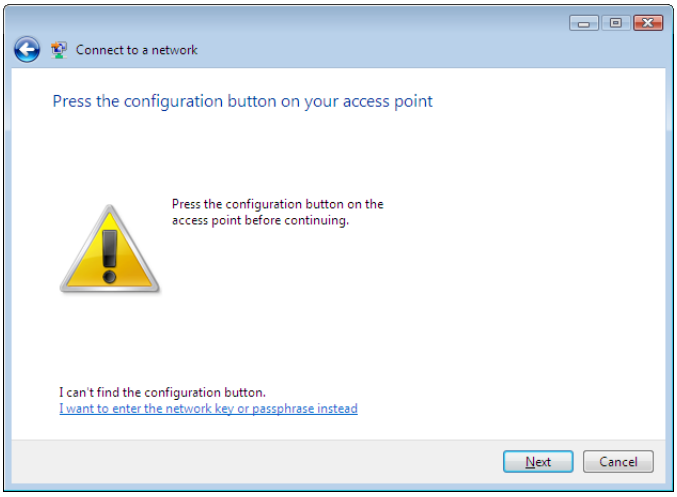
Connect to a network
Press the configuration button on your access point
Press the configuration button on the access point before continuing.
I can't find the configuration button.
I want to enter the network key or passphrase instead
Next
Cancel

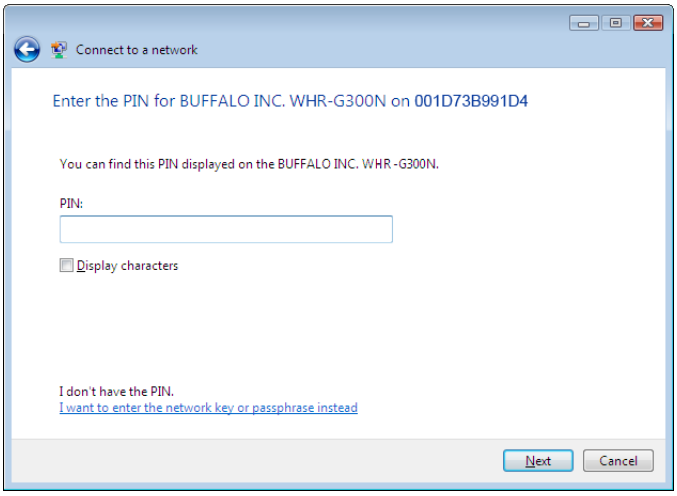
Connect to a network
Enter the PIN for BUFFALO INC. WHR-G300N on 001D73B991D4
You can find this PIN displayed on the BUFFALO INC. WHR-G300N.
PIN:
Display characters
I don't have the PIN.
I want to enter the network key or passphrase instead
Next
Cancel

4

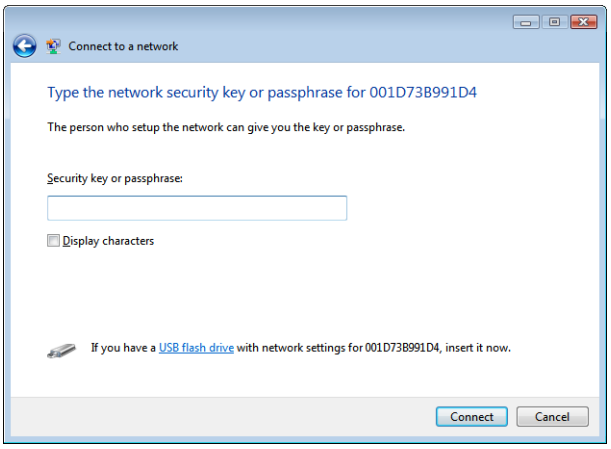
Connect to a network
Type the network security key or passphrase for 001D73B991D4
The person who setup the network can give you the key or passphrase.
Security key or passphrase:
Display characters
If you have a USB flash drive with network settings for 001D73B991D4, insert it now.
Connect
Cancel

Enter the encryption key and click [Connect].

Step through the wizard to finish configuration.
If the Set Network Location screen is displayed, select [Home], [Work], or [Public location] depending on where you're using the AirStation.

Windows XP (Wireless Zero Configuration)

Windows XP includes Wireless Zero Config, a built-in utility to connect to your AirStation.

Note: If Client Manager 3 is installed on your computer, Wireless Zero Config is disabled. Uninstall Client Manager 3 to use Wireless Zero Config, or just use Client Manager 3 to connect to the AirStation.

1 Right click on the wireless network icon in the system tray.

2 Click [View Available Wireless Networks].

3

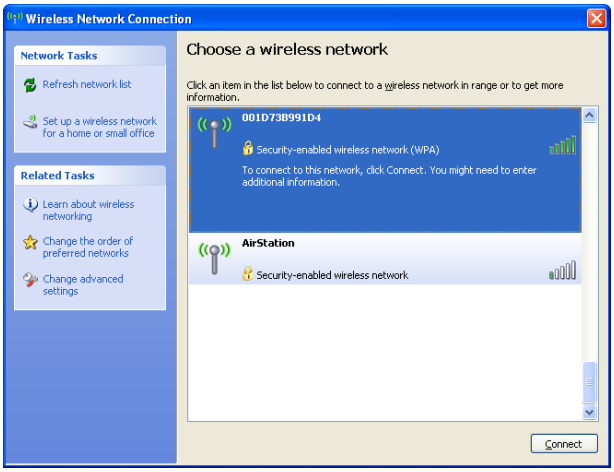
Wireless Network Connection
Network Tasks
Refresh network list
Set up a wireless network for a home or small office
Related Tasks
Learn about wireless networking
Change the order of preferred networks
Change advanced settings
Choose a wireless network
Click an item in the list below to connect to a wireless network in range or to get more information.
001D73B991D4
Security-enabled wireless network (WPA)
To connect to this network, click Connect. You might need to enter additional information.
AirStation
Security-enabled wireless network
Connect

Select the network to connect to and click [Connect].

4

Wireless Network Connection
The network '001D73B991D4' requires a network key (also called a WEP key or WPA key). A network key helps prevent unknown intruders from connecting to this network.
Type the key, and then click Connect.
Network key:
Confirm network key:
Connect
Cancel

Enter the encryption key (twice) and click [Connect].

It will take several seconds for configuration to complete.

Mac OS X (AirPort)

Use AirPort on a Mac to connect to the AirStation.

1

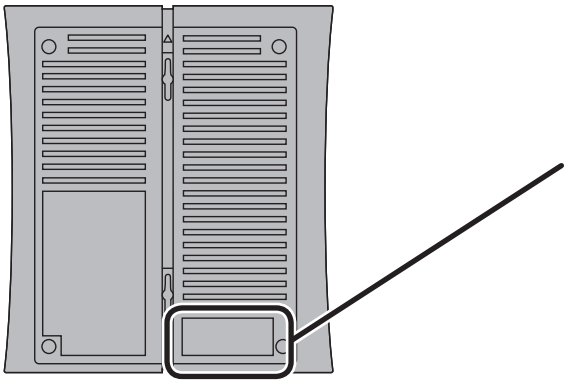

Refer to the label on the side of the AirStation. Make a note of the SSID and KEY printed on the label.

2

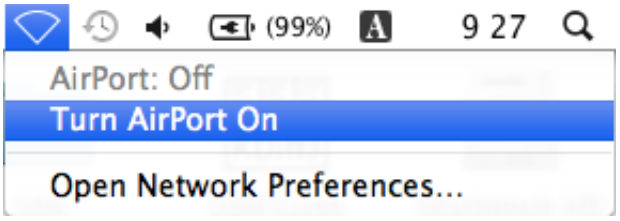

Click the icon in the top section of the screen and select [Turn Airport On].

3

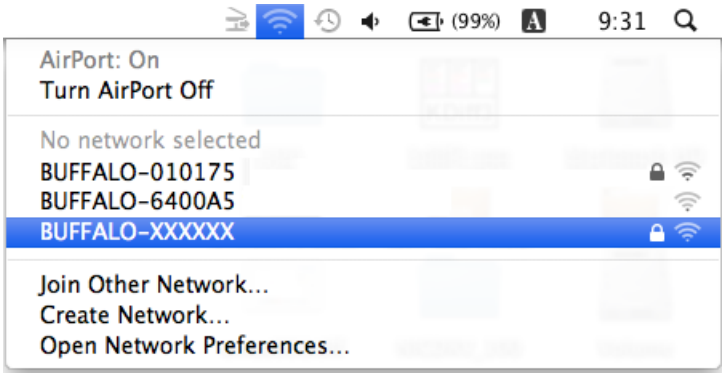

Find the SSID from step 1 on the list. Click it to highlight it.

4

Enter the KEY from step 1 into the Password entry box, check [Remember this network], and click [OK].

It will take several seconds for configuration to complete.

Maximizing the Performance of Your Wireless Network

To enable 450 Mbps communication, you'll need a wireless client that supports 3x3 802.11n, such as the Intel Centrino Ultimate-N 6300.

In the example below, we'll set up the AirStation to work with a computer using the Intel Centrino Ultimate-N 6300.

Note: After the settings below are made, the AirStation will perform communication using twice the normal bandwidth. As a result, if there are other wireless LAN access points or a large number of devices using 2.4GHz band signals in the vicinity of the AirStation, signal interference may occur, resulting in reduced performance.
If this type of interference is observed, either change the wireless channel of the access point, or turn off any devices that are not being used.

Setting the AirStation

1 Open the configuration interface (chapter 4).

2

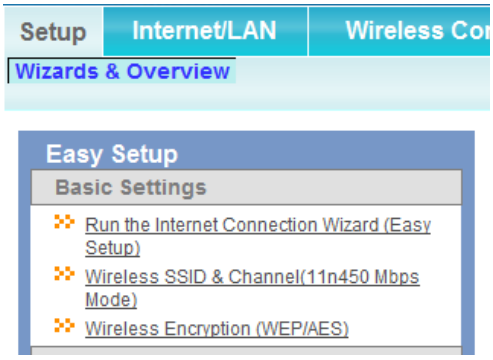

In Easy Setup, click [Wireless SSID & Channel (11n 450 Mbps Mode)].

3

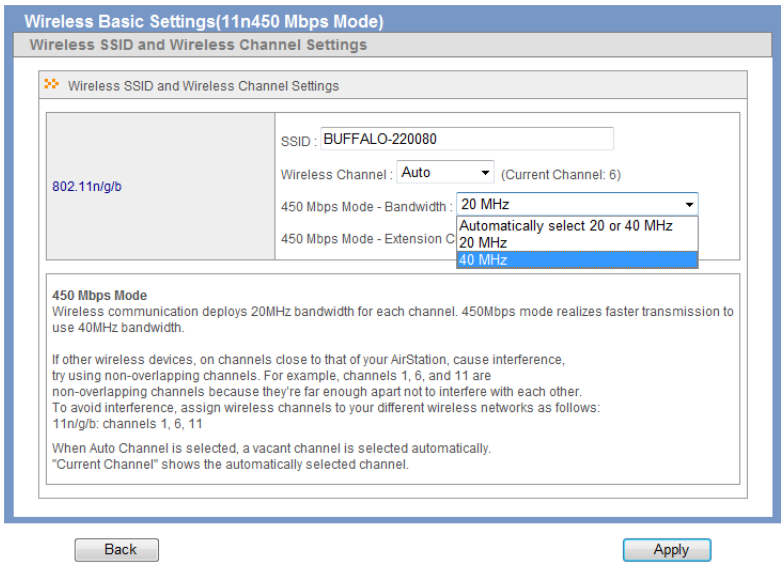
Wireless Basic Settings(11n450 Mbps Mode)
Wireless SSID and Wireless Channel Settings
Wireless SSID and Wireless Channel Settings
802.11n/g/b
SSID : BUFFALO-220080
Wireless Channel : Auto (Current Channel: 6)
450 Mbps Mode - Bandwidth : 20 MHz
Automatically select 20 or 40 MHz
20 MHz
40 MHz
450 Mbps Mode - Extension C
450 Mbps Mode
Wireless communication deploys 20MHz bandwidth for each channel. 450Mbps mode realizes faster transmission to use 40MHz bandwidth.
If other wireless devices, on channels close to that of your AirStation, cause interference, try using non-overlapping channels. For example, channels 1, 6, and 11 are non-overlapping channels because they're far enough apart not to interfere with each other.
To avoid interference, assign wireless channels to your different wireless networks as follows:
11n/g/b: channels 1, 6, 11
When Auto Channel is selected, a vacant channel is selected automatically.
"Current Channel" shows the automatically selected channel.
Back
Apply

Change the value in 450 Mbps Mode - Bandwidth to "40 MHz", then click [Apply].

Setting the Computer

1

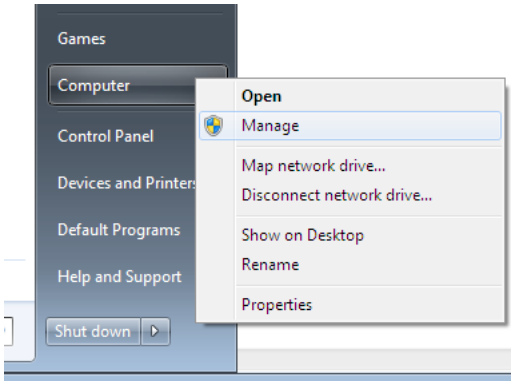

From the Start menu, right-click [Computer] and choose [Manage].

2

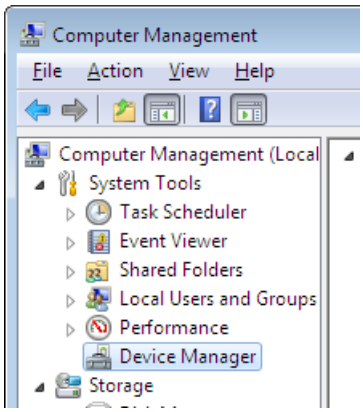

Click [Device Manager].

3

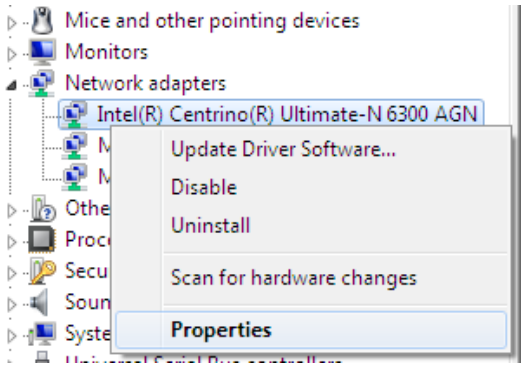

Under Network adapters, right-click [Intel(R) Centrino(R) Ultimate-N6300 AGN] and choose [Properties].

4

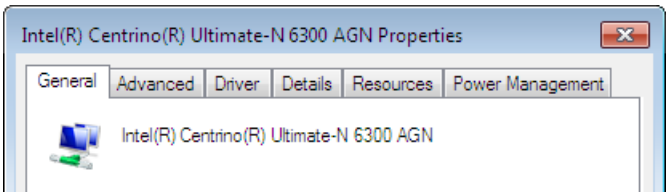

Click on the "Advanced" tab.

5

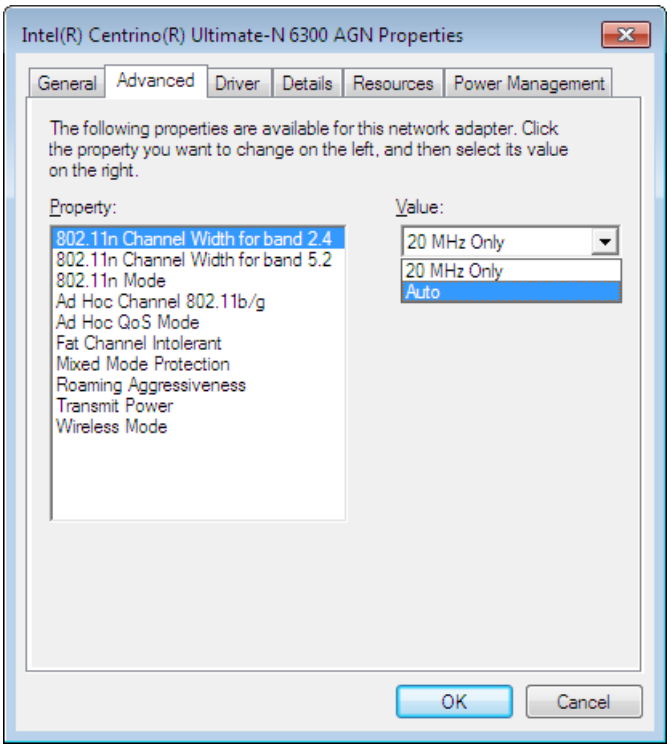

Click "802.11n Channel Width for band 2.4" to highlight it. Set Value to "Auto" and click [OK].

Chapter 6 - Troubleshooting

Cannot connect to the Internet over wired connection.

- Make sure that your AirStation is plugged in!
- Check that the status LEDs of your AirStation are lit as below:

Power	Green light is on
Router	Green light is on or off (depending on your environment)
Diag	off
LAN	Green light is on or flashing
Internet	Green light is on or flashing

- Make sure that your computer is configured to "obtain an IP address automatically from DHCP". (See chapter 10)
- Restart your AirStation.

Cannot access the web-based configuration Interface.

- See chapter 4 for instructions to open the AirStation's configuration interface.
- Enter the correct username and password to log in to the configuration interface. The factory defaults are "root" (in lower case) for the username and a blank password (enter nothing). If you changed the password, enter the new password that you set.
- Verify that your web browser is not set to use proxies.
- Make sure that your computer is configured to "obtain an IP address automatically from DHCP". (See chapter 10)
- Restart your AirStation.

Cannot connect to the network wirelessly.

- Configure your wireless client with the same SSID, encryption type, and encryption key as set on the AirStation.

  The factory defaults are:

  SSID - BUFFALO-XXXXXX (the last 6 digits of the AirStation's MAC address)

  Encryption Type - WPA/WPA2 mixed mode - PSK (Connect with either WPA-PSK TKIP or WPA2-PSK AES).

  Encryption Key - Printed on the label of the AirStation.

  Note: Encryption is disabled by default in Asia Pacific.

- Place your AirStation and wireless devices 2 - 10 feet apart.
- Restart your AirStation.

You forgot AirStation's SSID, Encryption Key, or Password.

Hold down the reset button on the base of your AirStation for 3 seconds to initialize its settings. All settings, including your password, SSID, and encryption key will be initialized to their defaults. The factory defaults are:

SSID -	BUFFALO-XXXXXX (the last 6 digits of the AirStation's MAC address)
Encryption Type -	WPA/WPA2 mixed mode - PSK (Connect with either WPA-PSK TKIP or WPA2-PSK AES).
Encryption Key -	Printed on the label of the AirStation. (Encryption is disabled by default for Asia Pacific AirStations.)

The link speed is slower than 450 Mbps.

By default, the AirStation's 450 Mbps mode is not enabled. You may enable it with the following procedure:

1. Open the configuration interface (chapter 4).
2. In Easy Setup, click [Wireless SSID & Channel (11n 450 Mbps Mode)].
3. Change the value in [450 Mbps Mode] - [Bandwidth] to 40 MHz and click [Apply].

If you still cannot connect at 450 Mbps, check the settings of your wireless client devices.

Other Tips

Issue:

I reset my wireless router to factory settings and forgot how to log in to the configuration interface.

Answer:

Open your browser, enter 192.168.11.1 as the browser address, and hit Enter. You will be prompted to log in. Enter "root" for the username and leave the password box empty (no password). Click [OK] to complete the login and the option to reset your password will be available on the first page.

Issue:

How do I forward ports on my wireless router for my gaming console?

Answer:

Log in to the router's configuration interface. From the home page, go to the Internet Game/ Port Mapping section. Enter the port that needs to be forwarded and the IP address of the gaming console.

Issue:

How do I enable or modify security encryption settings on the wireless router?

Answer:

Log in to the configuration interface with your browser. Go to [Wireless Config] - [Security]. Buffalo recommends WPA for wireless encryption. The passphrase/key should be at least 8 characters in length.

Issue:

How do I change my wireless router's broadcasted network name (SSID)?

Answer:

Log in to the configuration interface. Go to the Wireless Config tab and then select the Basic tab if necessary. Find the settings area for SSID. Select the [Use] radio button and enter the name you wish to use for your network in the text field provided. Click [Apply] to save the settings. Once the wireless router has rebooted, select the new network name for all wireless devices and re-enter your encryption key if necessary.

Issue:

What can I do if my wireless connection drops randomly or seems slow?

Answer:

There are many environmental factors that may cause this. First, ensure the issue is not range related by moving the wireless router and the client device closer together. If the connection drops continue, then range is probably not the issue.
Other 2.4 GHz devices such as microwaves, other wireless networks, and 2.4 GHz wireless phones may impact performance. Try a different wireless channel for your wireless router. Log in to the wireless router with your browser. Click on the Wireless Config tab and then the Basic tab. Wireless channels from 1 - 11 may be selected. Try the Auto-Channel option if available. Otherwise, manually select an alternate channel and click [Apply].

Issue:

Though I am able to successfully make a connection with my wireless router, I am unable to access the Internet with my web browser.

Answer:

First, power off the cable or DSL modem, the wireless router, and your computer. Move the router's mode switch to the *on* position. Verify that the modem is connected to the wireless router with an Ethernet cable to the WAN port. Power on the modem and wait one minute. Power on the wireless router and wait another minute. Power on the computer. Open a browser on the computer and navigate to a familiar website to verify whether the Internet connection is functioning normally.
If after these steps, an Internet connection is still unavailable, power off the cable or DSL modem and computer again and directly connect your computer to the cable or DSL modem with a cable between the computer and the port on the modem. Power on the modem and wait one minute. Power on the computer and again check for an Internet connection.
If an Internet connection IS NOT available with a direct connection to the computer, please call the Internet Service Provider who installed the modem.
If an Internet connection IS available with a direct connection to the computer, please call our customer support.

Issue:

Where can I download the latest drivers, firmware, and instructions for my Buffalo wireless products?

Answer:

The latest drivers and firmware are available online at
www.buffalotech.com

Chapter 7 - Default Configuration Settings

Feature	Parameter	Default Setting
Internet (Router Mode only)	Method of Acquiring IP Address	Perform Easy Setup (Internet Connection Wizard)
	Default Gateway	none
	Address of DNS Name Server	none
	Internet MAC Address	Use Default MAC Address
	MTU Size of Internet Port	1500 Bytes
PPPoE (Router Mode only)	Default PPPoE Connection	No Active Session
	IP Unnumbered PPPoE Connection	No Active Session
	PPPoE Connection List	none
	Preferred Connections	none
DDNS (Router Mode only)	Dynamic DNS Service	Disabled
	Current Dynamic DNS Information	none
VPN Server (Router Mode only)	LAN Side IP Address	192.168.11.1 (255.255.255.0)
	DHCP Server Function	Enabled
	DHCP IP Address Pool	192.168.11.2 for up to 64 Address(es)
	PPTP Server Function	Disabled
	Authorization Type	MS-CHAPv2 (40/128-bit Encryption)
	Server IP Address	Auto
	Client IP Address	Auto
	DNS Server IP Address	LAN IP address of the AirStation
	WINS Server IP Address	none
	MTU/MRU value	1396
	PPTP User List	none

Feature	Parameter	Default Setting
LAN	LAN Side IP Address	Router Mode (Router Switch AUTO/ON): 192.168.11.1 (255.255.255.0) Bridge Mode (Router Switch OFF): 192.168.11.100 (255.255.255.0) Bridge Mode (Router Switch AUTO): Obtain automatically from DHCP Server
	DHCP Server Function (Router Mode only)	Enabled
	DHCP IP Address Pool (Router Mode only)	192.168.11.2 for up to 64 Addresses
	LAN Side IP Address (For IP Unnumbered) (Router Mode only)	none
	Lease Period (Router Mode only)	48 Hours
	Default Gateway (Router Mode only)	AirStation's IP Address
	DNS Servers (Router Mode only)	AirStation's IP Address
	WINS Server (Router Mode only)	Do Not Specify
	Domain Name (Router Mode only)	Assigned Domain Name
	Default Gateway (Bridge Mode only)	none
	DNS Server Address (Bridge Mode only)	none
DHCP Lease (Router Mode only)	Current DHCP Client Information	none
NAT (Router Mode only)	Address Translation	Enabled
	High Speed NAT	Enabled
	Log Output of Deleted Packets	Disabled
Route	Routing Information	none

Feature	Parameter	Default Setting
WPS	WPS	Enabled
	External Registrar	Enabled
	AirStation PIN	An 8-digit random value (Printed on the label of the AirStation)
	WPS Security Information	WPS status: configured SSID: BUFFALO-XXXXXX (the last 6 digits of the AirStation's MAC address) Security: WPA/WPA2 mixedmode - PSK TKIP/AES mixedmode or none Encryption key: Either a 13-digit random value or disabled. Printed on the label of the AirStation. Encryption is disabled by default settings on AirStation for Asia Pacific.
Basic	Wireless Radio	Enabled
	Wireless Channel	Auto Channel
	450 Mbps Mode	Bandwidth: 20 MHz Extension Channel: -
	Broadcast SSID	Allow
	Separate feature	not used
	SSID	Use AirStation's MAC address
	Wireless authentication	WPA/WPA2 mixedmode - PSK, or no authentication
	Wireless encryption	TKIP/AES mixedmode, or no encryption
	WPA-PSK (Pre-Shared Key)	A 13-digit random value or disabled (Printed on the label of the AirStation. Encryption is disabled in default settings on AirStation for Asia Pacific.)
	Rekey interval	60 minutes
Advanced	Multicast Rate	Auto
	DTIM Period	1
	Privacy Separator	Disabled

Feature	Parameter	Default Setting		
WMM	WMM-EDCA Parameters (Priority AC_BK (Low))		For AP	For STA
		CWmin	15	15
		CWmax	1023	1023
		AIFSN	7	7
		TXOP Limit	0	0
		Admission Control	-----	Disabled
	WMM-EDCA Parameters (Priority AC_BE (Normal))		For AP	For STA
		CWmin	15	15
		CWmax	63	1023
		AIFSN	3	3
		TXOP Limit	0	0
		Admission Control	-----	Disabled
	WMM-EDCA Parameters (Priority AC_VI (High))		For AP	For STA
		CWmin	7	7
		CWmax	15	15
		AIFSN	1	2
		TXOP Limit	94	94
		Admission Control	-----	Disabled
	WMM-EDCA Parameters (Priority AC_VO (Highest))		For AP	For STA
		CWmin	3	3
		CWmax	7	7
		AIFSN	1	2
		TXOP Limit	47	47
		Admission Control	-----	Disabled
MAC Filter	Enforce MAC Filtering	Disabled		
	Registration List	none		
Multicast Control	Snooping	Enabled		
	Multicast Aging Time	300 Sec.		
Guest Port	Guest port function	Disabled		
	Guest User Authorization function	Disabled		
	Guest Port LAN IP address	Auto		
	SSID	Use AirStation's MAC address		
	Wireless authentication	No authentication		
	Wireless encryption	No encryption		
	Show/Use guest user	none		

Feature	Parameter	Default Setting
AOSS	Encryption Type of Exclusive SSID for WEP	none
	Encryption level expansion function	Enabled
	Dedicated WEP SSID isolation	Disabled
	Allow WEP for Game Console Only	Disabled
	AOSS Button on the AirStation Unit	Enabled
Firewall (Router Mode only)	Log Output	Disabled
	Basic Rules	Prohibit NBT and Microsoft-DS Routing Disabled Reject IDENT Requests Enabled Block Ping from Internet Enabled
IP Filter (Router Mode only)	Log Output	Disabled
	IP Filter Information	none
VPN Pass Through (Router Mode only)	IPv6 Pass Through	Disabled
	PPPoE Pass Through	Disabled
	PPTP Pass Through	Enabled
Port Forwarding (Router Mode only)	Port Forwarding Registration Information	none
DMZ (Router Mode only)	IP Address of DMZ	none
UPnP (Router Mode only)	UPnP	Enabled
QoS (Router Mode only)	QoS for transmission to the Internet	Disabled
Movie Engine	Movie Engine switch status	off
	IPv6 Pass Through	Used
	Multicast Rate	11 Mbps
	Multicast Control	Snooping Function Use Aging Time Seconds 300 Seconds
	TCP Rwin Size Limit	Size Limit No limit Maximum Rwin Size 65536 bytes
	Wireless Priority Control Rules	None

Feature	Parameter	Default Setting
Disk Management	Automatic USB Disk Assignment	Enabled
	FAT format file name character code	North America (CP437)
	HDD power-saving function	Disabled HDD stop time 10 Minutes
Shared Folder	Access Limits	No Limits (Read/Write)
	Web Access	Access Limits
User Management	Current Users	guest
Shared Service	Shared Folder	Enabled
	AirStation Name	AP + AirStation's MAC Address
	AirStation Description	None
	Workgroup Name	WORKGROUP
	Windows Client Language	North America (CP437)
	Shared Service	None
Web Access	Web Access	Disabled
	Web Access Display Language	English
	HTTPS/SSL Encryption	Disabled
	Web Access External Port	Auto (Port Number:9000)
	DNS Service Host Name	Use BuffaloNAS.com registration function
	Web Access status	None
Media Server	Media Server	Disabled
	Status	None
BitTorrent	BitTorrent Function	Disabled
	External Port Number	Auto (Port Number: 9002)
	Bandwidth Restriction	Enabled Maximum Download Speed 1000 KB/s Maximum Upload Speed 200 KB/s
	BitTorrent Status	None
Name	AirStation Name	AP + AirStation's MAC Address
	List Network Services	Enabled

Feature	Parameter	Default Setting
Password	Administrator Name	root (fixed)
	Administrator Password	none
Time/Date	Local Date	2011 Year 1 Month 1 Day
	Local Time	0 Hour 0 Minute 0 Seconds
	Time Zone	(GMT+00:00) Greenwich Mean Time,London
	DST (Daylight Saving Time)	EU type 1 For GMT+00:00(From Last Sunday in Mar to last Sunday in Oct)
NTP	NTP Functionality	Enabled
	NTP Server	time.nist.gov
	Update Interval	24 hours
ECO	Schedule feature	Disabled
	Register schedule	Operational Mode: Normal Start time: 0:00 End time: 0:30 The day of week: none
	User Define Mode	LED: Off Wired LAN: ECO (Slow operation) Wireless LAN: Off
Network-USB	Network-USB	Enabled
	Use multifunction Printer	Enabled
Access	Log Output	Disable
	Limitation Item	Prohibit configuration from wireless LAN Disabled Prohibit configuration from wired LAN Disabled Permit configuration from wired Internet Disabled
Log	Log Transfer	Disabled
	Syslog Server	none
	Logs	Router Mode: Address Translation, IP Filter, Firewall, PPP Client, Dynamic DNS, DHCP Client, DHCP Server, AOSS, Wireless Client, Authentication, Setting Changes, System Boot, NTP Client, and Wired Link Bridge Mode: IP Filter, DHCP Client, AOSS, Wireless Client, Authentication, Setting Changes, System Boot, NTP Client, and Wired Link

Chapter 8 - Network-USB Navigator

Network-USB Navigator is compatible only with printers and multifunction printers (all-in-one devices with a printer, scanner, and memory card reader). It cannot be used with any other type of USB devices.

Initial Setup for Windows Users

1 Insert the AirNavigator CD into your computer.

The setup wizard will launch automatically. If not, open the CD and click on "ASSetWiz.exe" in the "win" folder.

2

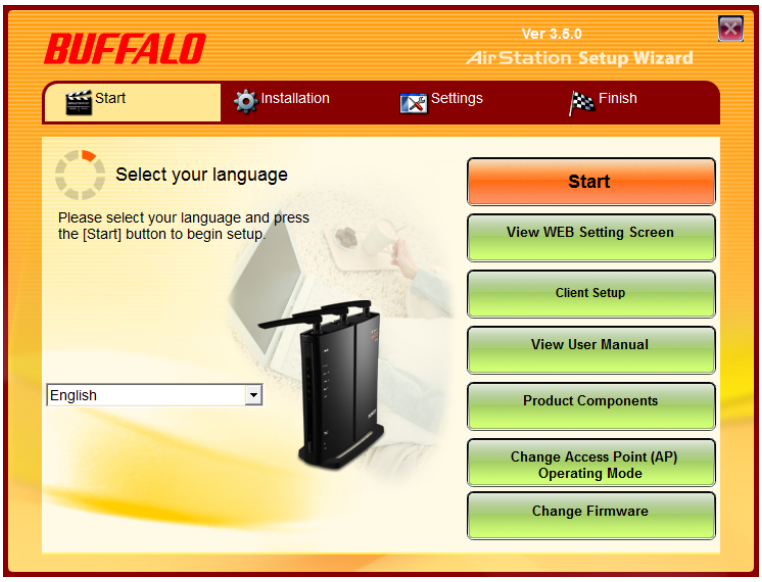

Click [Client setup].

3

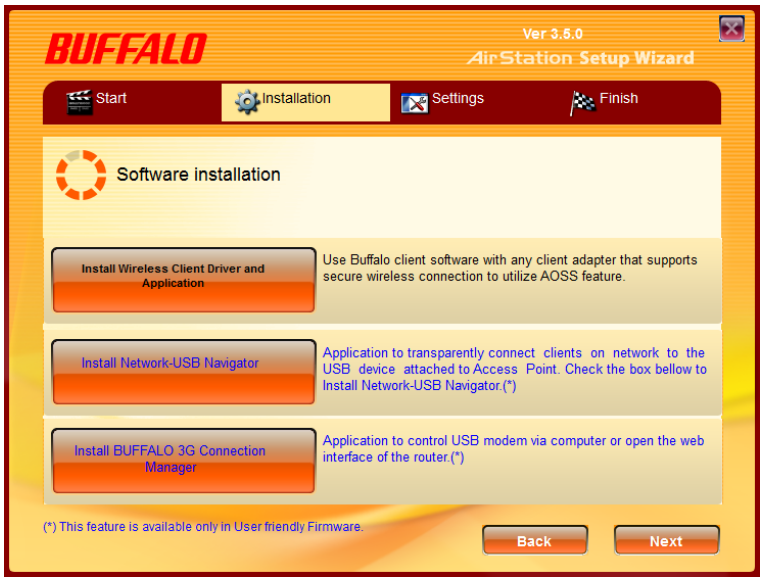
BUFFALO
Ver 3.5.0
AirStation Setup Wizard
Start
Installation
Settings
Finish
Software installation
Install Wireless Client Driver and Application
Use Buffalo client software with any client adapter that supports secure wireless connection to utilize AOSS feature.
Install Network-USB Navigator
Application to transparently connect clients on network to the USB device attached to Access Point. Check the box bellow to Install Network-USB Navigator.(*)
Install BUFFALO 3G Connection Manager
Application to control USB modem via computer or open the web interface of the router.(*)
(*) This feature is available only in User friendly Firmware.
Back
Next

Click [Install Network-USB Navigator].

4

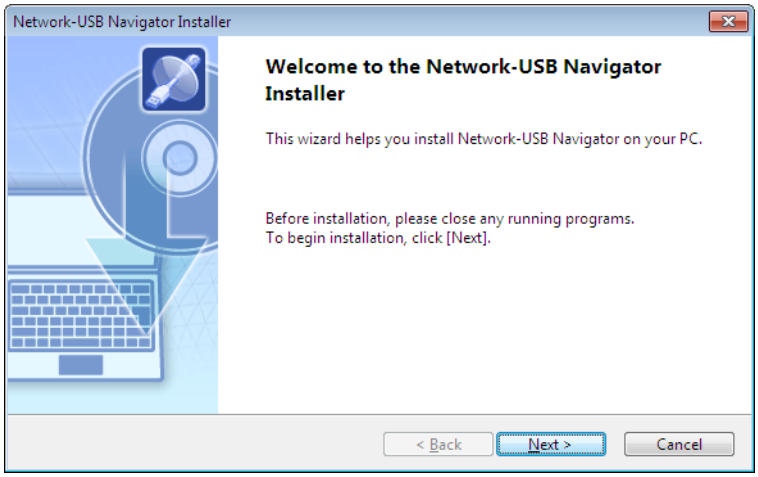
Network-USB Navigator Installer
Welcome to the Network-USB Navigator Installer
This wizard helps you install Network-USB Navigator on your PC.
Before installation, please close any running programs.
To begin installation, click [Next].
< Back
Next >
Cancel

Click [Next].

5

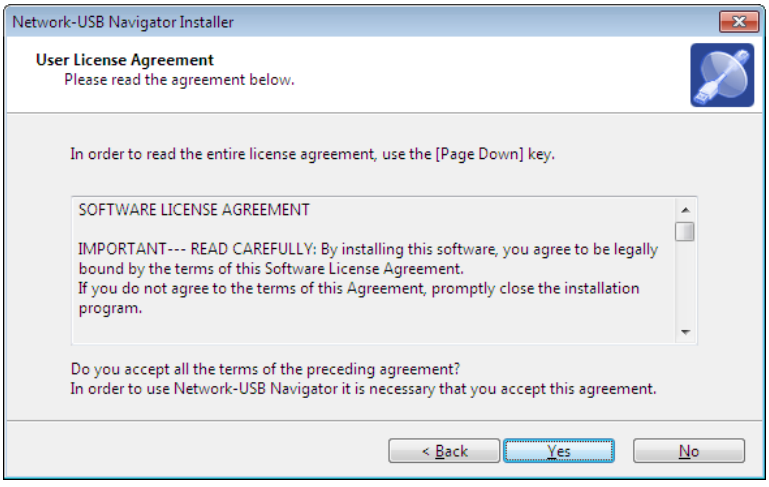
Network-USB Navigator Installer
User License Agreement
Please read the agreement below.
In order to read the entire license agreement, use the [Page Down] key.
SOFTWARE LICENSE AGREEMENT
IMPORTANT--- READ CAREFULLY: By installing this software, you agree to be legally bound by the terms of this Software License Agreement.
If you do not agree to the terms of this Agreement, promptly close the installation program.
Do you accept all the terms of the preceding agreement?
In order to use Network-USB Navigator it is necessary that you accept this agreement.
< Back
Yes
No

Click [Yes].

6

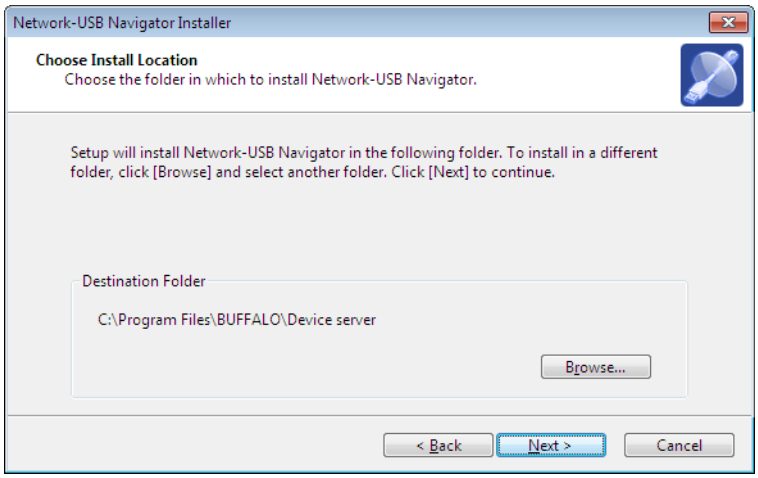
Network-USB Navigator Installer
Choose Install Location
Choose the folder in which to install Network-USB Navigator.
Setup will install Network-USB Navigator in the following folder. To install in a different folder, click [Browse] and select another folder. Click [Next] to continue.
Destination Folder
C:\Program Files\BUFFALO\Device server
Browse...
< Back
Next >
Cancel

Click [Next].

7

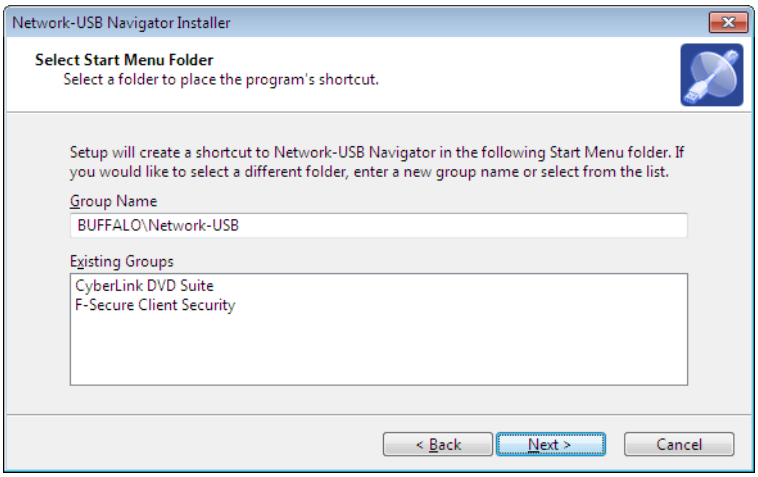
Network-USB Navigator Installer
Select Start Menu Folder
Select a folder to place the program's shortcut.
Setup will create a shortcut to Network-USB Navigator in the following Start Menu folder. If you would like to select a different folder, enter a new group name or select from the list.
Group Name
BUFFALO\Network-USB
Existing Groups
CyberLink DVD Suite
F-Secure Client Security
< Back
Next >
Cancel

Click [Next].

8

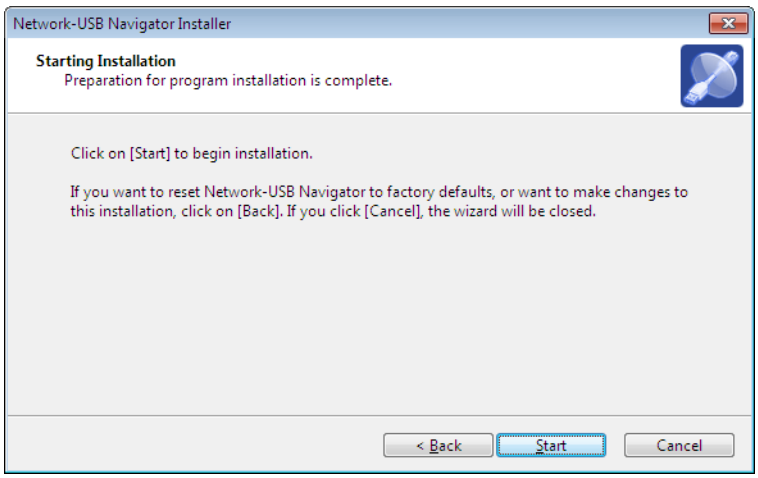
Network-USB Navigator Installer
Starting Installation
Preparation for program installation is complete.
Click on [Start] to begin installation.
If you want to reset Network-USB Navigator to factory defaults, or want to make changes to this installation, click on [Back]. If you click [Cancel], the wizard will be closed.
< Back
Start
Cancel

Click [Start].

- Installation on Windows XP (SP2 or later)

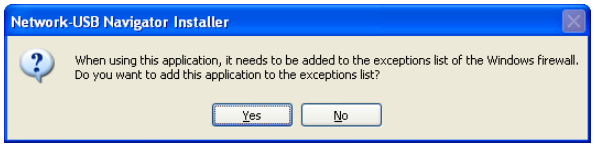
Network-USB Navigator Installer
When using this application, it needs to be added to the exceptions list of the Windows firewall.
Do you want to add this application to the exceptions list?
Yes
No

Click [Yes] when this screen is shown.

- Installation on Windows 7/Vista

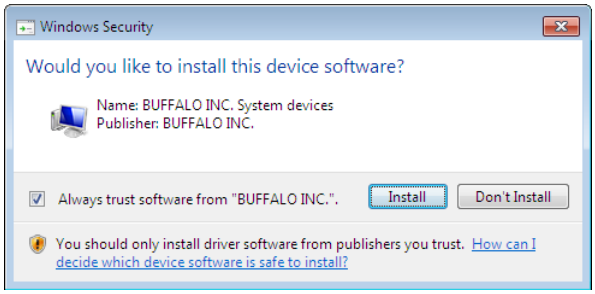
Windows Security
Would you like to install this device software?
Name: BUFFALO INC. System devices
Publisher: BUFFALO INC.
Always trust software from "BUFFALO INC.".
Install
Don't Install
You should only install driver software from publishers you trust. How can I decide which device software is safe to install?

Click [Install] when this screen is shown.

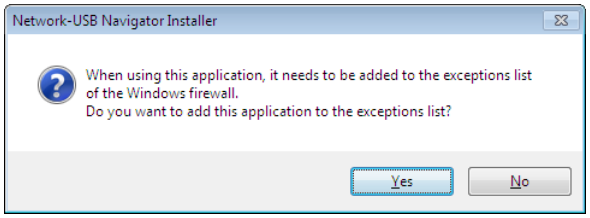
Network-USB Navigator Installer
When using this application, it needs to be added to the exceptions list of the Windows firewall.
Do you want to add this application to the exceptions list?
Yes
No

Click [Yes] when this screen is shown.

9

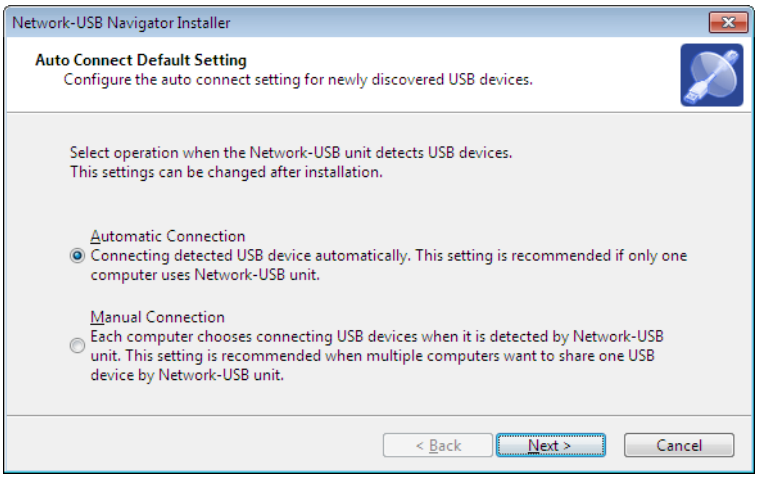
Network-USB Navigator Installer
Auto Connect Default Setting
Configure the auto connect setting for newly discovered USB devices.
Select operation when the Network-USB unit detects USB devices.
This settings can be changed after installation.
Automatic Connection
Connecting detected USB device automatically. This setting is recommended if only one computer uses Network-USB unit.
Manual Connection
Each computer chooses connecting USB devices when it is detected by Network-USB unit. This setting is recommended when multiple computers want to share one USB device by Network-USB unit.
< Back
Next >
Cancel

1 You can select the behavior of this product when a USB device is detected. Select the connection behavior suited to your usage environment.

2 Click [Next].

10 Click [Finish] when the "Network-USB Navigator Install is Complete" screen is shown.

Network-USB Navigator installation is complete.

Initial Setup for Mac Users

1 Insert the Air Navigator CD.

2 Double-click the CD-ROM on the desktop, then double-click the Mac folder.

3 Double-Click [USB-Navigator], then [Cosetup.app].

4

Click [Continue].

5

Install Device Server
Software License Agreement
Introduction
License
Destination Select
Installation Type
Installation
Summary
English
SOFTWARE LICENSE AGREEMENT
IMPORTANT--- READ CAREFULLY: By installing this software, you agree to be legally bound by the terms of this Software License Agreement.
If you do not agree to the terms of this Agreement, promptly close the installation program.
SOFTWARE LICENSE
1. GRANT OF LICENSE
1.1 The software contained in the packet(s) (The Software) is hereby licensed to you nonexclusively pursuant to the terms and conditions of this Agreement.
2. INTELLECTUAL PROPERTY RIGHT
2.1 The Software is protected by copyright and other intellectual property laws and international treaty provisions.
2.2 The Software is licensed, not sold, and all intellectual property rights in the Software belong to the original licensor(s) of the Software.
Print...
Save...
Go Back
Continue

Click [Continue].

6

To continue installing the software you must agree to the terms of the software license agreement.
Click Agree to continue or click Disagree to cancel the installation and quit the Installer.
Read License
Disagree
Agree

Click [Agree].

7

Click [Continue].

8

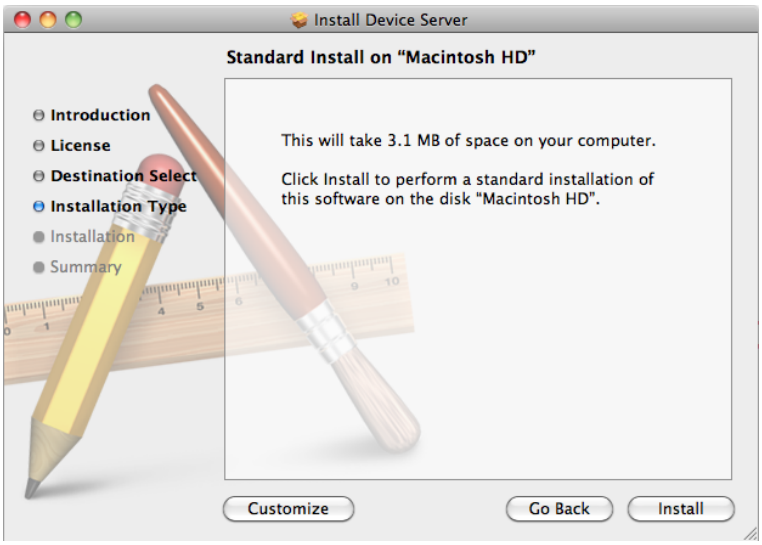

Click [Install].

9

Input your name and password.

Click [OK].

10

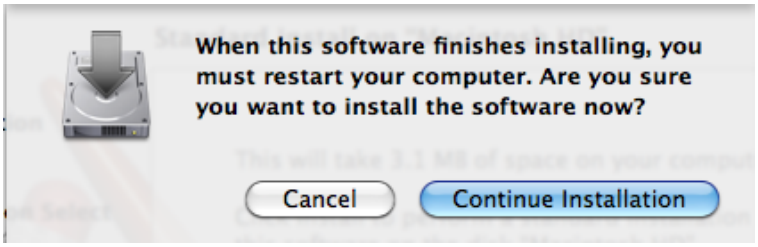
When this software finishes installing, you must restart your computer. Are you sure you want to install the software now?
Cancel
Continue Installation

Click [Continue Installation].

11

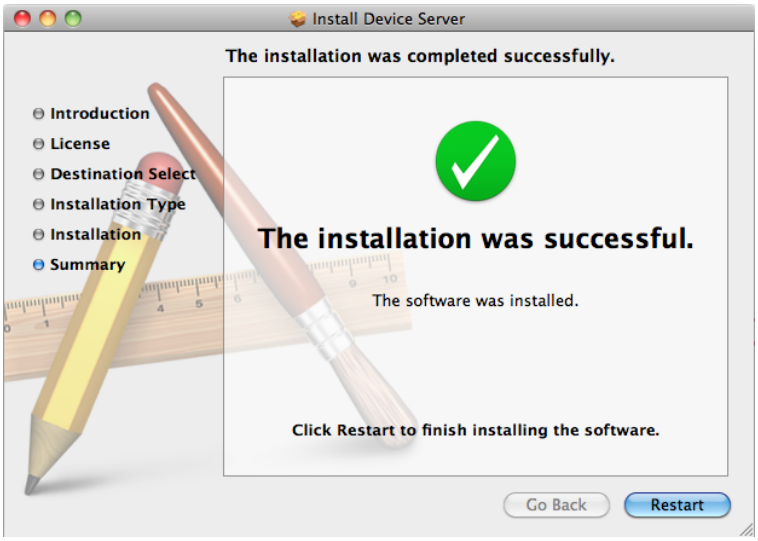

Click [Restart].

12

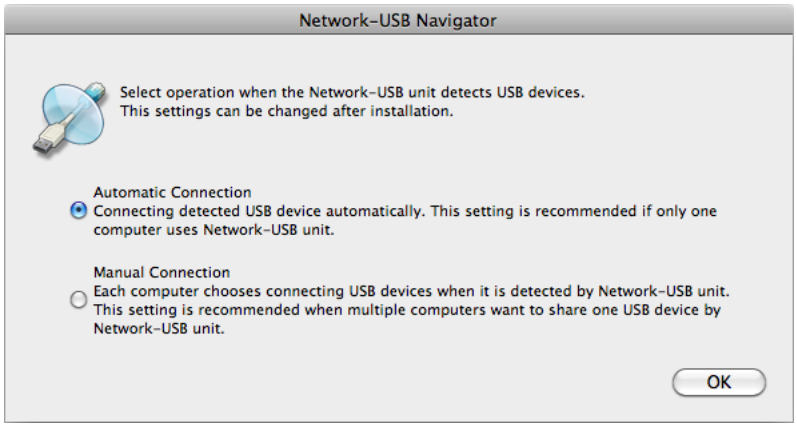
Network-USB Navigator
Select operation when the Network-USB unit detects USB devices.
This settings can be changed after installation.
Automatic Connection
Connecting detected USB device automatically. This setting is recommended if only one computer uses Network-USB unit.
Manual Connection
Each computer chooses connecting USB devices when it is detected by Network-USB unit. This setting is recommended when multiple computers want to share one USB device by Network-USB unit.
OK

1 During the first program launch only, the screen at left will appear before the main program screen is displayed. From here, you can select the behavior of this product when a USB device is detected. Select the connection behavior suited to your usage environment.

2 Click [OK].

Network-USB Navigator installation is complete.

Opening the Network-USB User Manual

1 Launch Network-USB Navigator.

There are two ways to launch the program.

Windows Users

a) Click the task tray icon .

b) From the Start menu, click [(All) Programs]-[BUFFALO]-[Network-USB Navigator]-[Network-USB Navigator].

Macintosh Users

a) Click the Dock icon .

b) Click [Macintosh HD]-[Applications]-[BUFFALO]-[Device Server]-[Network-USB Navigator].

2

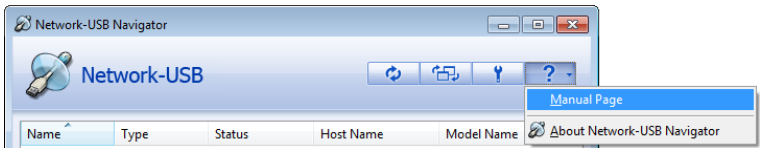

Click , then click [Manual Page].

3 Network-USB User Manual will open.

How to use Network-USB

To configure Network-USB, refer to the "Network-USB User Manual".

Chapter 9 - Checking Wireless Signal Quality

For users of Windows 7, Vista, or Mac OS X (10.4 and later), software supplied with the AirStation can be used to check the quality and strength of the wireless signal.

Windows 7/Vista

Note: · If Client Manager V is not already installed, install it from the AirNavigator CD. Click [Install Wireless Client Driver and Application] > [Options] > [Advanced Installation], and install Client Manager V.

· Client Manager V does not support Windows XP.

1 Click [Start] > [All Programs] > [BUFFALO] > [AirStation Utility] > [Client Manager V].

2

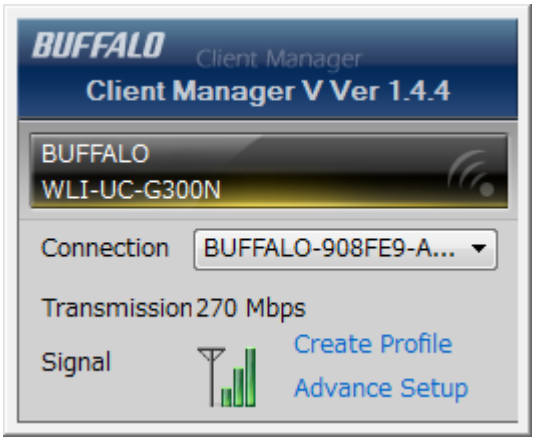

Click [Advanced Setup].

3

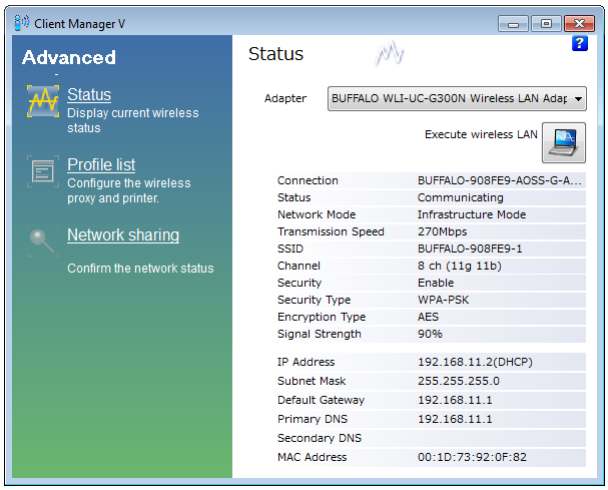

When the Client Manager V status screen is displayed, click .

4

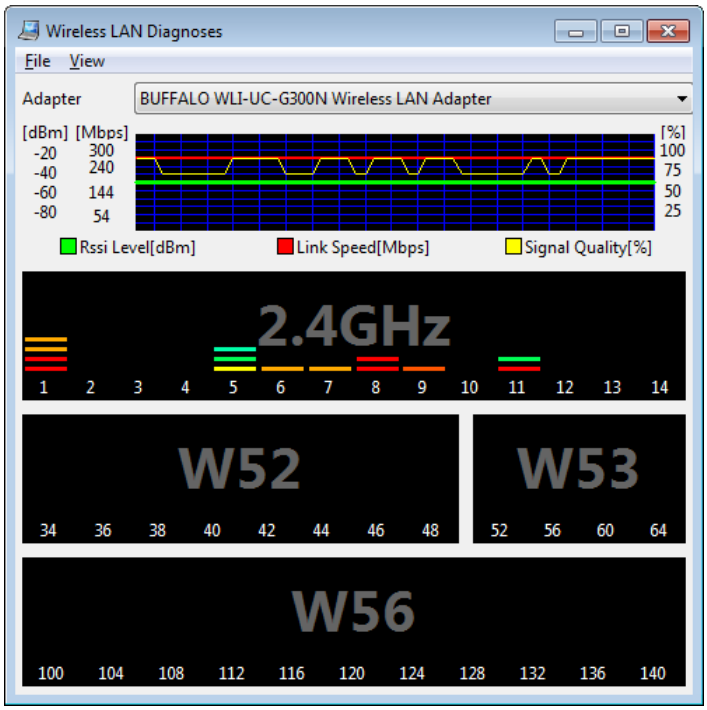

Parameter	Meaning
Connection status	Signal strength (dBm), link speed (Mbps), and signal quality (%) are displayed in one-minute intervals on a real-time graph.
Usage status by channel	The 11b/11g display shows usage in the 2.4 GHz band channels 1 to 11.

Colors are used to indicate the signal strength of the access point. Colors closer to red indicate an access point with a stronger signal strength, and colors closer to blue indicate an access point with a weaker signal strength.

Macintosh

1 Load the AirNavigator CD into your Macintosh.

2 Double-click the Mac folder in the AirNavigator CD.

3 Double-click [WLAN Monitor].

4 The software license screen is displayed when starting for the first time only. Click [Agree] to proceed.

5

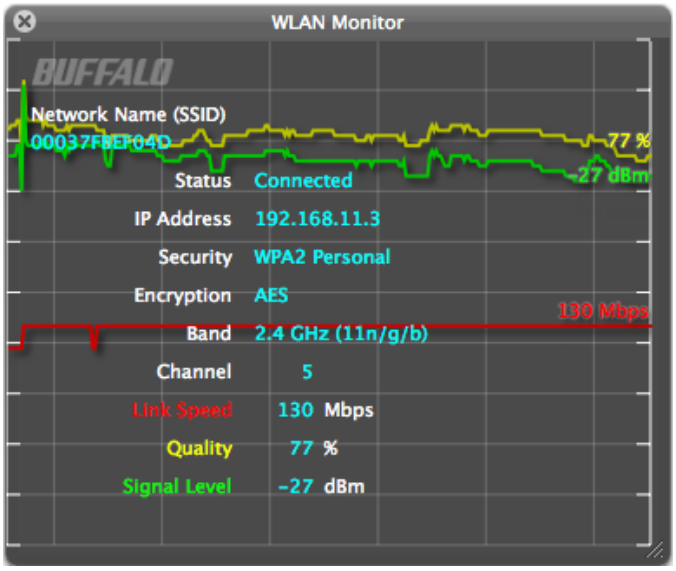

Parameter	Meaning
Network name (SSID)	This displays the SSID of the AirStation that is currently connected.
Status	This indicates the current connection status.
IP Address	This indicates the IP address of the current wireless network port (AirPort).
Security	This indicates the authentication method for the current connection target.
Encryption	This displays the encryption type for the current connection target.
Band	This displays the wireless band for the current connection target.
Channel	This displays the wireless channel for the current connection target.
Link Speed (Mbps)	This displays the current link speed.
Quality (%)	This displays the current signal quality.
Signal Level (dBm)	This indicates the strength of the current signal.

Chapter 10 - TCP/IP Settings

Windows 7

To configure TCP/IP in Windows 7, follow the procedure below.

1 Click [Start] > [Control Panel] > [Network and Internet].

2 Click [Network and Sharing Center].

3 Click [Change Adapter Settings] on the left side menu.

4 Right-click on [Local Area Connection], then click [Properties].

5 If the User Account Control screen opens, click [Yes] or [Continue].

6 Select [Internet Protocol Version 4 (TCP/IPv4)] then click [Properties].

7 To have DHCP set your IP address settings automatically, check [Obtain an IP address automatically] and [Obtain DNS server address automatically].

To set your IP address settings manually, enter values for each setting. Examples:

If the router's IP address is 192.168.11.1,

IP address	192.168.11.80
Subnet mask	255.255.255.0
Default gateway	192.168.11.1
Preferred DNS server	192.168.11.1
Alternate DNS server	blank

8 Click [OK].

Windows Vista

To configure TCP/IP in Windows Vista, follow the procedure below.

1 Click [Start] > [Settings] > [Control Panel].

2 Click [Network and Sharing Center].

3 Click [Manage network connections] on the left side menu.

4 Right-click on [Local Area Connection], then click [Properties].

5 If the User Account Control screen opens, click [Yes] or [Continue].

6 Select [Internet Protocol Version 4 (TCP/IPv4)], then click [Properties].

7 To have DHCP set your IP address settings automatically, check [Obtain an IP address automatically] and [Obtain DNS server address automatically].

To set your IP address settings manually, enter values for each settings. Example:

If the router's IP address is 192.168.11.1,

IP address	192.168.11.80
Subnet mask	255.255.255.0
Default gateway	192.168.11.1
Preferred DNS server	192.168.11.1
Alternate DNS server	blank

8 Click [Close].

Windows XP

To configure TCP/IP in Windows XP, follow the procedure below.

1 Click [Start] > [Settings] > [Control Panel].

2 Double-click [Network].

3 Right click on [Local Area Connection], then click [Properties].

4 Select [Internet Protocol (TCP/IP)], then click [Properties].

5 To have DHCP set your IP address settings automatically, check [Obtain an IP address automatically] and [Obtain DNS server address automatically].

To set your IP address settings manually, enter values for each setting. Examples:

If the router's IP address is 192.168.11.1,

IP address	192.168.11.80
Subnet mask	255.255.255.0
Default gateway	192.168.11.1
Preferred DNS server	192.168.11.1
Alternate DNS server	blank

6 Click [Close].

Mac OS X

To configure TCP/IP in Mac OS X, follow the procedure below.

1 Click [Apple menu] > [System Preferences…].

2 Click [Network].

3 Click [Ethernet].

4 To have DHCP set your IP address settings automatically, select [Using DHCP] in the Configure IPv4 field.

To set your IP address settings manually, select [Manually] in the Configure IPv4 field and enter values for each setting. Examples:

If the router's IP address is 192.168.11.1,

IP Address	192.168.11.80
Subnet Mask	255.255.255.0
Router	192.168.11.1
DNS Server	192.168.11.1
Search Domains	blank

5 Click [Apply].

Chapter 11 - Restoring the Default Configuration

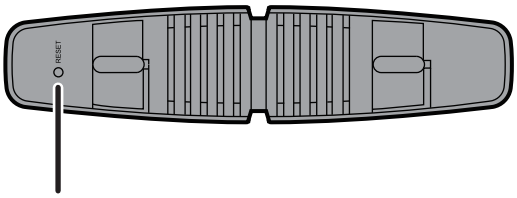

With the AirStation powered on, hold down this button for 3 seconds to return it to factory default settings.

Chapter 12 - Shared Folders and the USB Port

There are several restrictions on using the AirStation's USB port:

- When using two-byte characters (such as Japanese), keep folder and file names within 80 characters. You may not be able to copy a folder or a file whose name length is more than 80 characters.
- You cannot set attributes (hidden or read-only) for folders or files on the AirStation.
- When using access restrictions, you can register up to 16 users for the AirStation.
- Please note that you are not allowed to use any of the following words as a user or group name: adm, administrator, all, bin, daemon, disk, ftp, guest, halt, hdusers, kmen, lp, mail, man, news, nobody, nogroup, none, operator, root, shadow, shutdown, sshd, sync, sys, ttyusers, utmp, uucp, www.
- Please note that you are not allowed to use any of the following words as a shared folder name: global, homes, printers, bittorrent, disk1_pt1, disk1_pt2, disk1_pt3, disk1_pt4, disk2_pt1, disk2_pt2, disk2_pt3, disk2_pt4, disk3_pt1, disk3_pt2, disk3_pt3, disk3_pt4, disk4_pt1, disk4_pt2, disk4_pt3, disk4_pt4.
- If shared folder names, work group names, or file names contain any of the following characters, you may not access data or manipulate files on the AirStation properly. In such a case, use a different character.
- If a file created on a Macintosh contains any of the following characters, it will not be displayed correctly under Windows OS. Also, you cannot copy or properly display a file when connecting via SMB from Mac OS X if it contains any of these characters:
  ? [ ] / \ = + < > ; : ", | *
- Cancelling or aborting a file copy may leave the file incomplete, and you may no longer be able to delete the incomplete file. This can also happen during a power outage or if the LAN cable is suddenly disconnected. If it happens, restart the AirStation, delete the file, and try copying the file again.
- Use the same username and password for the AirStation as the user's Windows login. If they are different, the user may not be able to access shared folders with access restrictions on the AirStation.
- Date and time stamps stored on the USB hard drive may be updated by the OS accessing the AirStation. File creation or access dates may not be maintained.

- If you view the size of a hard drives on the browser, it shows a bigger value than when you see it in Windows' drive properties. This is because the browser shows the size of the drive in gigabytes but Windows shows it in gibibytes.
- If you have logged in using a "guest" account from Windows 7, Vista, XP or 2000, access restrictions may not work properly. A (different) guest account already exists on the AirStation.
- If you access a shared folder from a Macintosh computer, additional Mac OS X information files may be automatically generated. Do not delete these files from a Windows computer. Otherwise, you may no longer be able to access folders from a Macintosh.
- Device types that can be connected to the AirStation's USB connector are USB hard drives, USB memory sticks, or USB card readers. Card readers with 5 or more slots are not supported. USB devices such as a digital cameras, CD/DVD drives, USB hubs, mice, or keyboards are not supported.
- Encrypted USB hard drives are not supported.
- Only one single drive may be connected to the AirStation's USB port at a time. Drives manufactured by other companies besides Buffalo Technology are not supported.
- If your hard drive has an auto power mode switch, move the switch to [manual] or [on]. Leaving the switch set to [auto] may result in unpredictable behavior.
- Up to 4 partitions can be recognized on a USB hard drive.
- Available file systems for USB hard drives are FAT12, FAT16, FAT32, and XFS.